



ASSEMBLE KIT



주의 사항



제품의 조립, 유지·보수, 안전한 작동은 사용자에게 책임이 있습니다.

반드시 해당 제품을 작동하는데 필요한 모든 안전사항을 준수하시기 바랍니다.

이 제품은 어린이용 장난감이 아닙니다. 사용 가능 연령을 꼭 확인하시기 바랍니다.

이 제품은 만 14세 이상의 사용자에게 적합한 제품입니다. 어린아이의 손에 닿지 않도록 주의하시기 바랍니다.

또한, 만 18세 미만의 사용자는 제품의 주의사항을 충분히 숙지한 성인의 지도하에 제품을 조립·작동하여 주시기 바랍니다.

1. 제품을 조립하기 전에 설명서 전체를 읽고 숙지하도록 하십시오.

- 제품을 조립하기 전에 반드시 매뉴얼 전체를 숙지한 후 제품을 조립하도록 하십시오.
- 나이프나 가위, 리mer 등 날카로운 도구를 사용할 경우 부상의 위험이 있습니다. 도구의 사용에 주의하시기 바랍니다.
- 본 제품은 작고 날카로운 부품이 많습니다. 사용 부주의로 인한 상해나, 부품을 삼켜 질식하는 등, 사고의 위험이 있으므로 조립시 어린아이의 손이 닿지 않도록 주의하십시오.
- 본 제품은 전자장비 및 배터리가 포함되어 있지 않은 제품입니다. 전자장비 및 배터리 등 구동에 필요한 장비는 별도로 구매하여 주시기 바랍니다.
- 전자장비 및 배터리의 경우 해당 제품의 제조사에서 지시하는 사용 방법 및 주의 사항에 따라 주시기 바랍니다.
- 본 제품에 들어있지 않은 별도의 제품이나 도구(페인트 또는 펌프체, 공구등)를 사용 할 경우 해당 제품의 사용 방법 및 주의 사항에 따라 주시기 바랍니다.
- 별도로 구매한 전자장비 및 배터리, 페인트, 펌프체 등의 오작동 및 사용 미숙으로 인한 문제 발생시 본 회사에서 책임지지 않습니다.

2. 작동 전 제품의 상태를 점검하여 주십시오.

- 제품 조립 후 물트와 너트가 잘 조여있는지 확인해주십시오.
- 제품의 오작동을 피하기 위해 송신기의 수신기에는 새 배터리 또는 완전하게 충전된 배터리를 사용해주십시오.
소모된 배터리는 솔, 수신 기능을 저하시키고, 심할 경우 조종물능이 되어 심각한 사고를 일으킬 수 있습니다.
- 전선이 손상된 배터리를 사용하지 마십시오.
배터리의 전선이 미모되었거나, 적힌 부분이 있을 경우, 회로에 핵선을 일으킬 수 있습니다. 심각할 경우 화재를 유발할 수 있습니다.
- 규격에 맞는 알카라인 건전지 혹은 충전지를 사용하십시오.
부적합한 건전지 또는 충전지의 사용은 차의 전자장비에 손상을 줄 수 있습니다.
- 모든 모터의 작동 방향이 조작한 방향으로 작동하는지 확인해 주십시오. 만약 다르다면 방향부터 조정해주세요.
- 본 제품에는 회전하는 부분과 날카로운 금속 부품이 많습니다. 상해를 입지 않도록 주의하십시오.
- 사용하기에 앞서 항상 작동 범위 체크를 수행하십시오. 무선 조종 시스템의 문제 또는 제품에 적합하지 않은 설정은 작동 불능을 일으킬 수 있습니다.

간단한 범위 테스트 방법

- 친구가 제품을 잡고 있게 하거나, 끌어 거치대나 다른 물체와 닿지 않게 고정하거나 놓아두십시오.
- 멀리 떨어지면서 송신기의 조작대로 서보가 움직이는지 체크하십시오.
- 네 정상적인 작동을 발견하면 범위 체크를 마무리 하십시오.

3. 제품을 작동시키기 위해 적합한 장소를 선정하십시오.

- 저녁이나 시야가 보이지 않는 상황에서 작동시키지 마십시오.
- 다음과 같은 장소에서 작동하지 마십시오.
 - 근처의 다른 지역에서 무선 조종 활동이 발생하고 있는 곳.
 - 일반 도로나 고속 도로
 - 고압선, 방송 통신용 안테나
 - 사람이나 동물 근처
 - 집안이나 좁고 막한 장소
 - 병원이나 주거 지역, 공원 등 제품 소음이 다른 이에게 방해를 줄 수 있는 지역
- 물이 흐르거나 고인 장소에서 주행 시 전자 부품이 물에 젖지 않도록 주의하십시오.
- 제품을 레이스 트랙이나 학 트이고 안전한 공간에서 작동하시는 것을 권장합니다. 적합하지 않은 장소에서 작동 시 심각한 교통사고, 인적 상해, 대물 손실을 일으킬 수 있습니다.

4. 순서에 맞게 제품을 작동하십시오.

- 순서에 맞게 송신기의 전원을 켜고 끄도록 하십시오.
 - 시제시엔 송신기의 전원을 먼저 켜고 배터리를 연결 한 후 변속기의 전원을 켜도록 하십시오.
 - 증로시엔 변속기의 전원을 끄고 배터리를 제거 한 후 송신기의 전원을 끄도록 하십시오.
- 전선을 거꾸로 연결하거나, 배터리를 분해하지 마십시오. 제품 손상이나 누전을 일으킬 수 있습니다.
- 제품의 오작동을 피하기 위해 주행 전에 스티어링과 스로틀이 정상 작동하는지 확인해주세요.
- 작동 후 모터, 변속기, 배터리가 뜨거울 수가 있습니다. 화상에 주의하십시오.

5. 제품의 사용 후 깨끗하게 정비하고 안전한 장소에 보관하십시오.

- 사용 후 모든 블트, 너트 등은 풀림이 없는 정상적인 상태인지 체크해주세요.
- 제품을 사용하지 않을 때는 배터리를 제거 해주세요. 과 방전, 누전 등으로 배터리와 변속기에 손상을 줄 수 있습니다.
- 제품에 과도한 먼지나 이물질이 없도록 깨끗하게 유지해주세요. 이를 통해 차체 수명을 연장시킬 수 있습니다.
- 모든 공구를 사용할 때 항상 주의하십시오. 상해를 막기 위해 세심한 주의가 요구됩니다.
- 제품을 뜨거운 곳이나 습한 곳에 보관하지 마십시오. 직사광선도 피해주세요.
- 제품의 손상을 막기 위해서 (주)지메이드코리아에서 출시하는 충선파트너 부품 외의 것으로 개조하지 마십시오.

CAUTIONS

- A** In order to avoid personal injury or property damage, you have to act in a responsible manner and follow these directions.
RC models can operate at over 40Km/h but can not stop immediately

Safety Precautions

- Check the surrounding area before you operate RC model.
- Choose a good place to operate your RC model
- Do not operate your RC model on the street or highway. It can cause a serious damage or a serious accident.
- Do not operate your RC model in confined or crowded areas, in order to avoid accident.
- Never operate your RC model near people or animals, and never use people or animals as an obstacle.
- A collision between your RC model and stationary objects can cause damage to either
- Do not operate your RC model in public places like hospital and residential areas. It can cause great noise
- Never operate your RC model indoor. There is a higher possibility of fire or damage

Safety Precautions (Before assembling)

- Before you start assembling this model, read the instructions carefully and make sure you understand them thoroughly.
- If a child assembles this model, an adult must also read the instructions carefully and understand them thoroughly.
- Always be careful when using tools like knives. Extra care should be taken to prevent injuries.
- If you use paint or cement (not included in the RC model), read the instructions supplied with them.
- Keep the parts out of reach of children, small parts can cause choking and vinyl bags can suffocate.

Safety Precautions (Before you operate RC model, check the following.)

- Check to ensure nuts bolts are tightened appropriately.
- Check that no one else is using your radio frequency.
- Use new batteries to avoid losing control of the transmitter and receiver.
- You will need a 2 channel radio system which includes a servo, a receiver, an ON/OFF switch, and an electronic speed control.
- Be sure to use a radio frequency for ground model – Do not use airplane frequencies.
- Always check the brakes and throttle before you operate your RC model, in order to avoid losing control of the model.
- To prevent unexpected movements of your RC model, do not connect the batteries to receiver before turning on the transmitter.
- Always turn on the transmitter first, and then connect the batteries to the receiver.

 1. Switch on the transmitter.
 2. Check that the speed control, the transmitter control, and trims are set to the neutral position.
 3. Connect the RC model to the receiver's batteries.
 4. Switch on the model and the receiver.

- When you using rechargeable batteries, make sure you read and follow the instructions carefully.
- Inappropriate handling or usage of rechargeable batteries can cause serious injuries or accidents.


Cautions While Operating

- When the RC model is operating, do not touch the moving parts like the drive shaft and wheels.
- The moving parts can cause serious injuries.
- Always turn the model or receiver off and disconnect the batteries before turning off the transmitter, in order to avoid unexpected movements of your RC model.


 1. Turn off the model or receiver.
 2. Disconnect the batteries.
 3. Turn off the transmitter.

- Do not touch the vehicle's speed control resistor while operating of the RC model. The resistor may be very hot, especially after running at lower speeds.
- To prevent damage to the RC model, remove the batteries from the model and transmitter when you don't intend to run the RC model for some time.
- After operating your RC model, batteries become hot, so please be careful when handling.
- In order to prolong the life of your RC model, please keep it free from dirt and grease.
- Before you start assembling this model, read the instruction carefully and make sure you understand them fully.
- If a child assembles this model, an adult must also read the instructions carefully and understand them thoroughly.


EQUIPMENT NEEDED

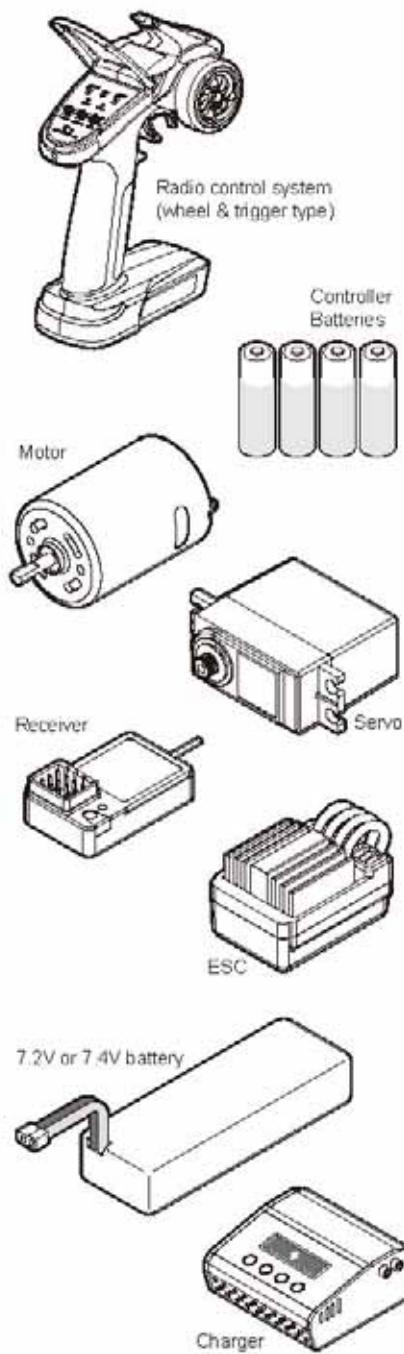







TOOLS NEEDED

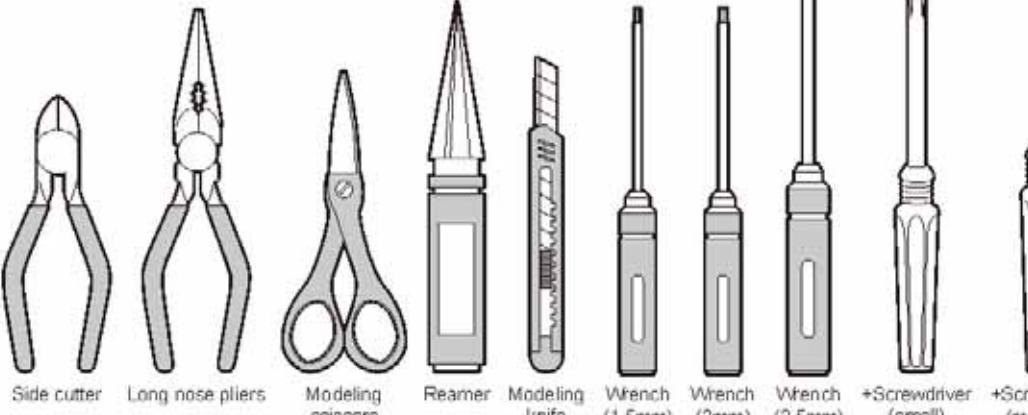


TOOLS INCLUDED

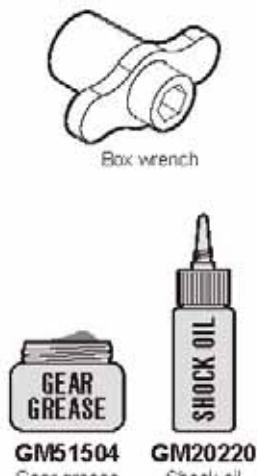


PARTS REFERENCE

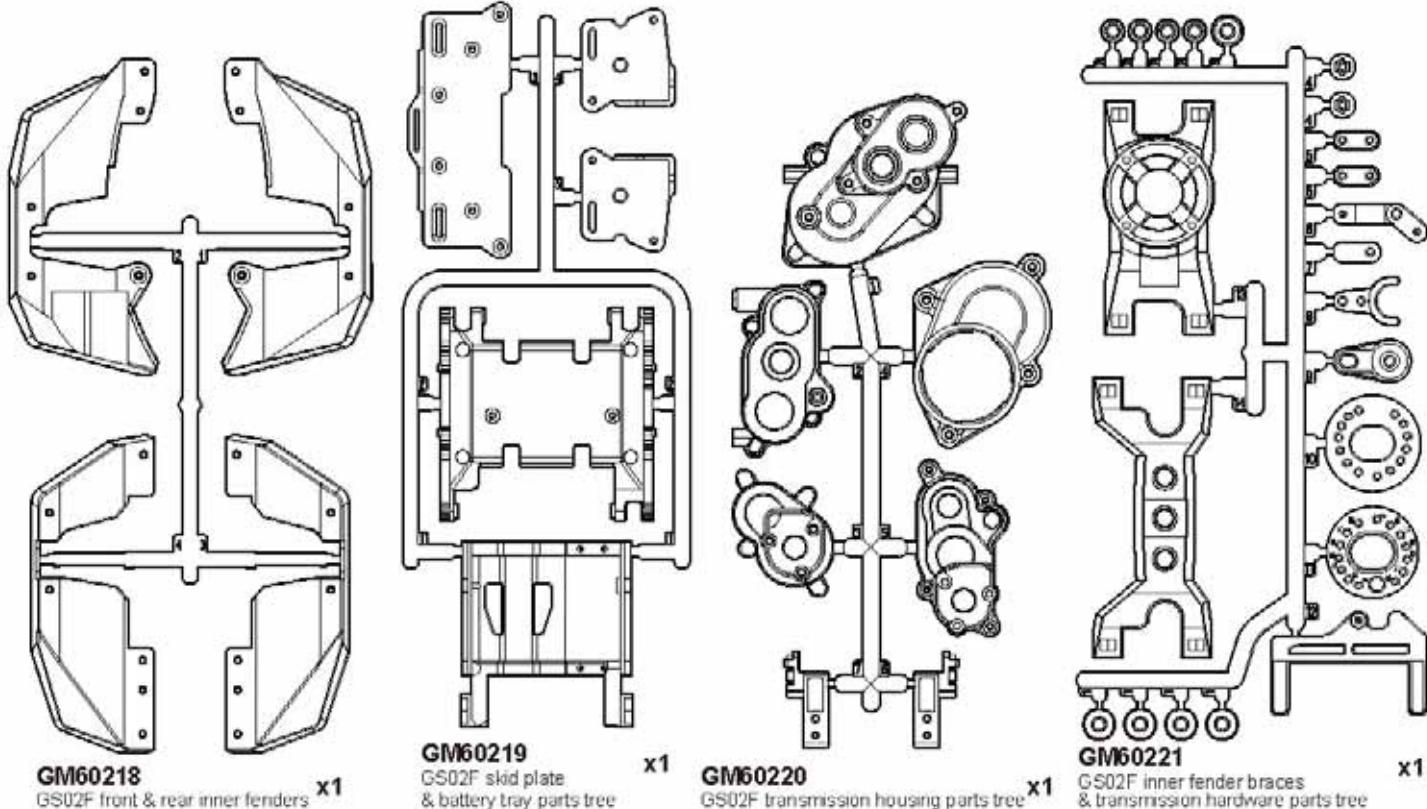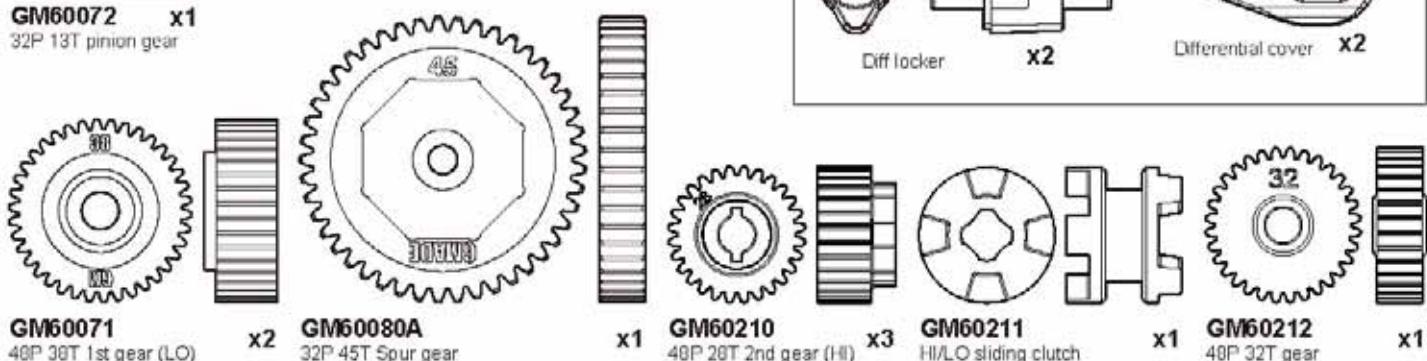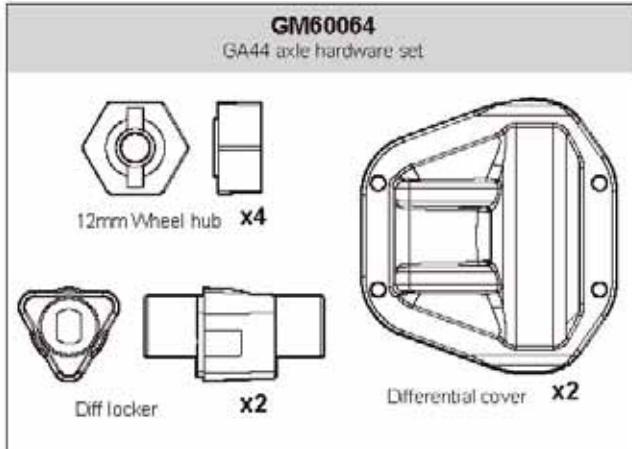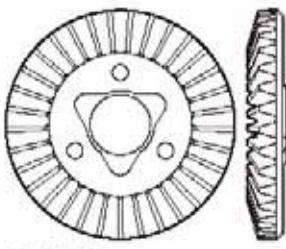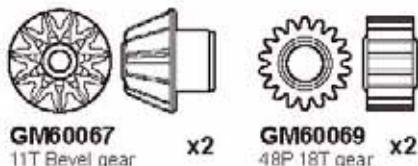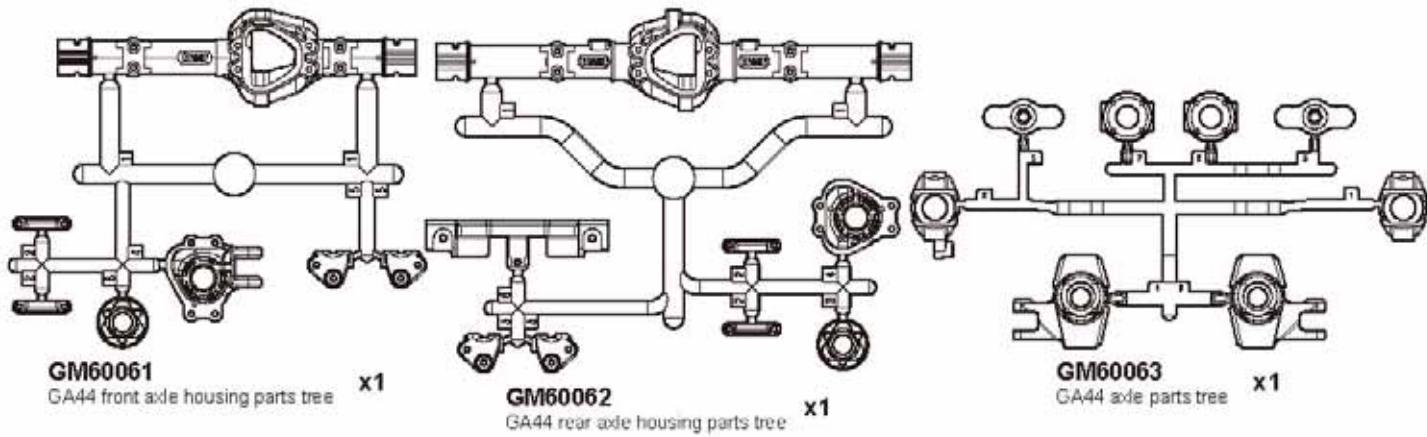


PARTS REFERENCE

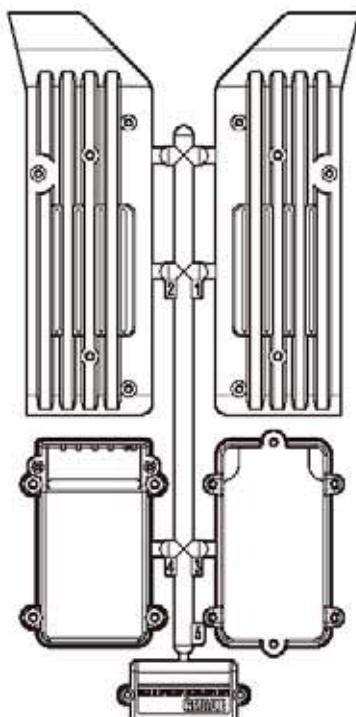


GM60076
GS02 side plate parts tree **x1**

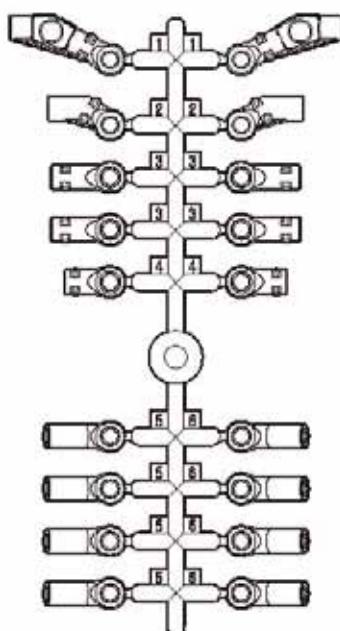

GM60022
M4 5.8mm rod end set **x2**

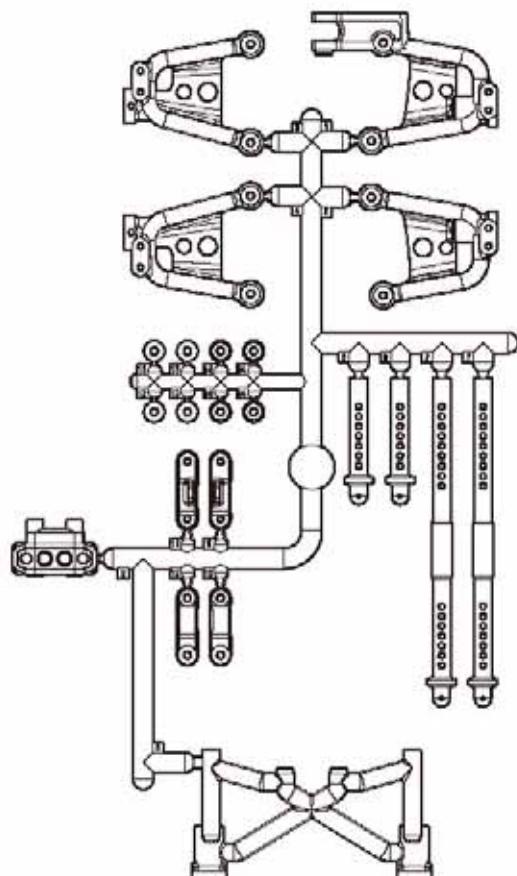


GM60077
GS02 shock hoop & body post parts tree **x1**

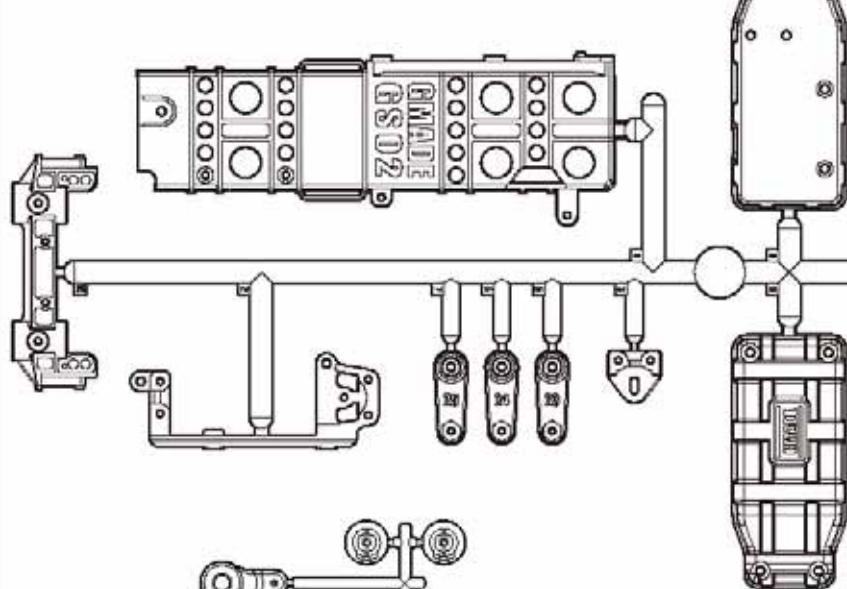


GM60078
GS02 battery tray & cross member parts tree **x1**


GM60001
16.5mm servo saver parts tree **x1**

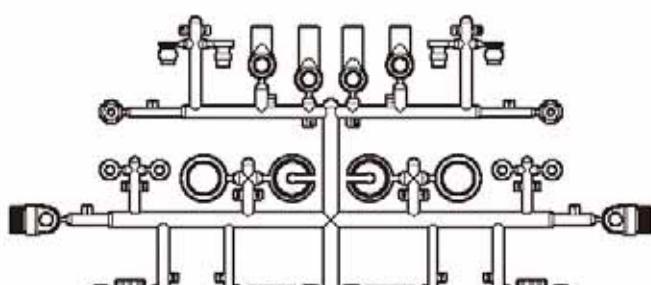

GM60079
SD shock parts tree **x2**








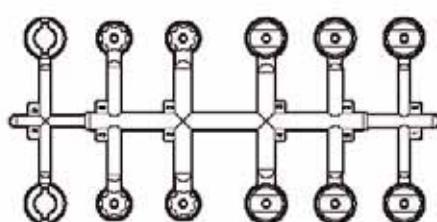


GM60084
Universal shaft parts tree **x1**

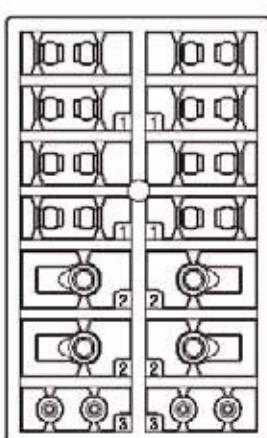


GM60023
5.0mm ball parts tree **x2**














PARTS REFERENCE

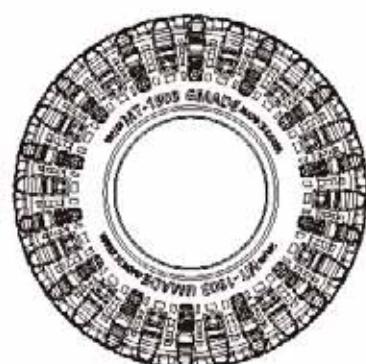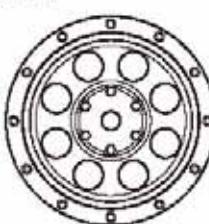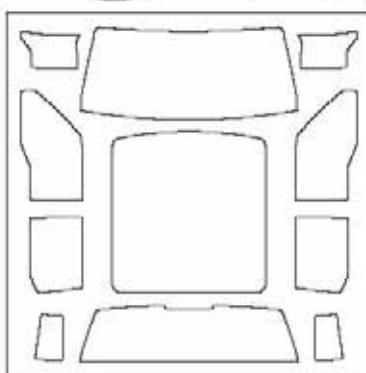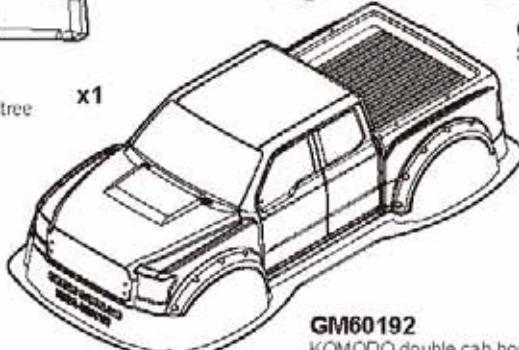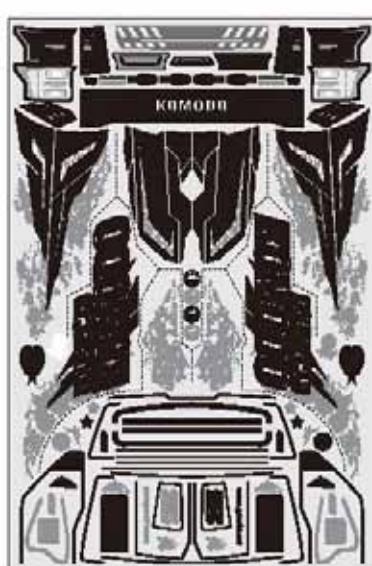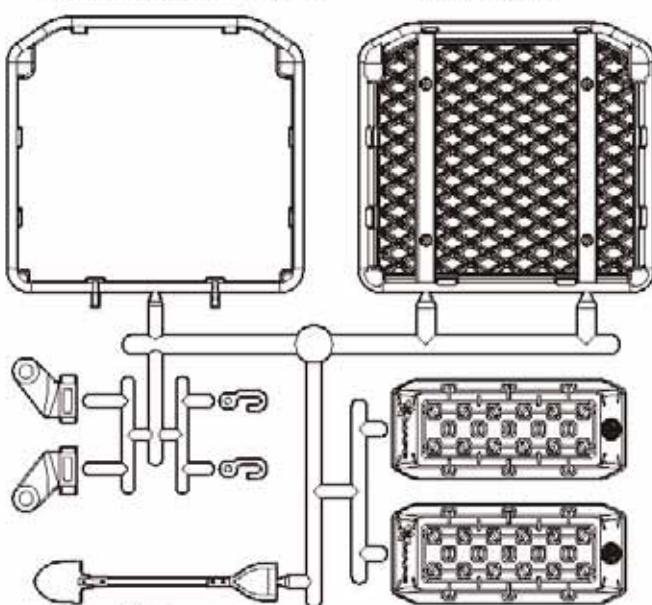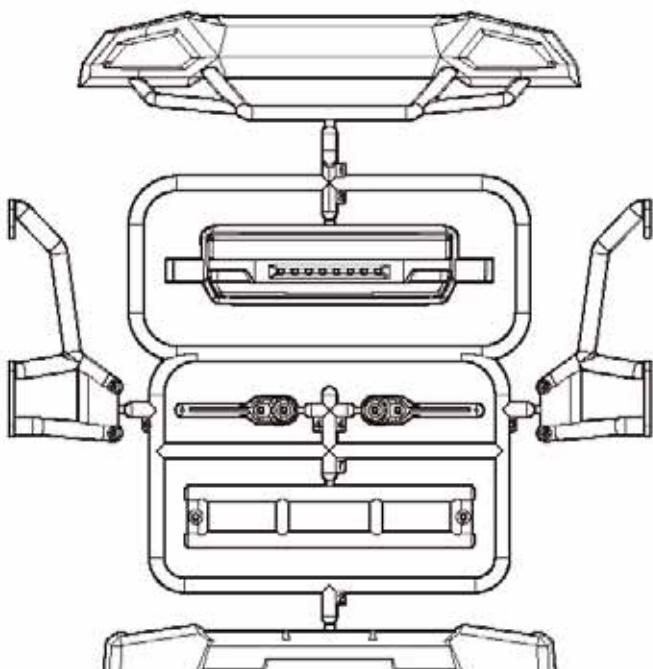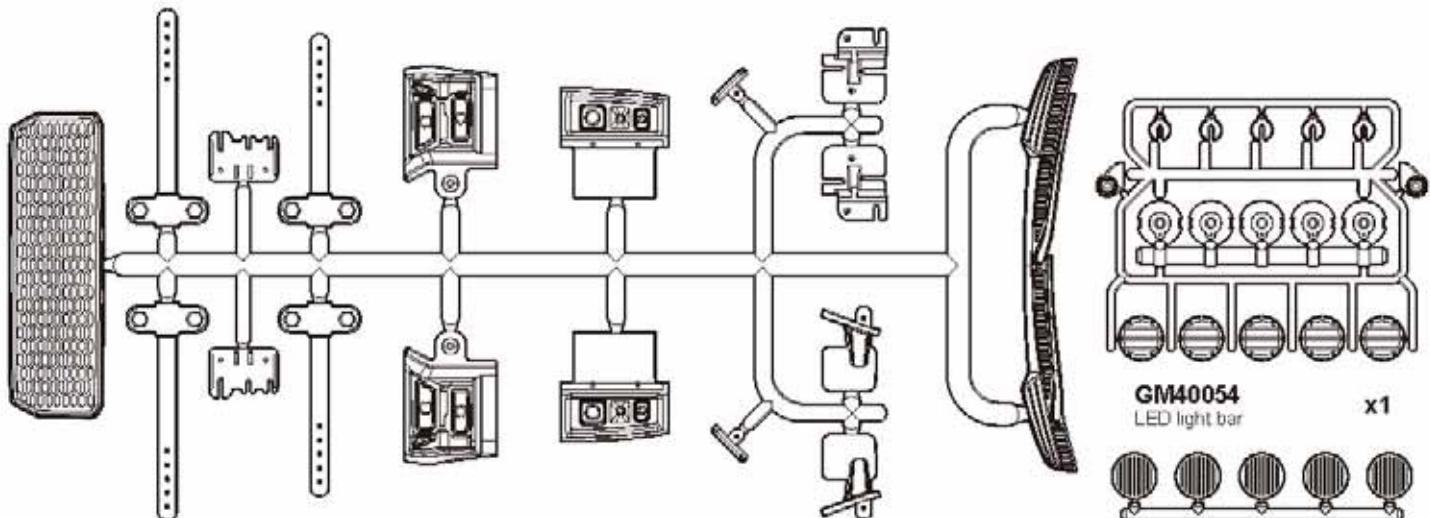

PARTS REFERENCE


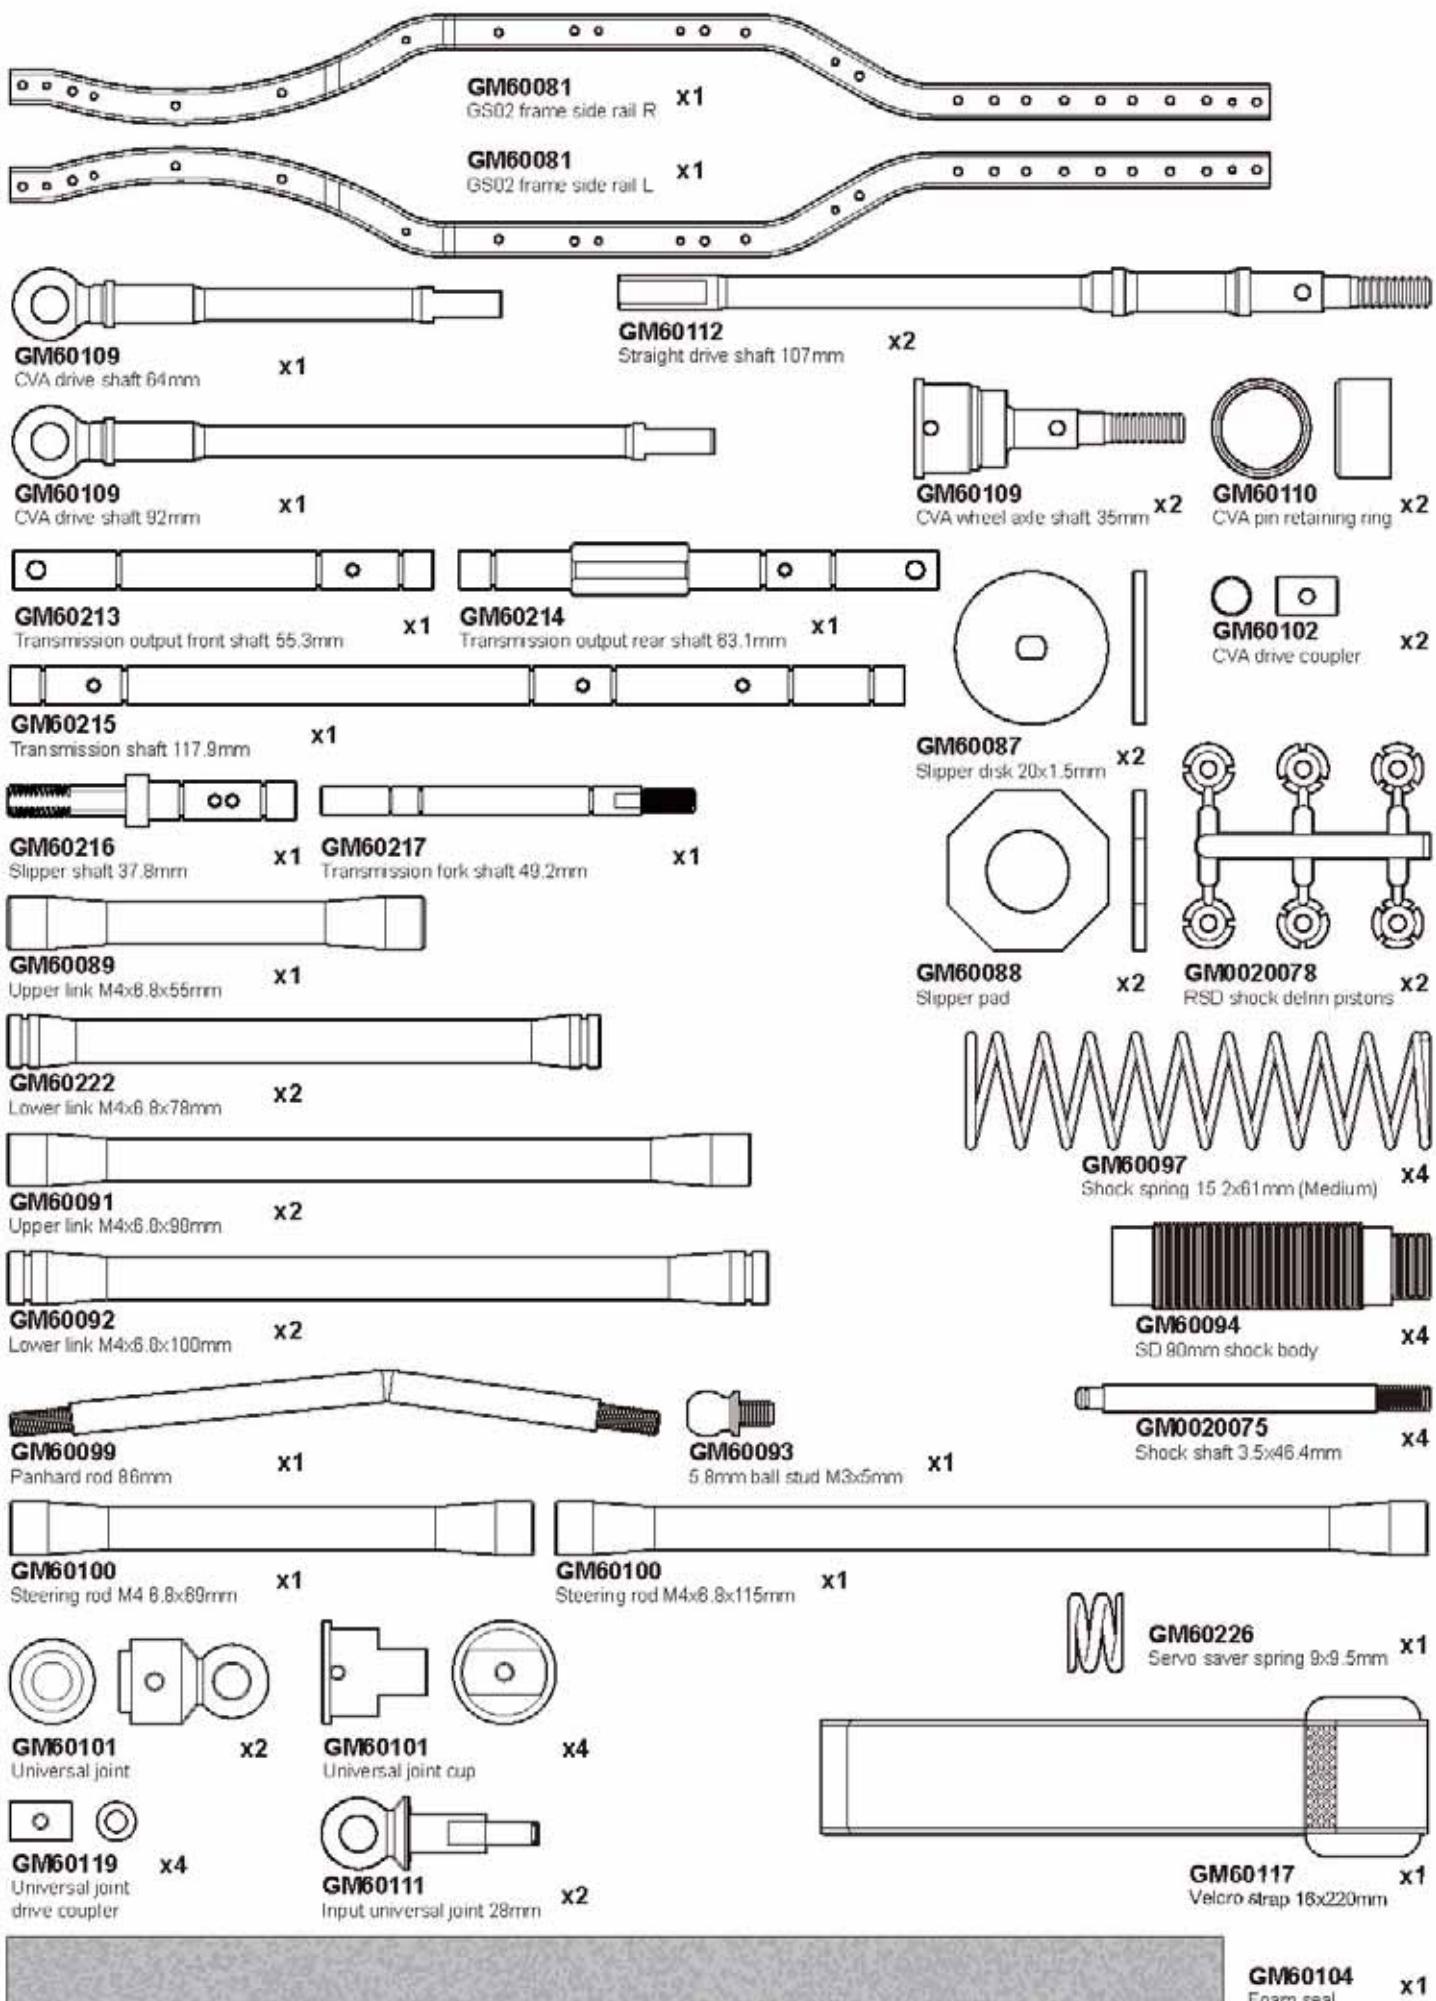


PARTS REFERENCE

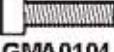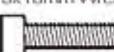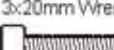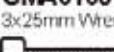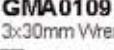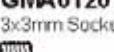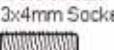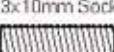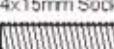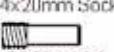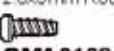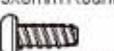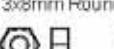GMA0011 2.5x6mm round head wrench bolt	x8	 GMA0104 3x12mm Wrench bolt	x1	 GMA0210 4mm conical spring washer	x4
GMA0017 3x8mm Round head wrench bolt	x2	 GMA0106 3x18mm Wrench bolt	x3	 GMA0163 Ball bearing 5x8x2.5mm	x4
GMA0018 3x8mm Round head wrench bolt	x6	 GMA0107 3x20mm Wrench bolt	x1	 GMA0165 Ball bearing 5x11x4mm	x20
GMA0019 3x10mm Round head wrench bolt	x24	 GMA0108 3x25mm Wrench bolt	x4	 GMA0205 Ball bearing 8x12x3.5mm	x6
GMA0020 3x12mm Round head wrench bolt	x19	 GMA0109 3x30mm Wrench bolt	x3	 GMA0167 Ball bearing 10x15x4mm	x2
GMA0021 3x15mm Round head wrench bolt	x13	 GMA0126 3x3mm Socket set screw	x4	 GM49080 3x8.2mm Rubber washer	x4
GMA0172 3x10mm Round head wrench bolt	x5	 GMA0127 3x4mm Socket set screw	x1	 GMA0169 P3 O-ring	x8
GMA0022 3x20mm Round head wrench bolt	x3	 GMA0131 3x10mm Socket set screw	x8	 GMA0277 P4 O-ring (RED)	x2
GMA0023 3x25mm Round head wrench bolt	x1	 GMA0144 4x15mm Socket set screw	x2	 GMA0170 P5 O-ring	x4
GMA0024 3x30mm Round head wrench bolt	x1	 GMA0145 4x20mm Socket set screw	x16	 GMA0212 7x1 O-ring	x4
GMA0056 3x6mm Flat head wrench bolt	x4	 GM60103 3x10mm Screw pin	x2	 GMA0160 2mm E-ring	x6
GMA0057 3x8mm Flat head wrench bolt	x4	 GMA0203 2.8x5mm Round head screw	x2	 GMA0161 2.5mm E-ring	x3
GMA0058 3x10mm Flat head wrench bolt	x5	 GMA0198 2x6mm Nickel round head tapping screw	x13	 GMA0162 4mm E-ring	x14
GMA0059 3x12mm Flat head wrench bolt	x4	 GMA0174 3x6mm Round head tapping screw	x2	 GM60033 Pin 1.5x7.2mm	x6
GMA0060 3x15mm Flat head wrench bolt	x1	 GMA0175 3x8mm Round head tapping screw	x10	 GM51603 Pin 2x10.3mm	x4
GMA0064 3x35mm Flat head wrench bolt	x2	 GMA0190 M2.6 Nut	x2	 GM60065 Pin 2x11.4mm	x6
GMA0082 2x8mm Wrench bolt	x14	 GMA0154 M3 Nut	x5	 GM49006 R5 snap pin	x2
GMA0093 2.5x8mm Wrench bolt	x14	 GMA0156 M3 Nylon lock nut	x9	 GM50116 RB snap pin	x4
GMA0094 2.5x10mm Wrench bolt	x1	 GMA0157 M4 nylon lock nut	x5		
GMA0095 2.5x12mm Wrench bolt	x12	 GMA0191 M3 flange nut	x4		
GMA0102 3x8mm Wrench bolt	x6	 GMA0267 2.8mm Washer	x2		
		 GMA0158 3mm Washer	x6		
		 GM49077 S75 O-ring	x2		
				 GMA0213 S58 O-ring	x1

AXLE

1 ▲ MAKE X 2

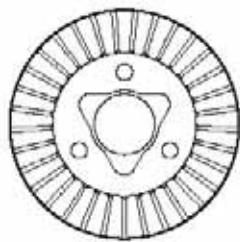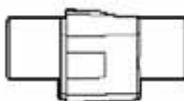**GM60068**
33T Bevelgear**GM60064**
Diff locker


x2

GM60061 3, GM60062 3**GMA0205**
Ball bearing 8x12x3.5mm

x4

**GMA0082**
2x8mm Wrench bolt


x6

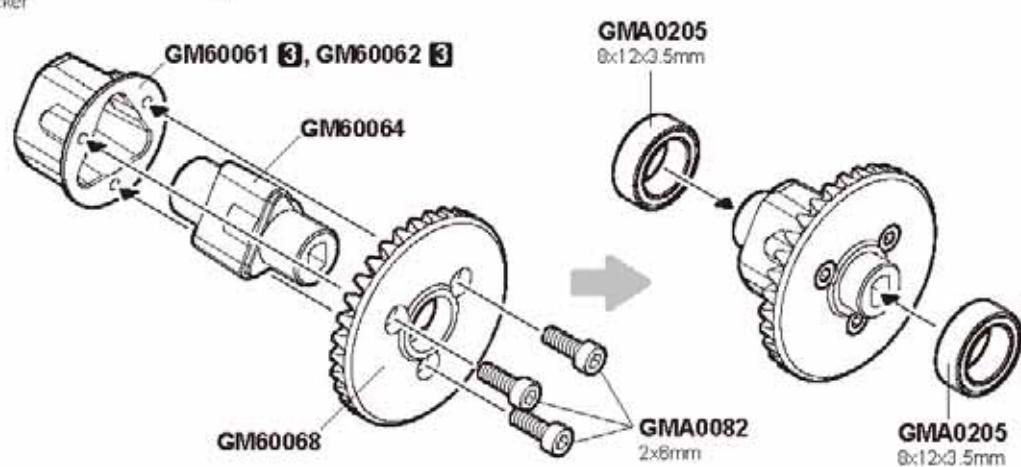**FRONT AXLE**

2

**GM60067**
11T Bevelgear

x1

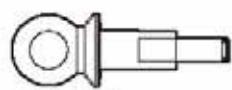**GMA0205**
Ball bearing 8x12x3.5mm**GM60111**
Input universal joint 28mm

x1

**GMA0165**
Ball bearing 5x11x4mm


x1



3


**GMA0093**
2.5x8mm Wrench bolt

x4

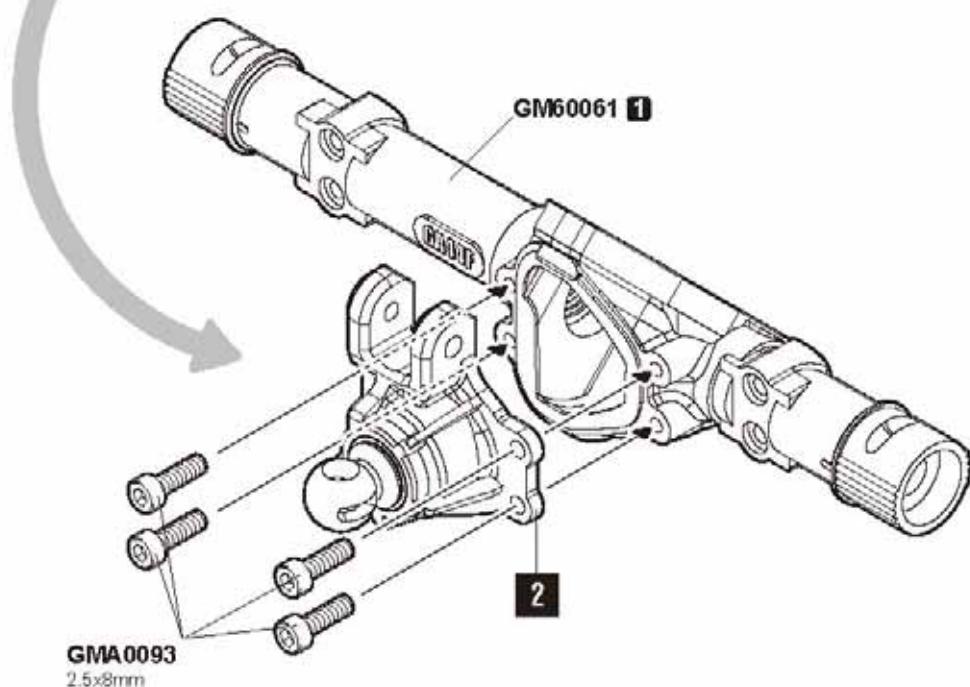


FRONT AXLE


4

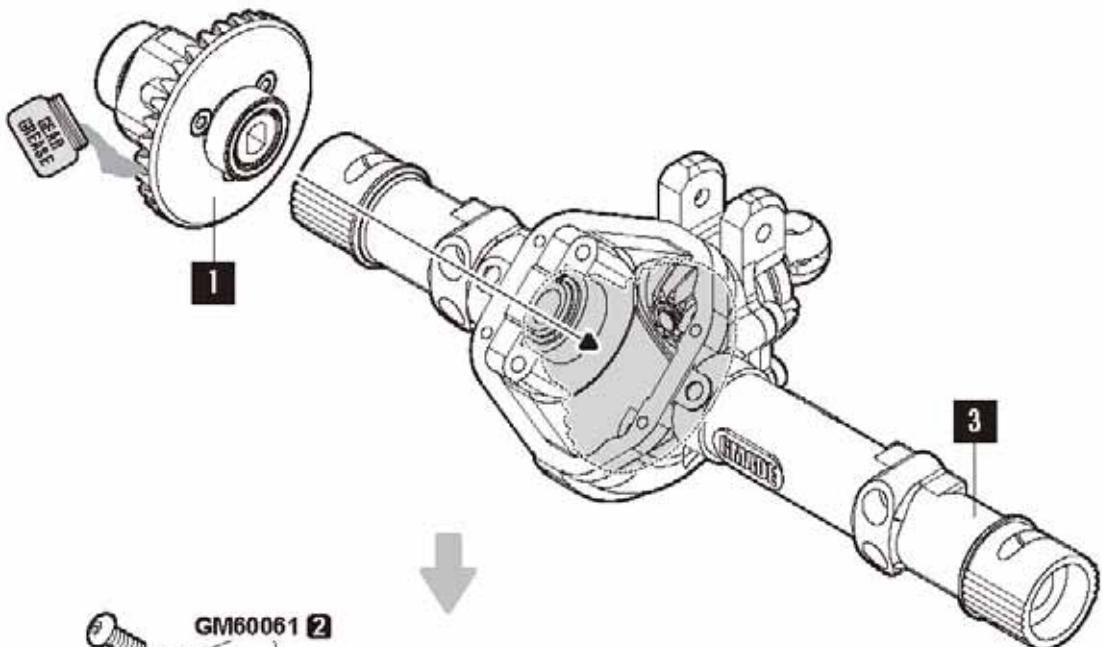

GMA0011
2.5x6mm
Round head wrench bolt
x4

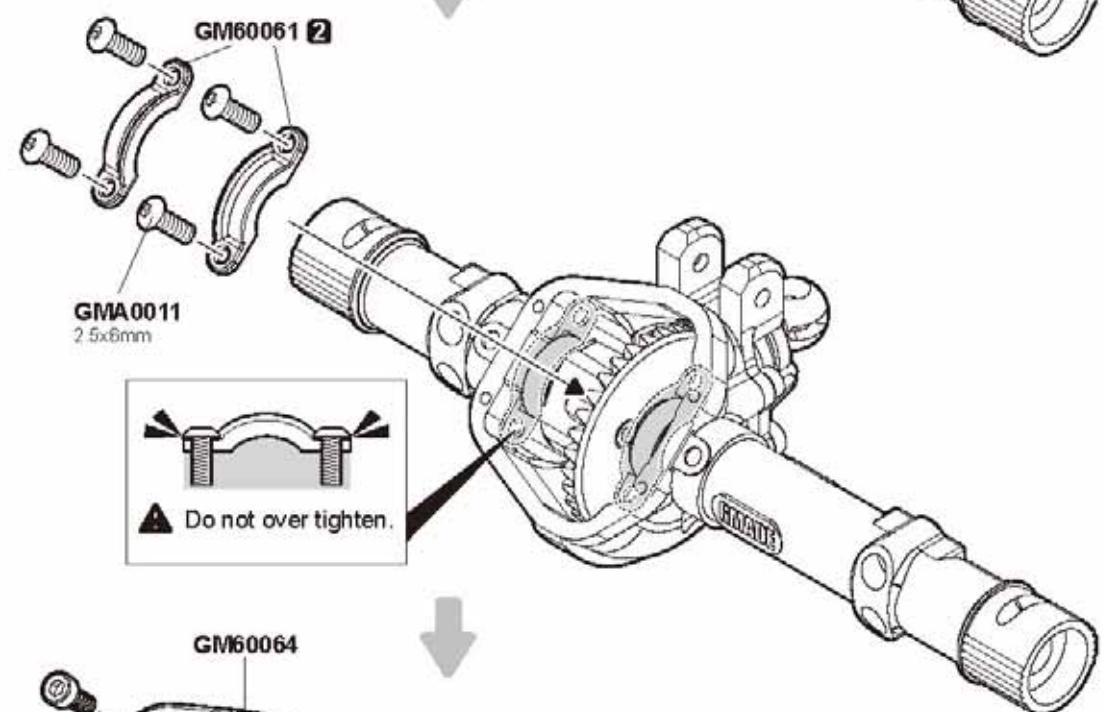

GMA0082
2x6mm Wrench bolt
x4

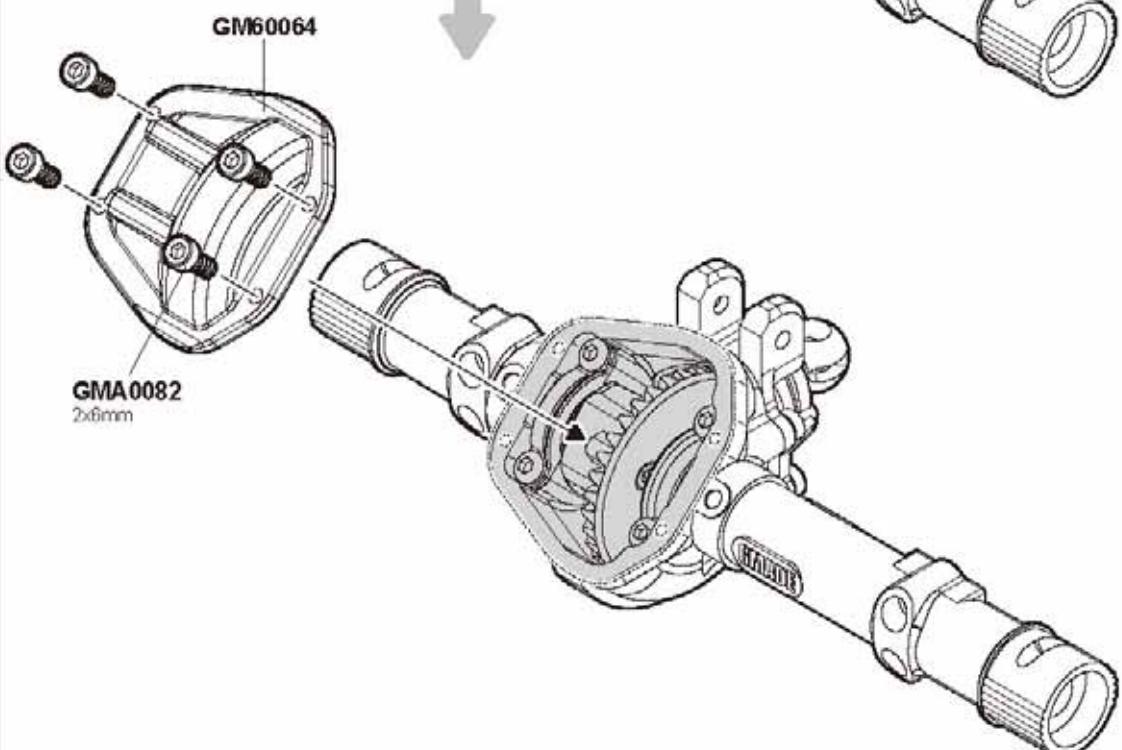

FRONT AXLE




GMA0165
Ball bearing 5x11x4mm



x2

5


RIGHT C-HUB CASTER ANGLE SETUP

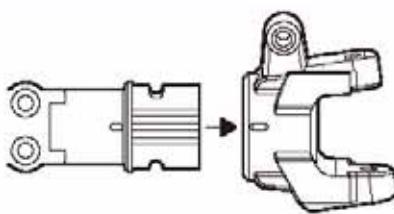


RIGHT SIDE VIEW

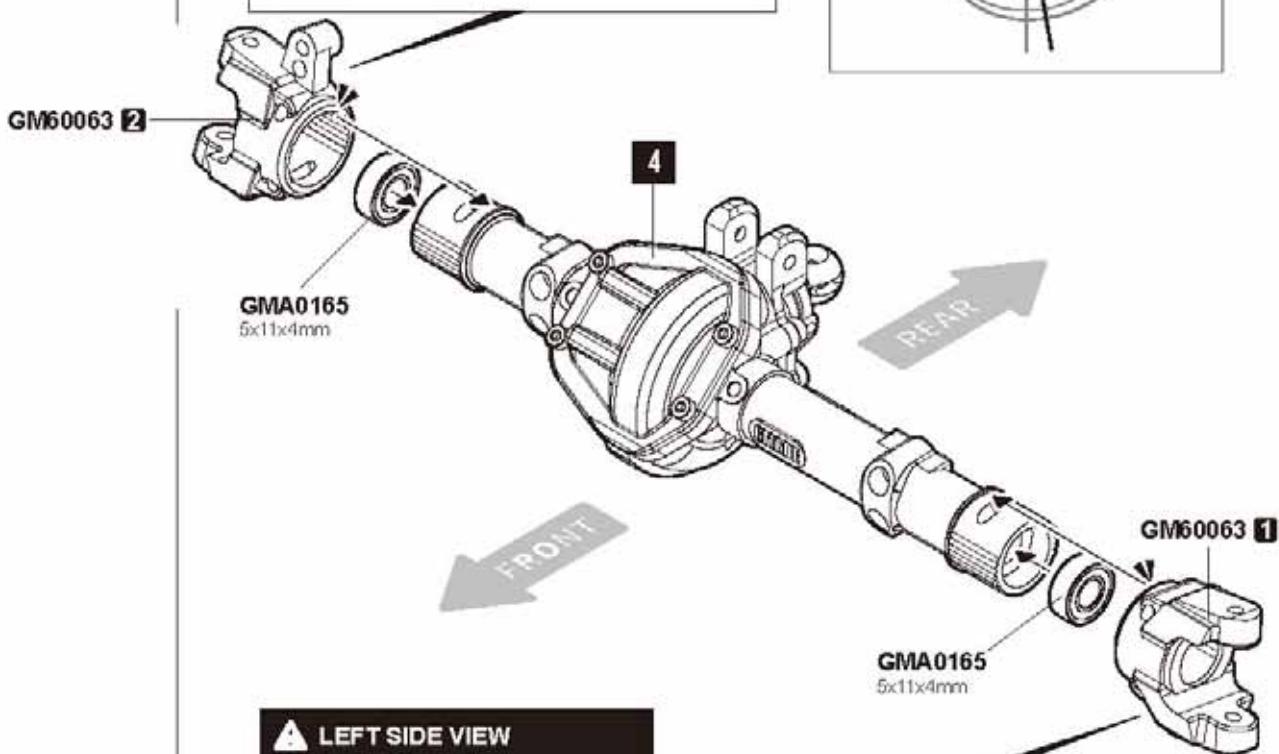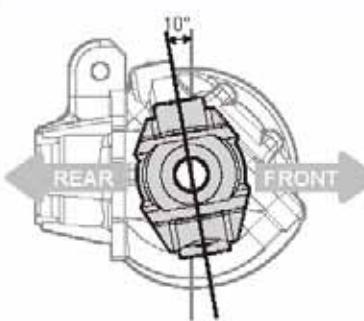

LEFT SIDE VIEW

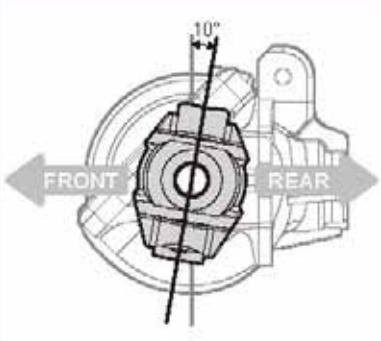



LEFT C-HUB CASTER ANGLE SETUP

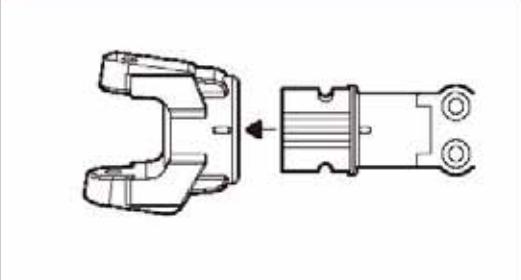


GMA0131
3x10mm Socket set screw


x4

CAUTION

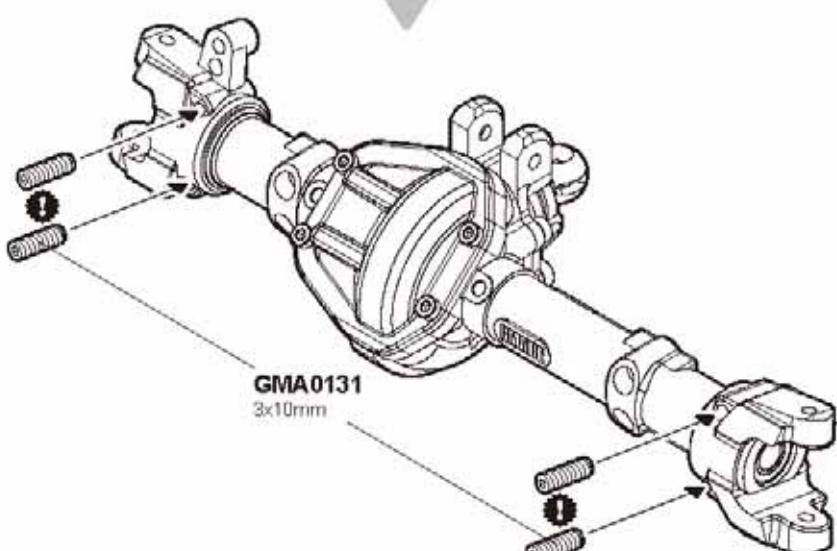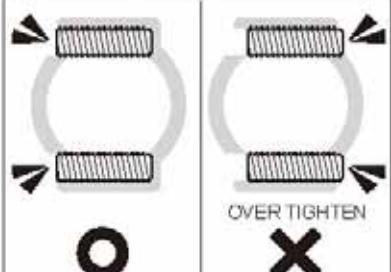


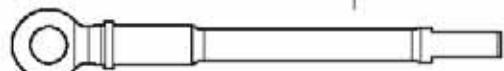FRONT AXLE**6-A**

GM60109
CVA drive shaft 64mm

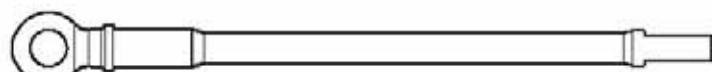x1


GM60109
CVA drive shaft 82mm

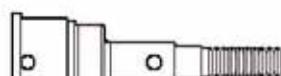x1


GM60109
CVA wheel axle shaft 35mm

x2




GM60110
CVA pin retaining ring

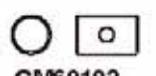x2

GM60102
CVA drive coupler

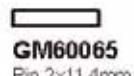x2

GM60065
Pin 2x11.4mm

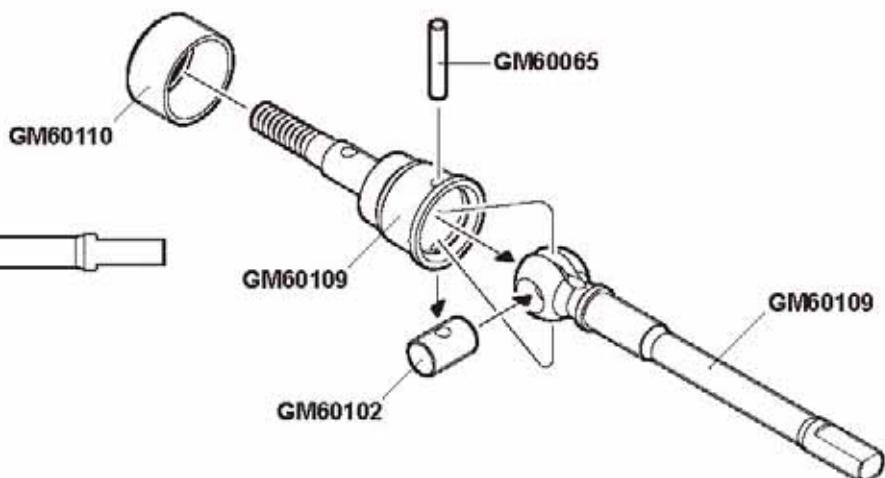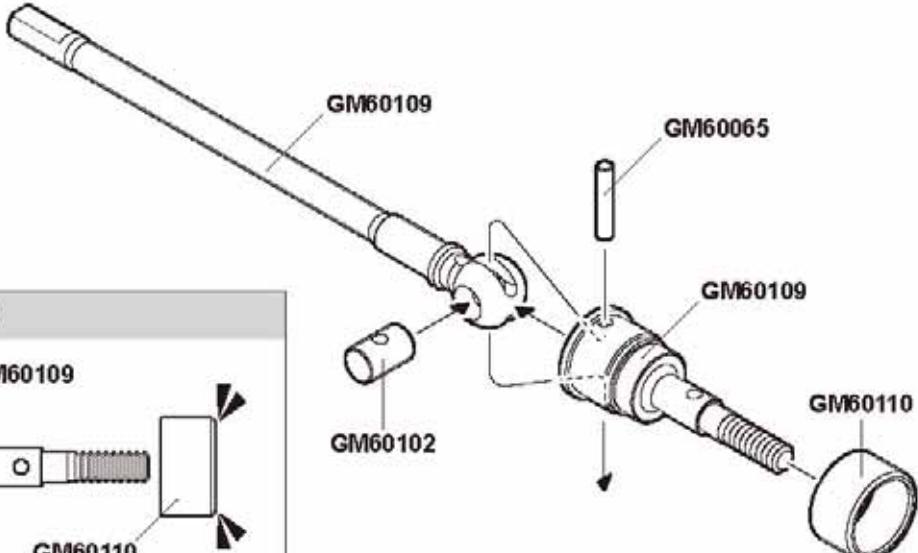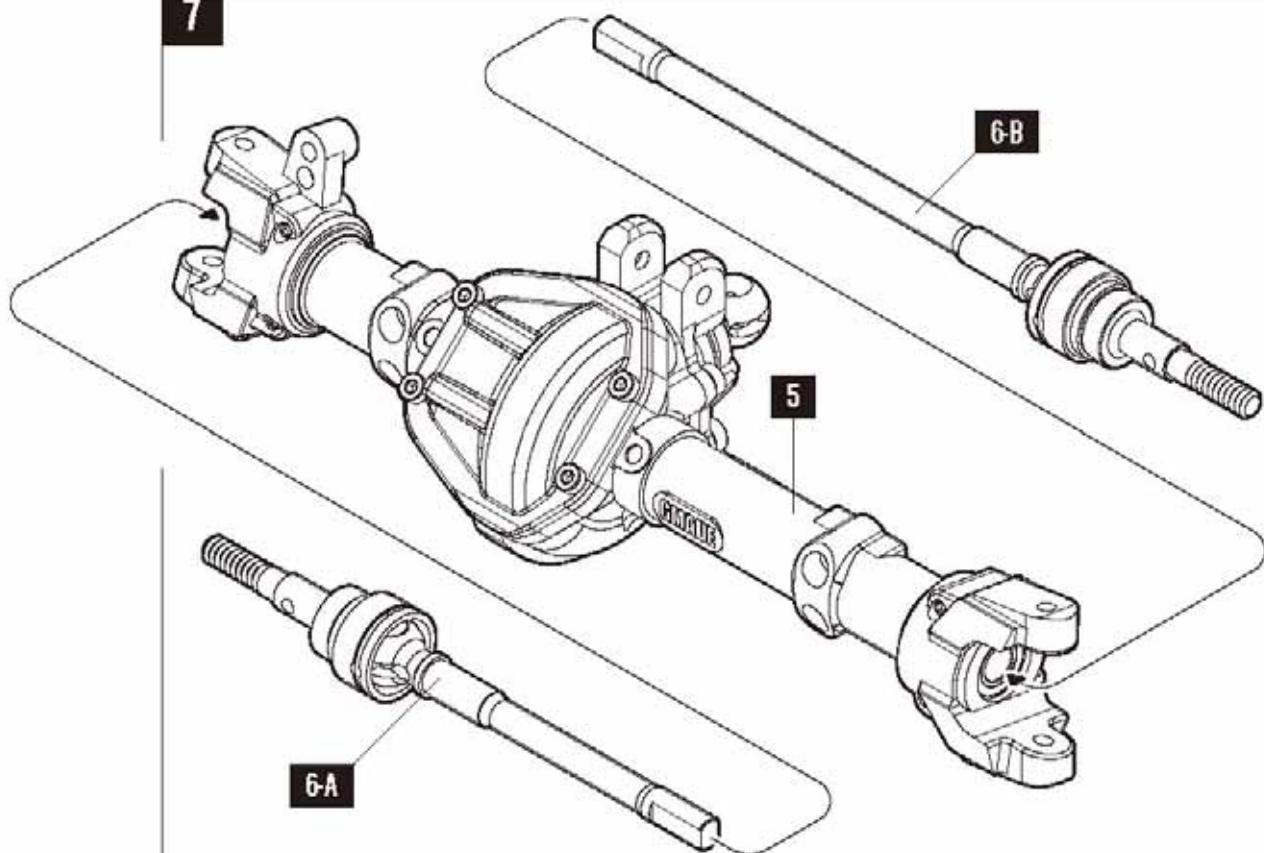x2**6-B****7**

FRONT AXLE



GMA019


3x10mm

Round head wrench bolt

8

GMA0165

5x11x4mm

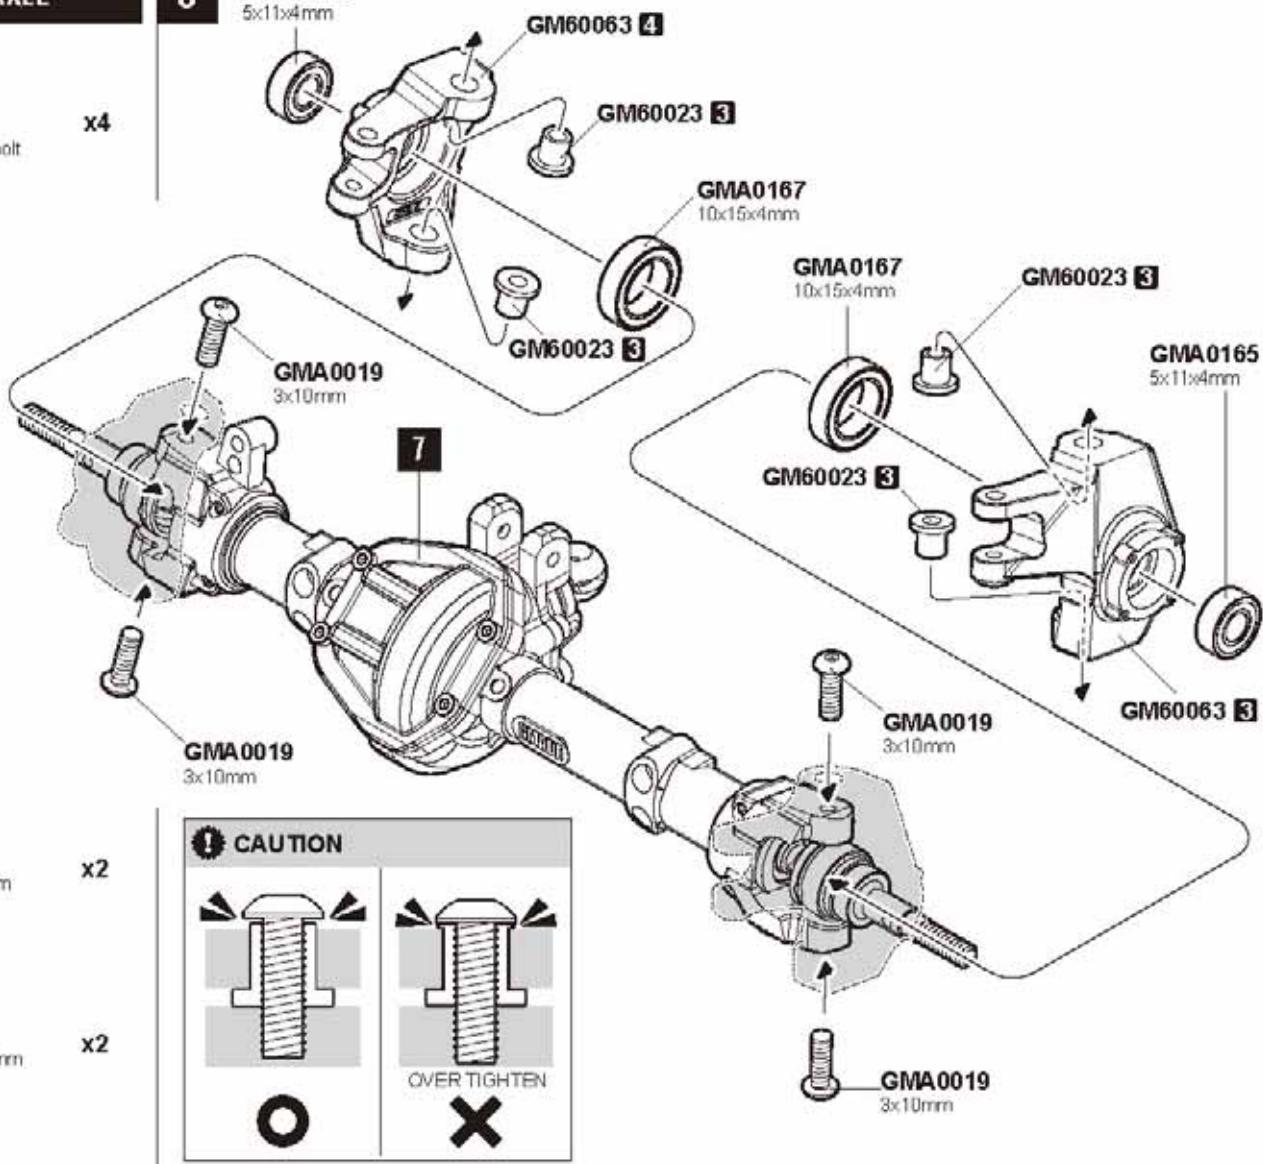

GMA0165

Ball bearing 5x11x4mm



GMA0167

Ball bearing 10x15x4mm

x2

x2



GMA0095

2.5x12mm Wrench bolt

9


x4

GMA0095

2.5x12mm


REAR AXLE

10

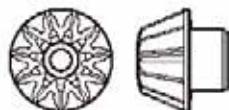

GM60067
11T Bevelgear

x1

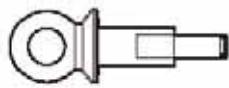

GM60111
Input universal joint 20mm

x1



GMA0160
2mm E-ring

x1



GMA0165
Ball bearing 5x11x4mm

x1







GMA0205
Ball bearing 8x12x3.5mm


x1



GMA0093
2.5x8mm Wrench bolt

x4

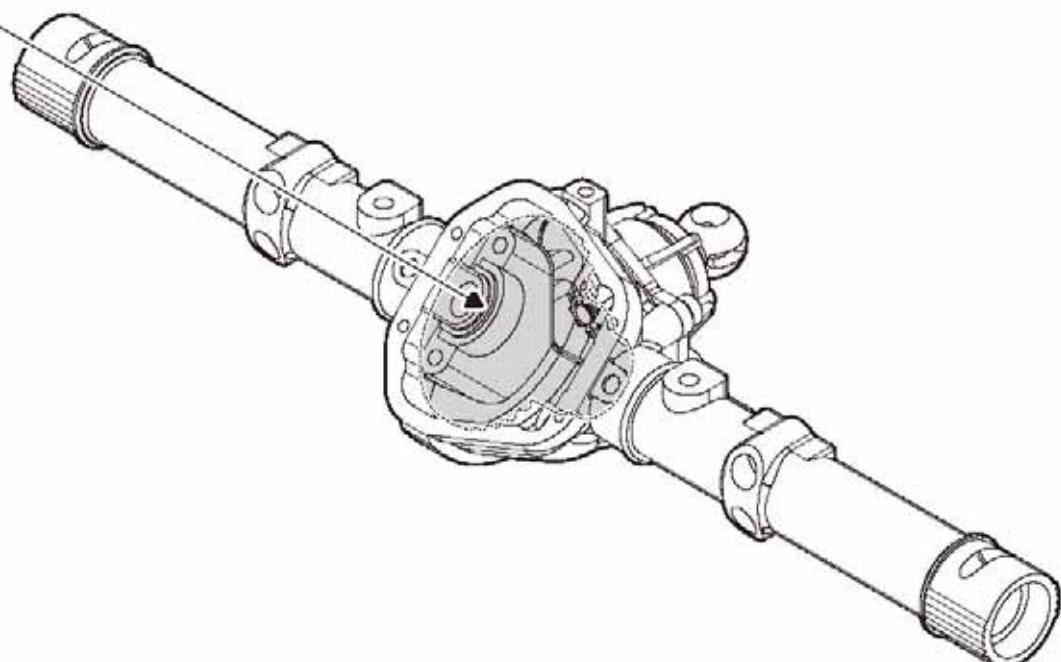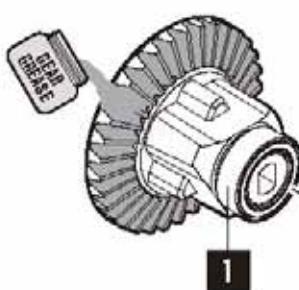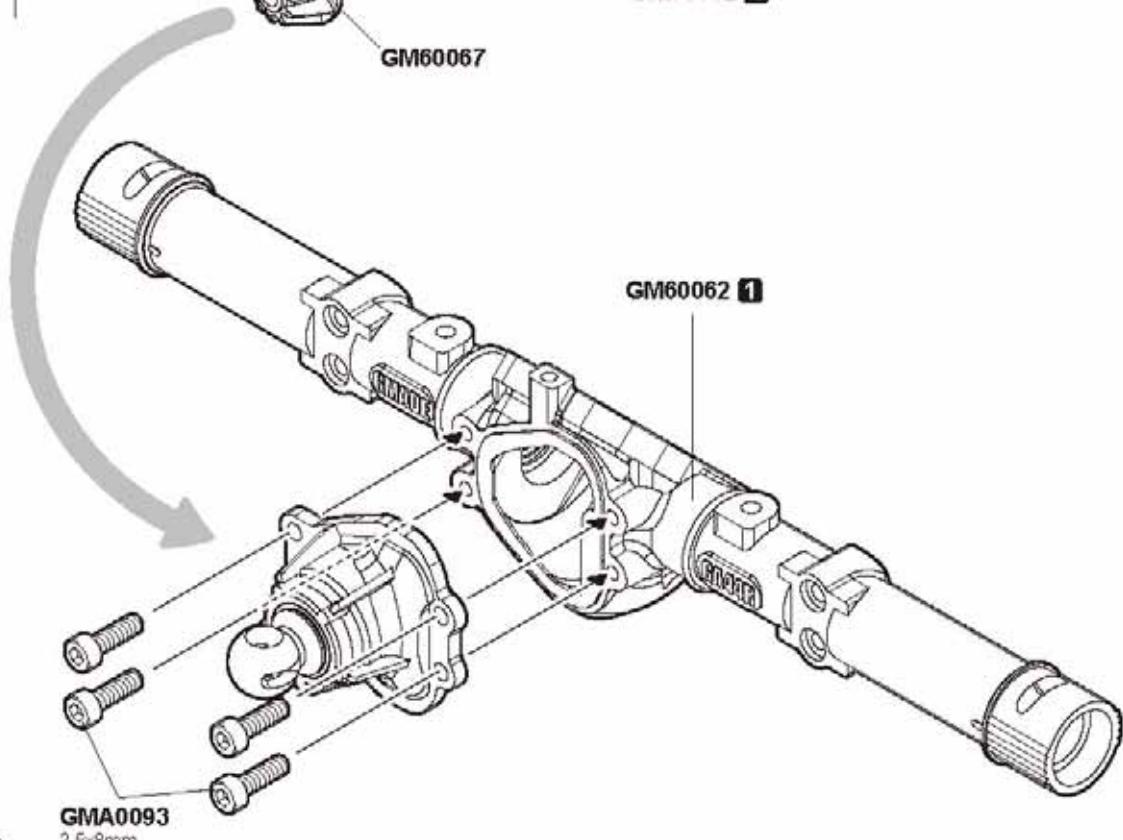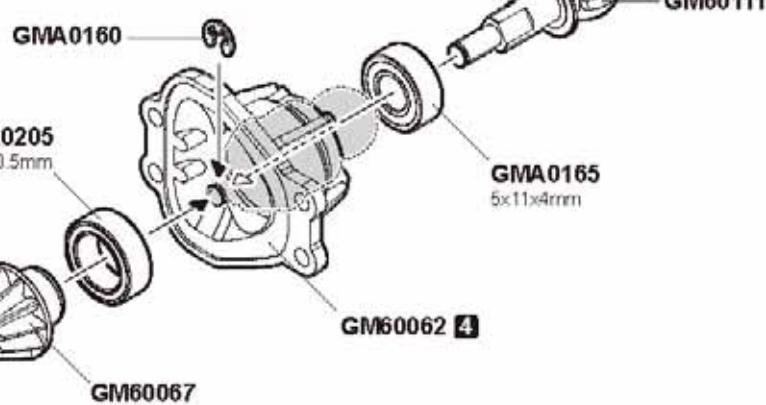

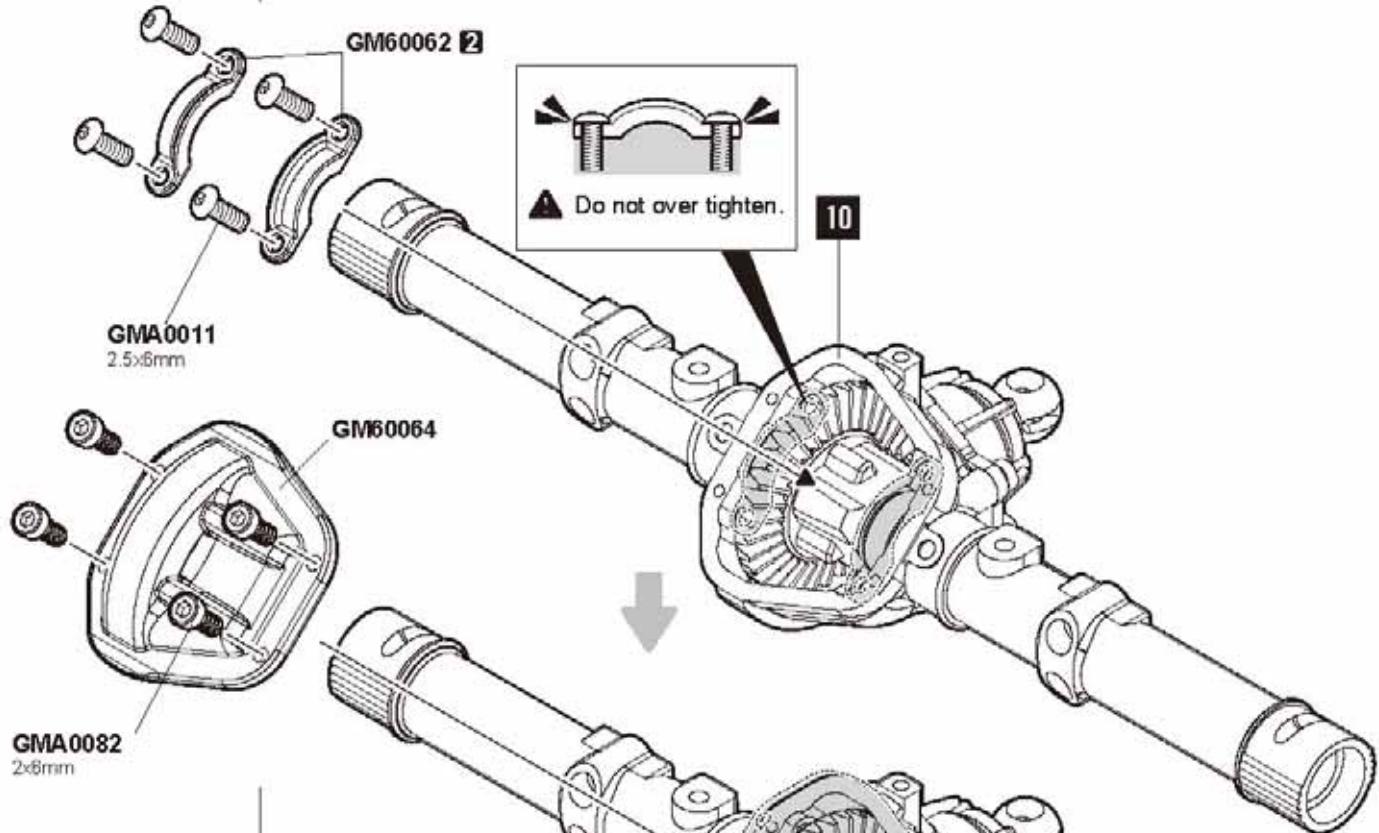

GMA0011
2.5x6mm
Round head wrench bolt

x4


GMA0082
2x6mm Wrench bolt

x4

GMA0017
3x6mm
Round head wrench bolt


x2

GMA0094
2.5x10mm Wrench bolt

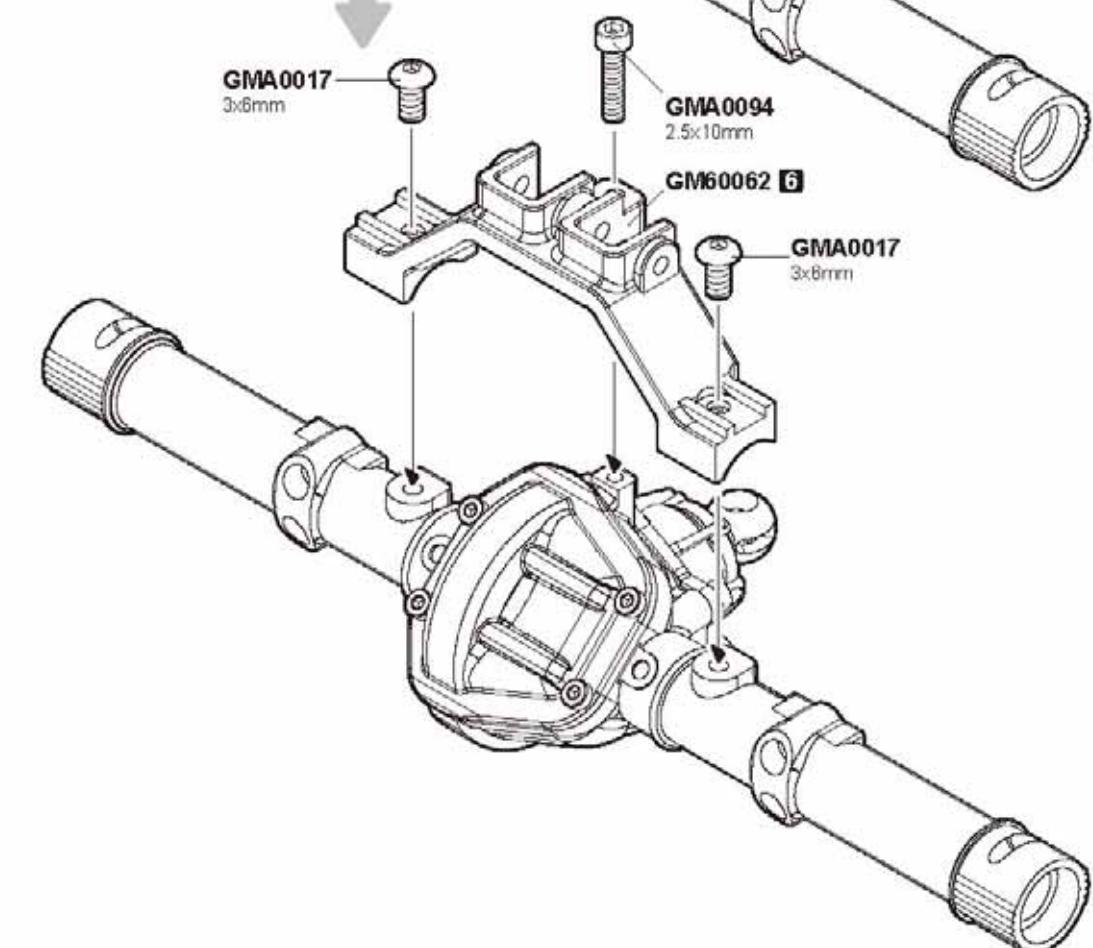
x1

REAR AXLE

12

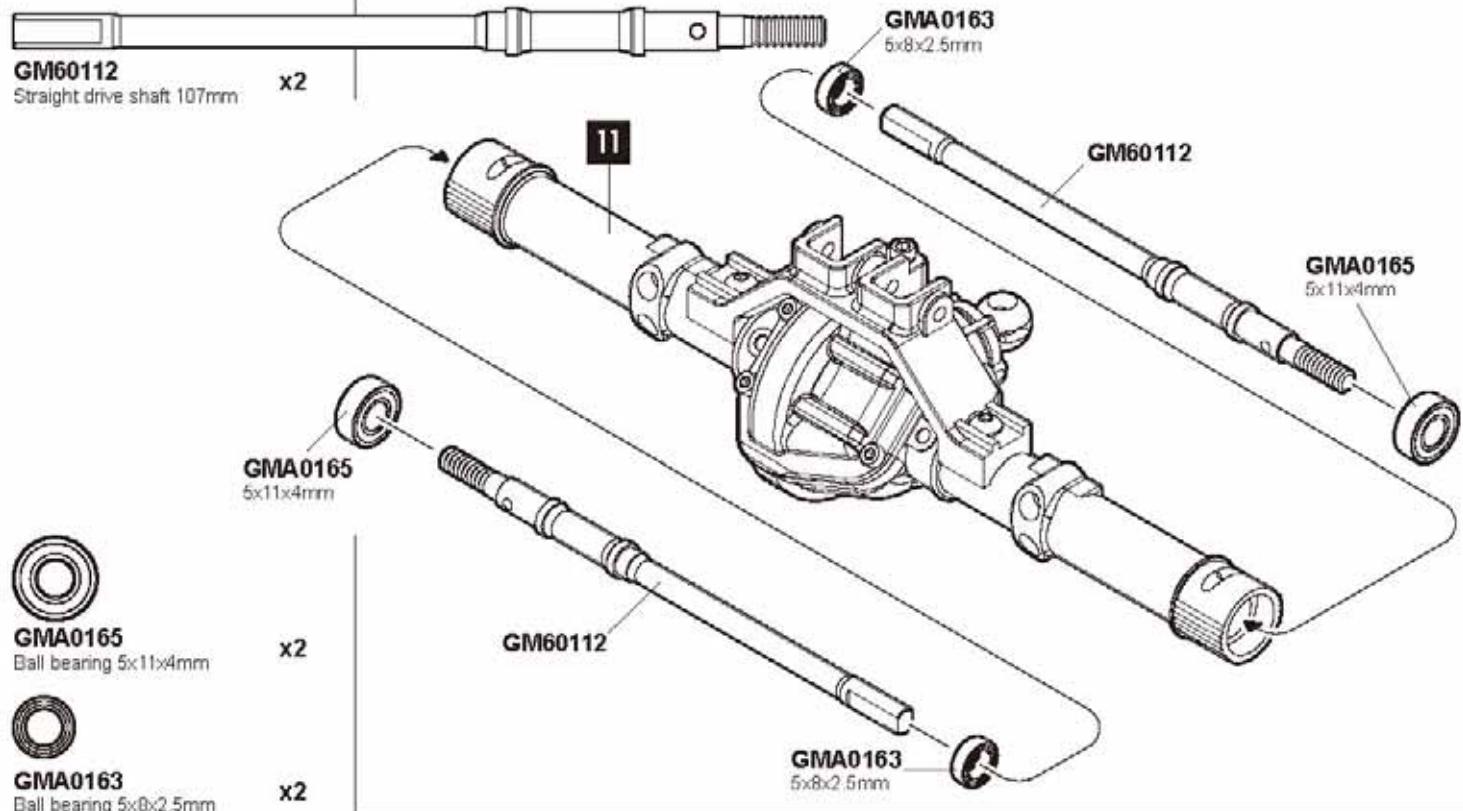


13

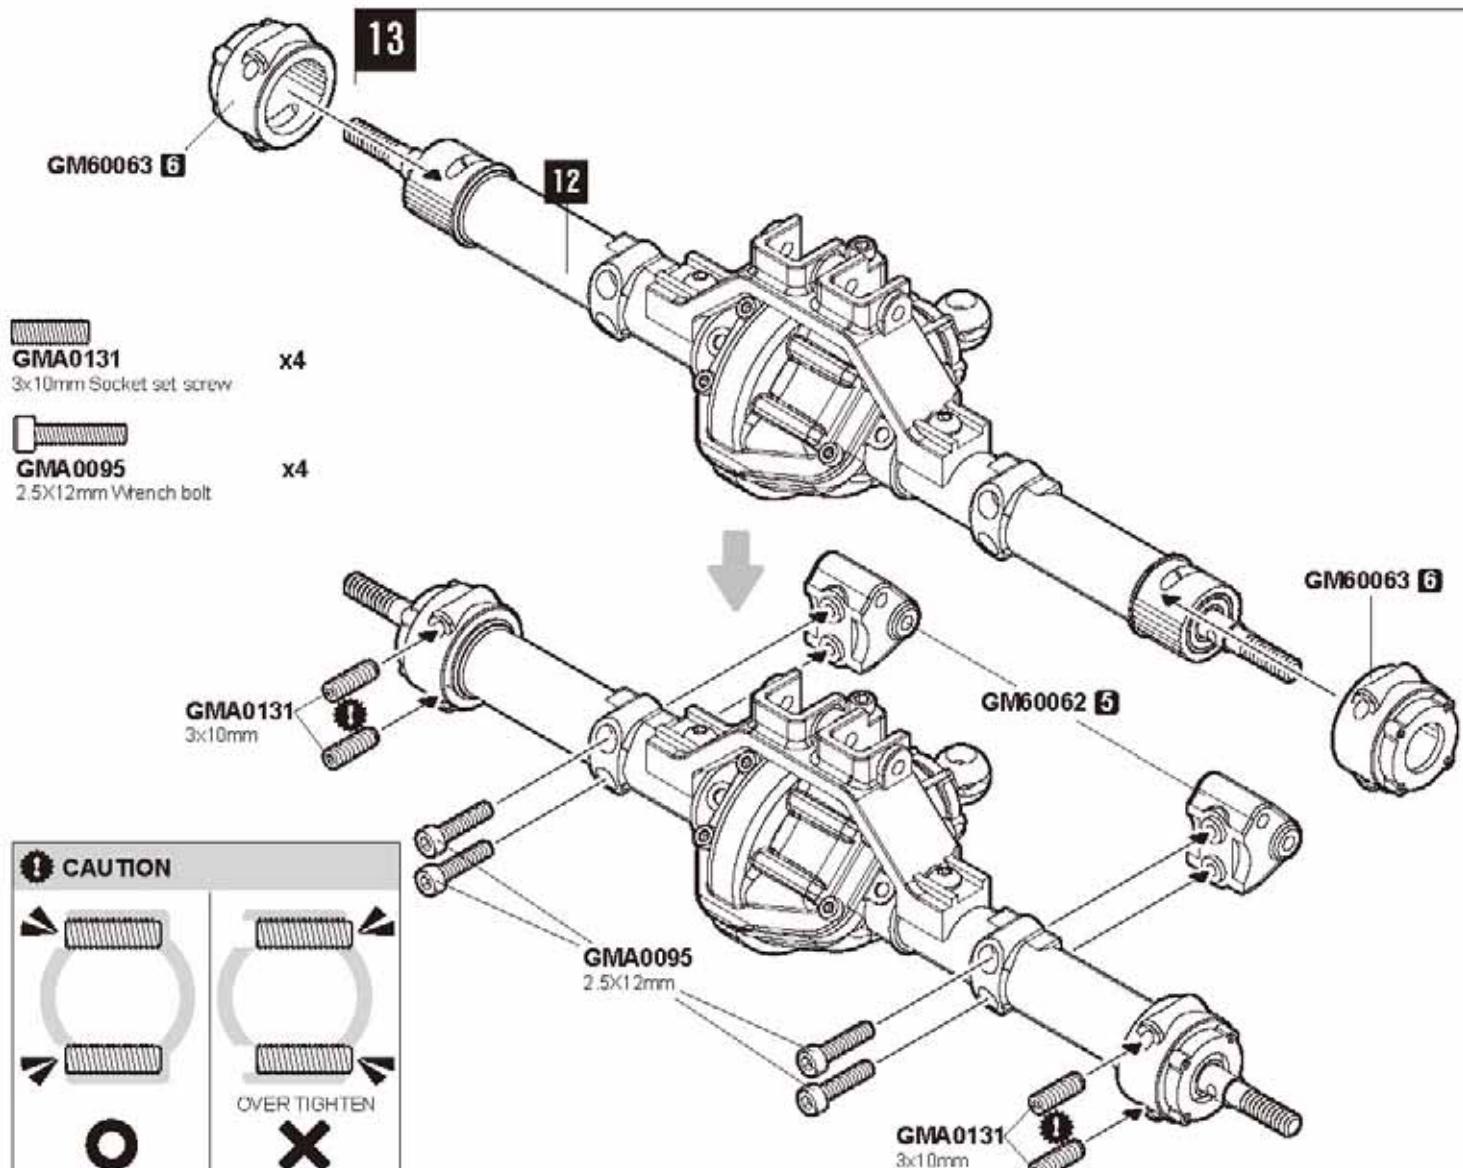


TRANSMISSION


14


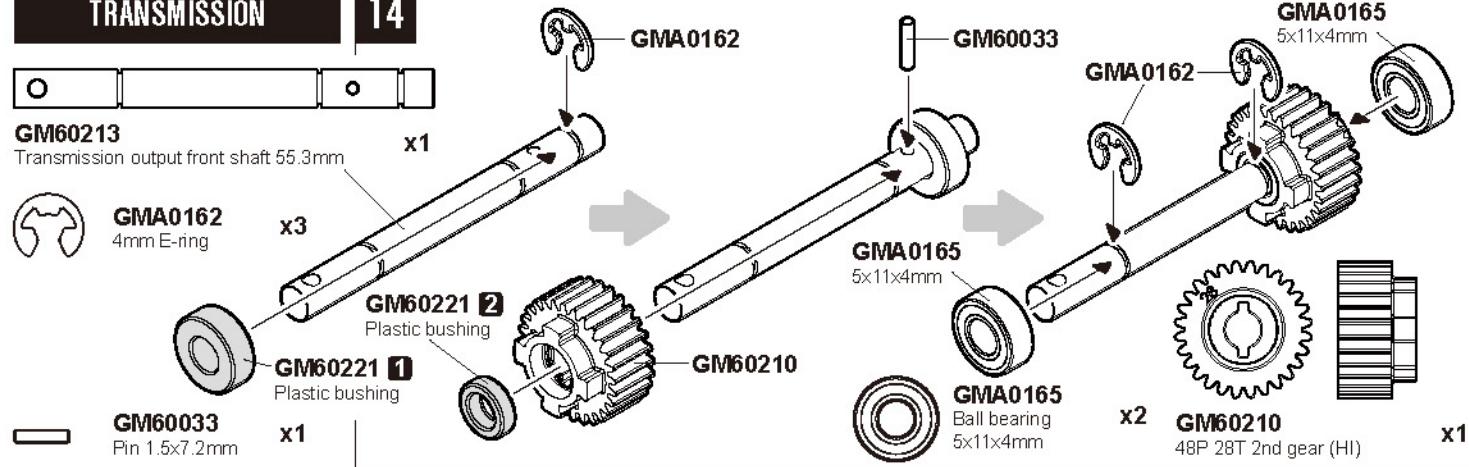


15

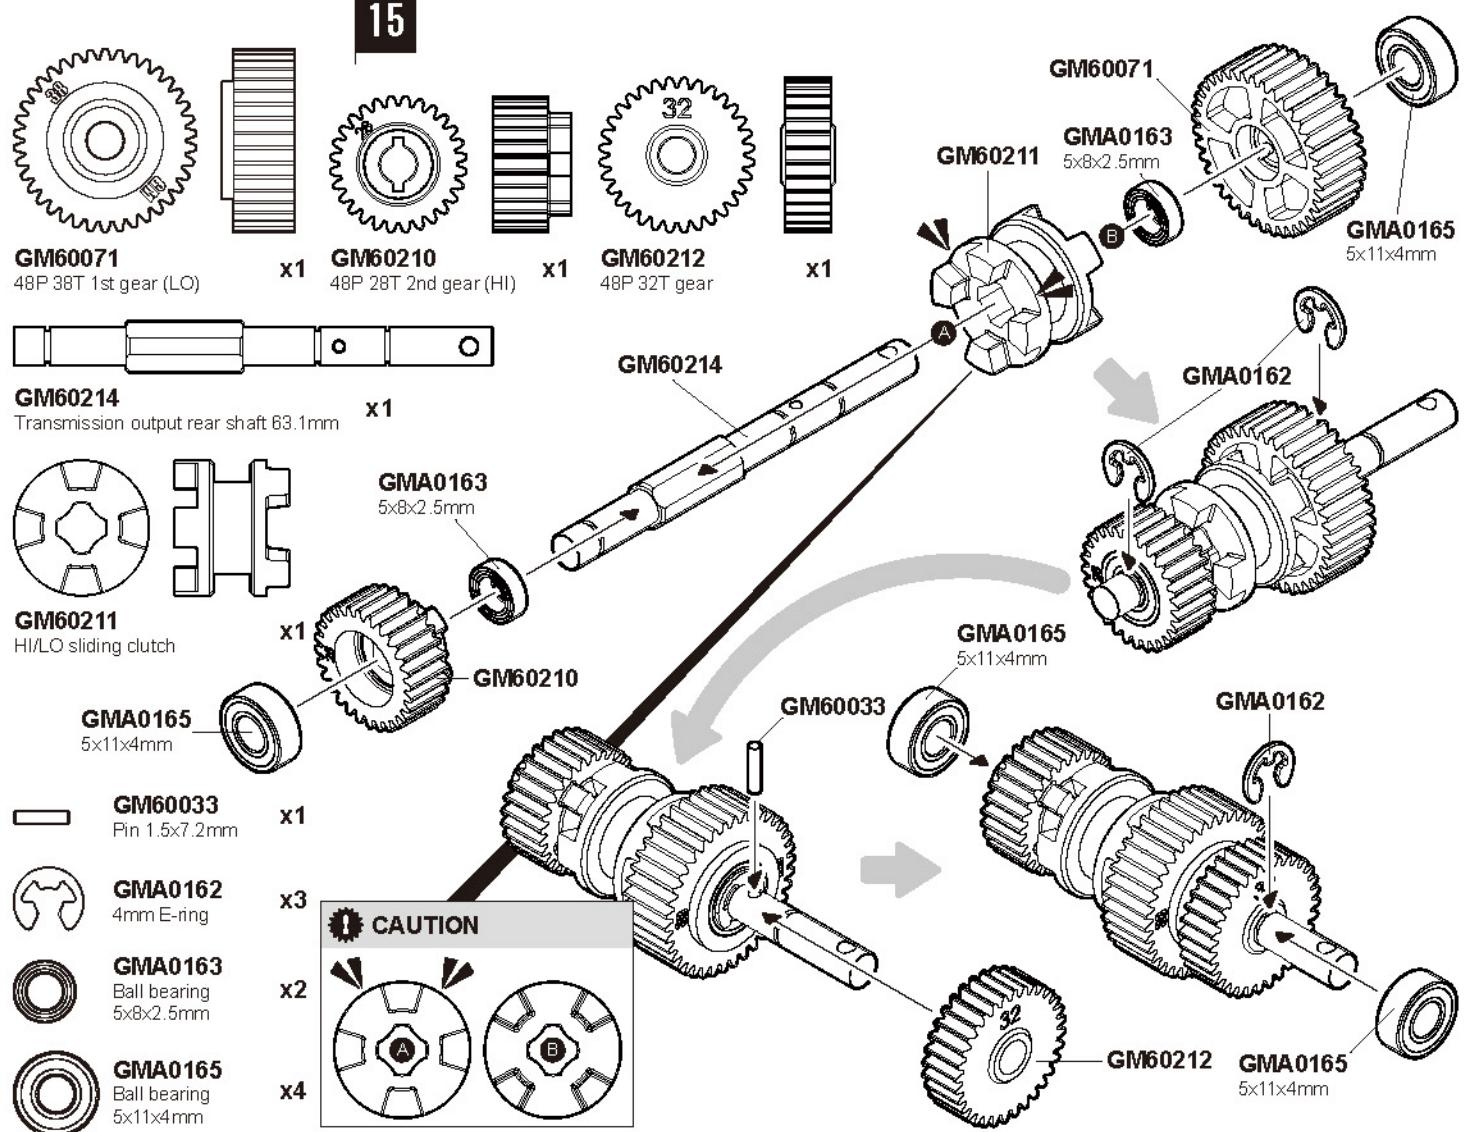

16

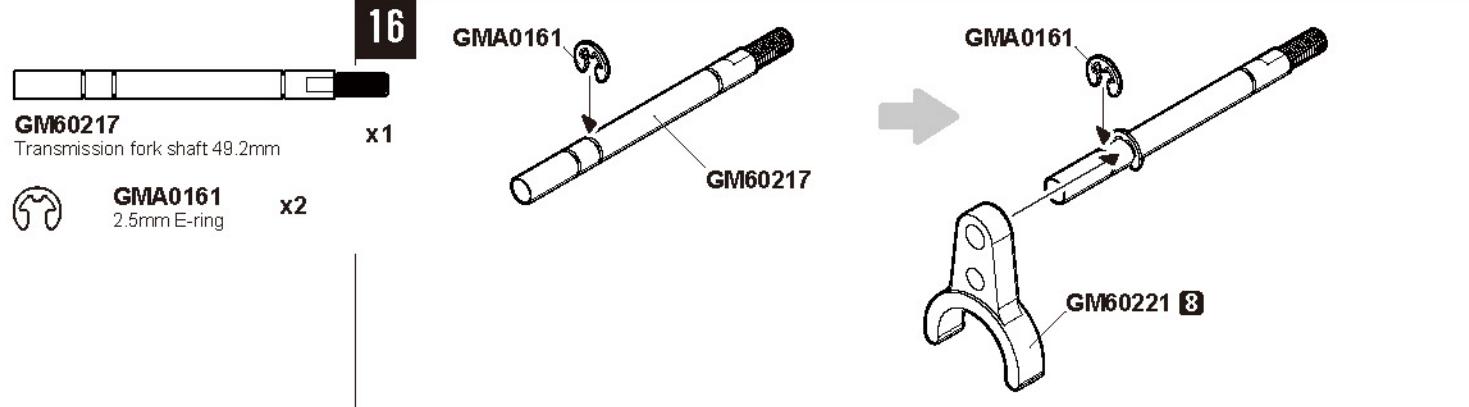


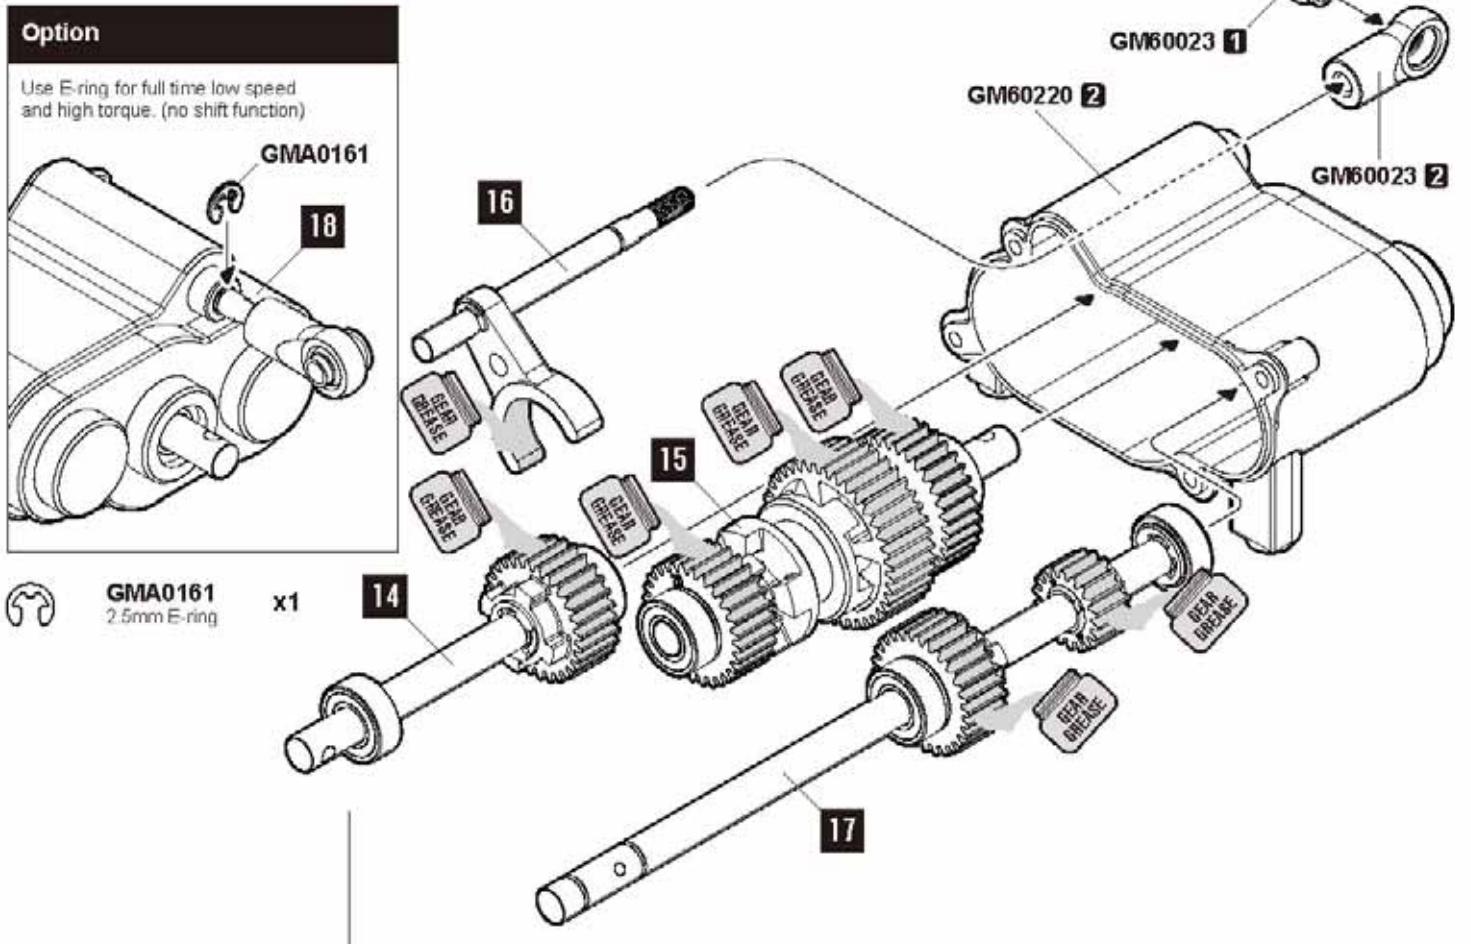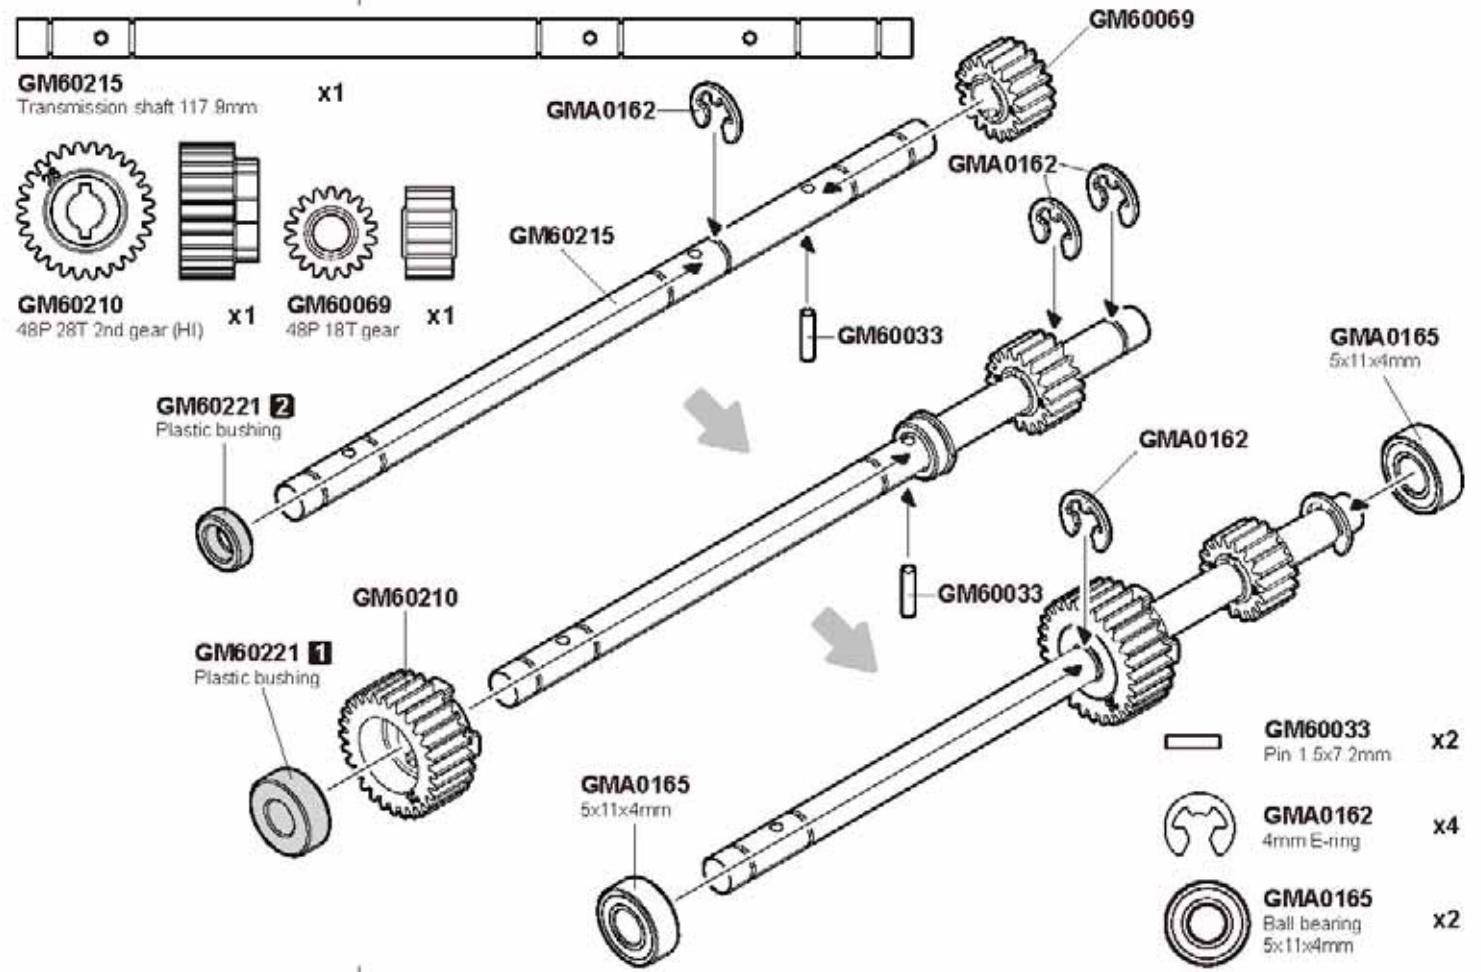



GMA0093
2.5x8mm Wrench bolt


x4

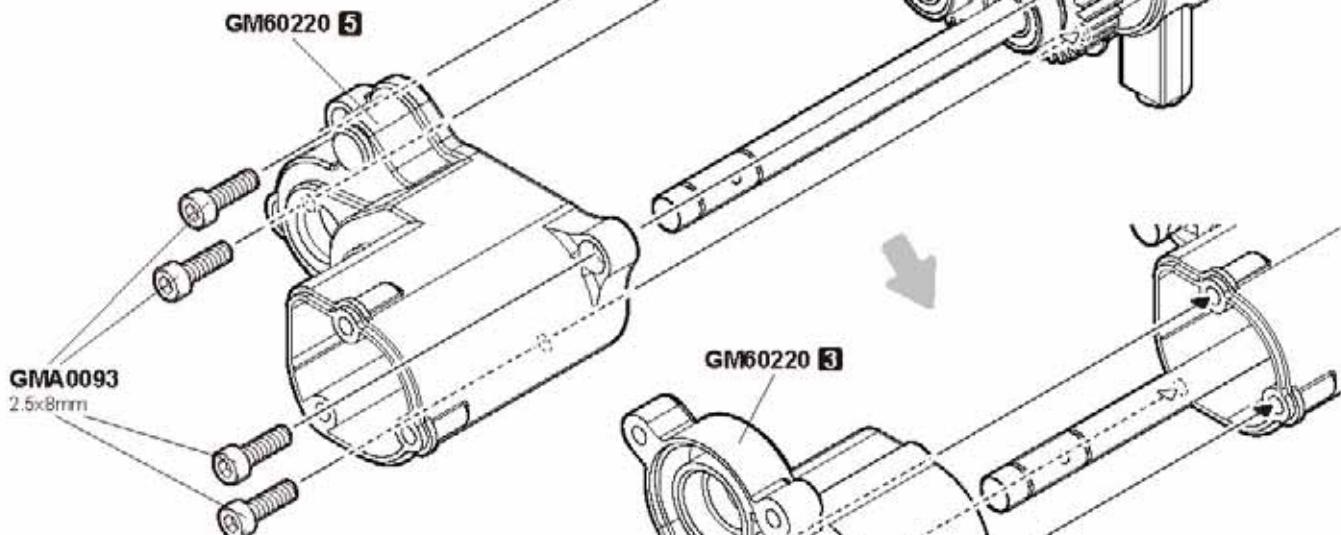


GMA0109
3x30mm Wrench bolt

x3

GMA0109
3x30mm

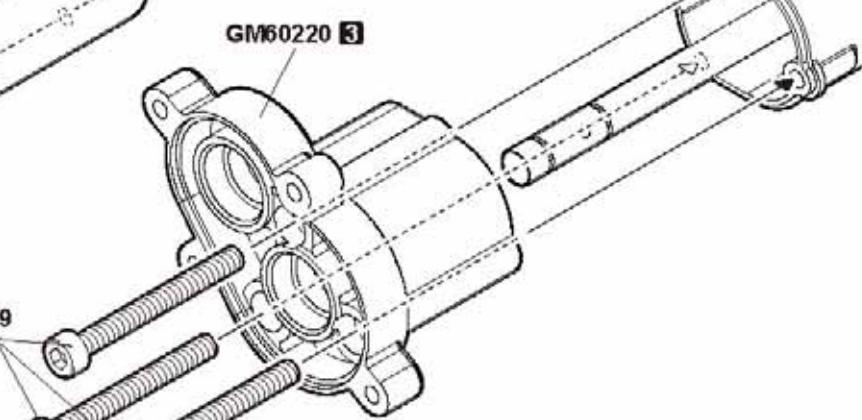

GMA0165
5x11x4mm

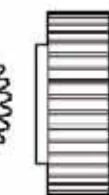

GM60071
48P 38T 1st gear (LO)

x1



GM60033
Pin 1.5x7.2mm

x1




GMA0162
4mm E-ring

x2




GMA0165
Ball bearing
5x11x4mm

x3

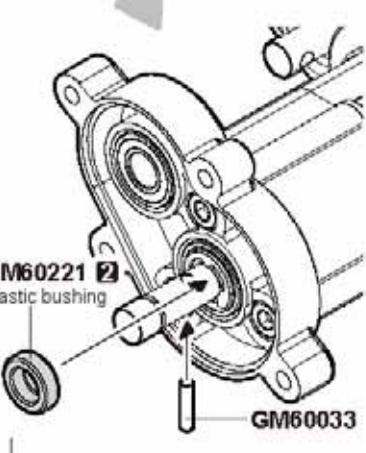

TRANSMISSION

20

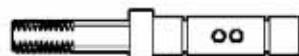

GM60216

Slipper shaft 37.0mm


GM60069
48P 18T gear

x1

x2

x1

x1

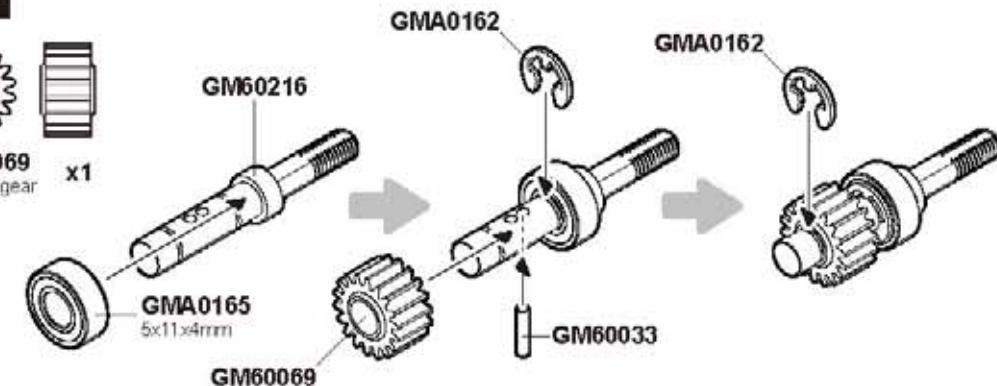

21



GMA0104

3x12mm Wrench bolt

x1



GMA0106

3x18mm Wrench bolt

x3



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1



x1




x1

x1



GMA0102
3x8mm Wrench bolt

x4

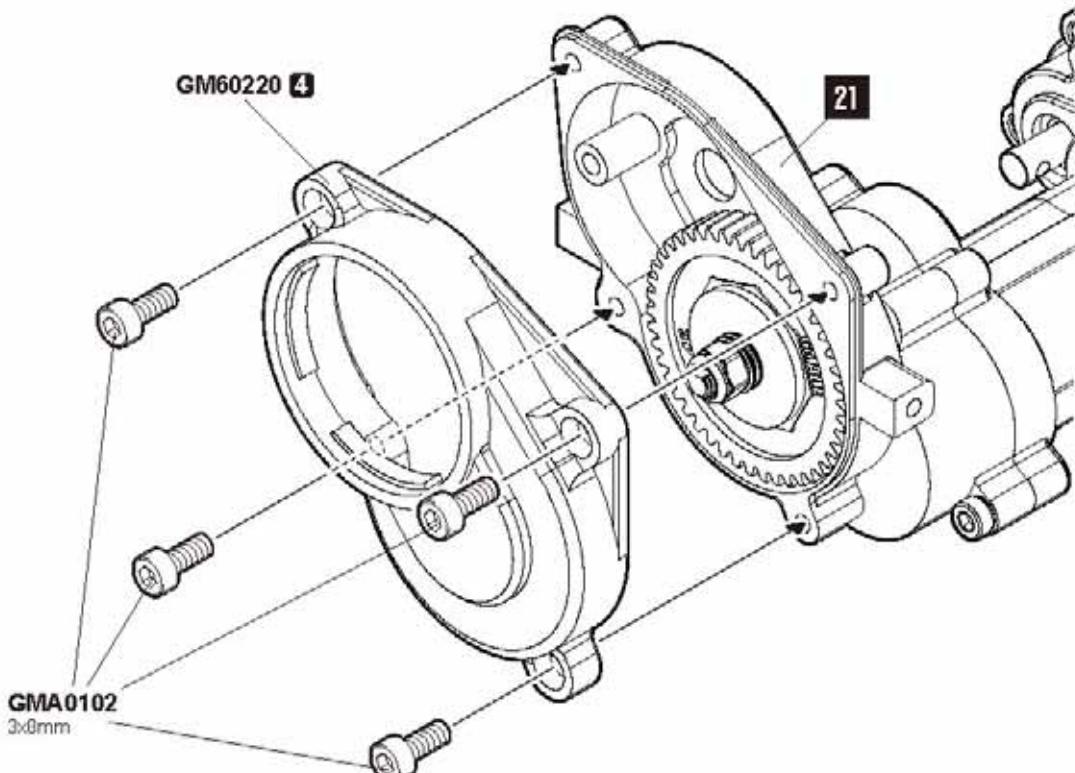

GM60072
32P 13T pinion gear



x1



GMA0019
3x10mm
Round head wrench bolt

x2




GMA0127
3x4mm Socket set screw

x1



GMA0156
M3 Nylon lock nut

x1

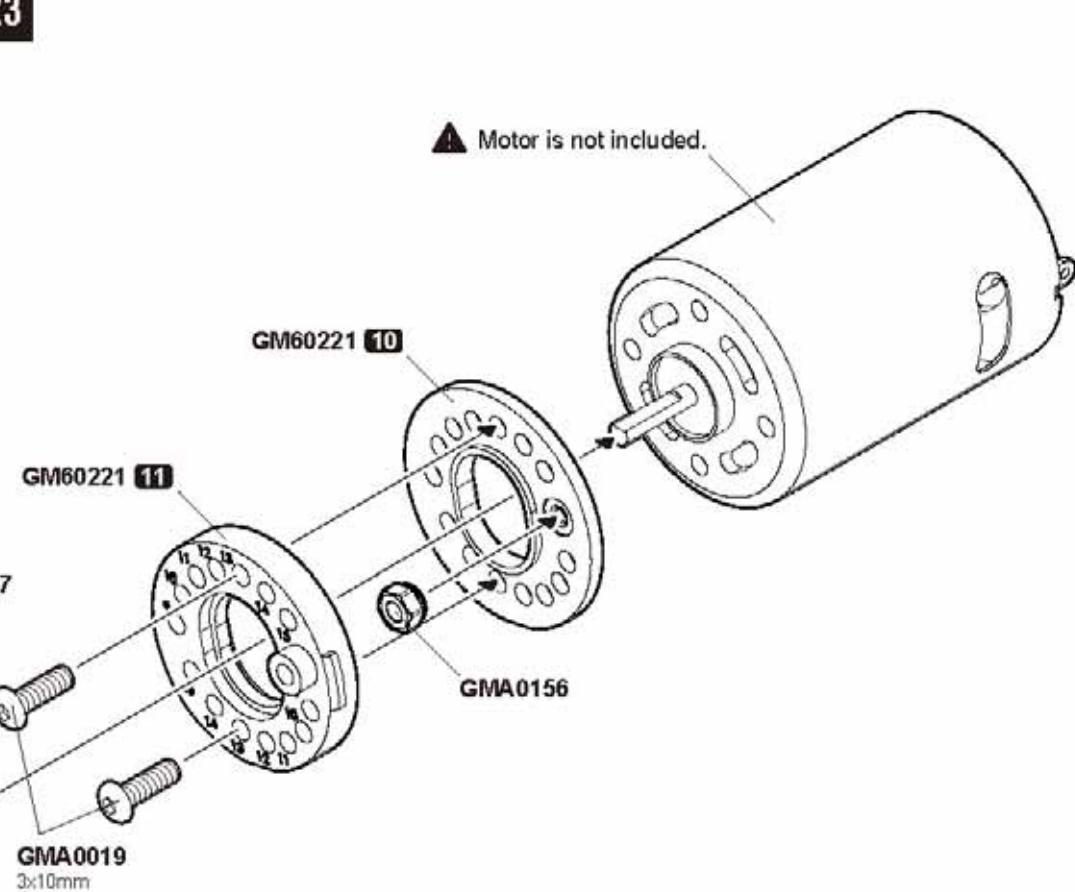


TRANSMISSION

24



GMA0107
3x20mm Wrench bolt

x1

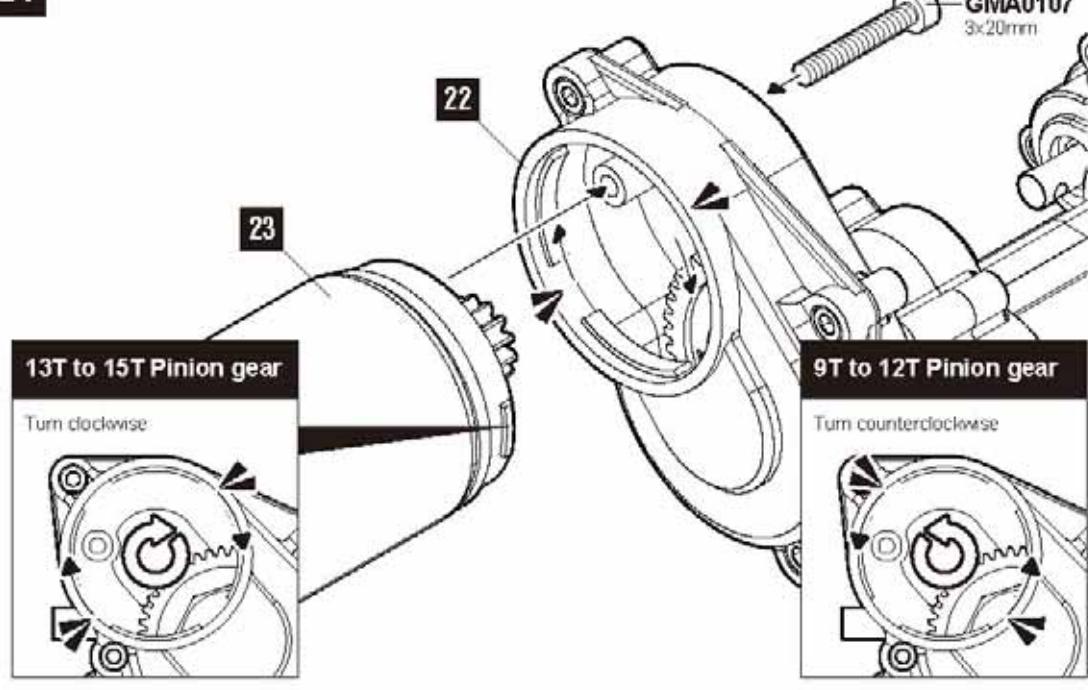

GMA0021
3x15mm
Round head wrench bolt


x1




GMA0158
3mm Washer

x1


25

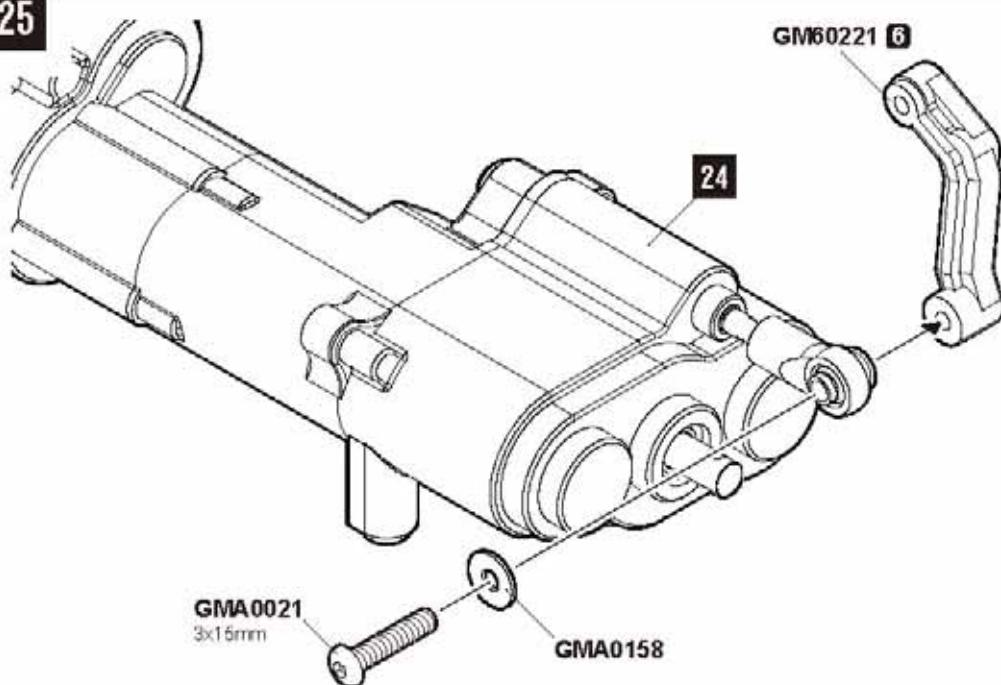


Low speed

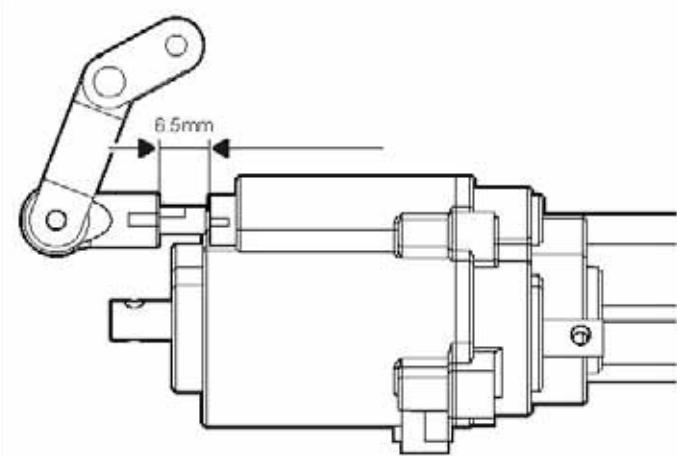



High speed

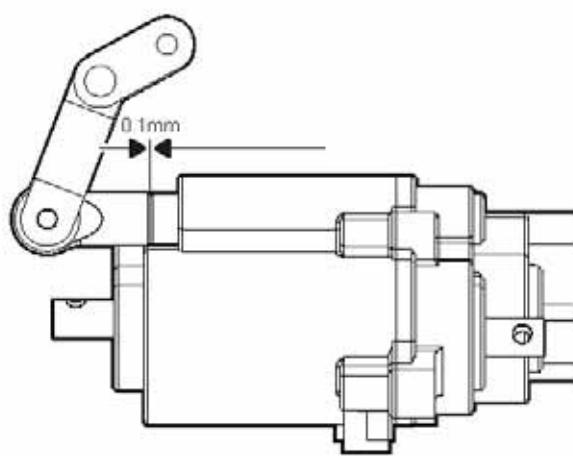

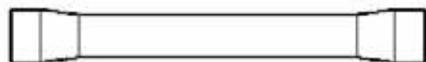FRONT UPPER LINK**26**



GM60089
Upper link M4x6.0x55mm
x1

GMA0145
4x20mm Socket set screw
x2

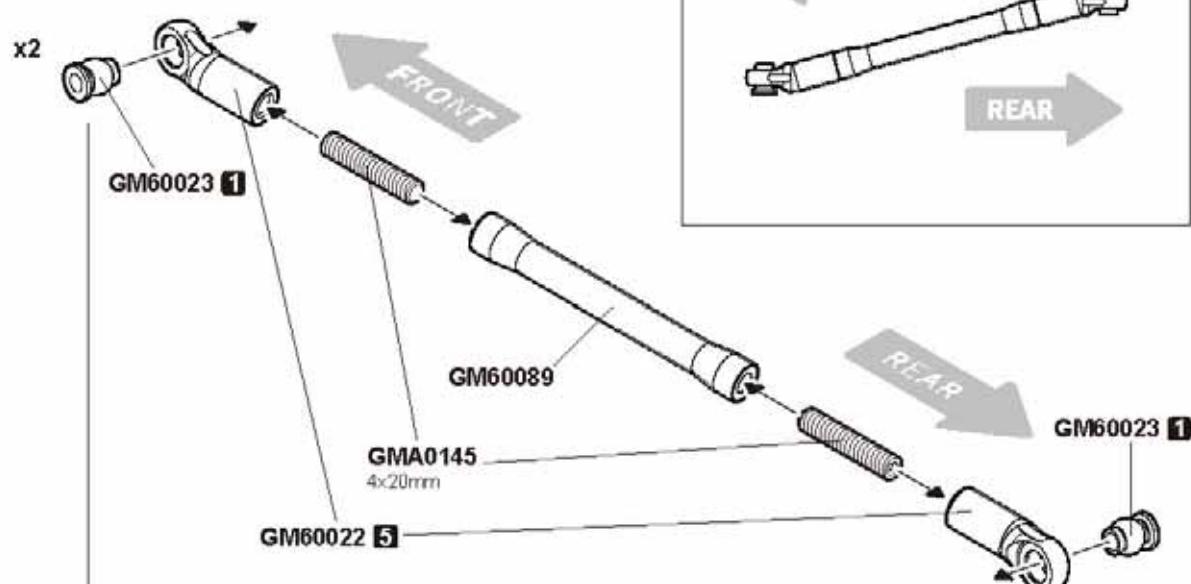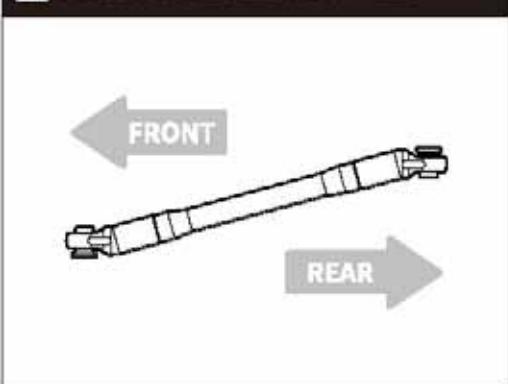**▲ FRONT UPPER LINK TOP VIEW****FRONT LOWER LINK****27**

GM60222
Lower link M4x6.8x78mm
x2

GMA0145
4x20mm Socket set screw
x4

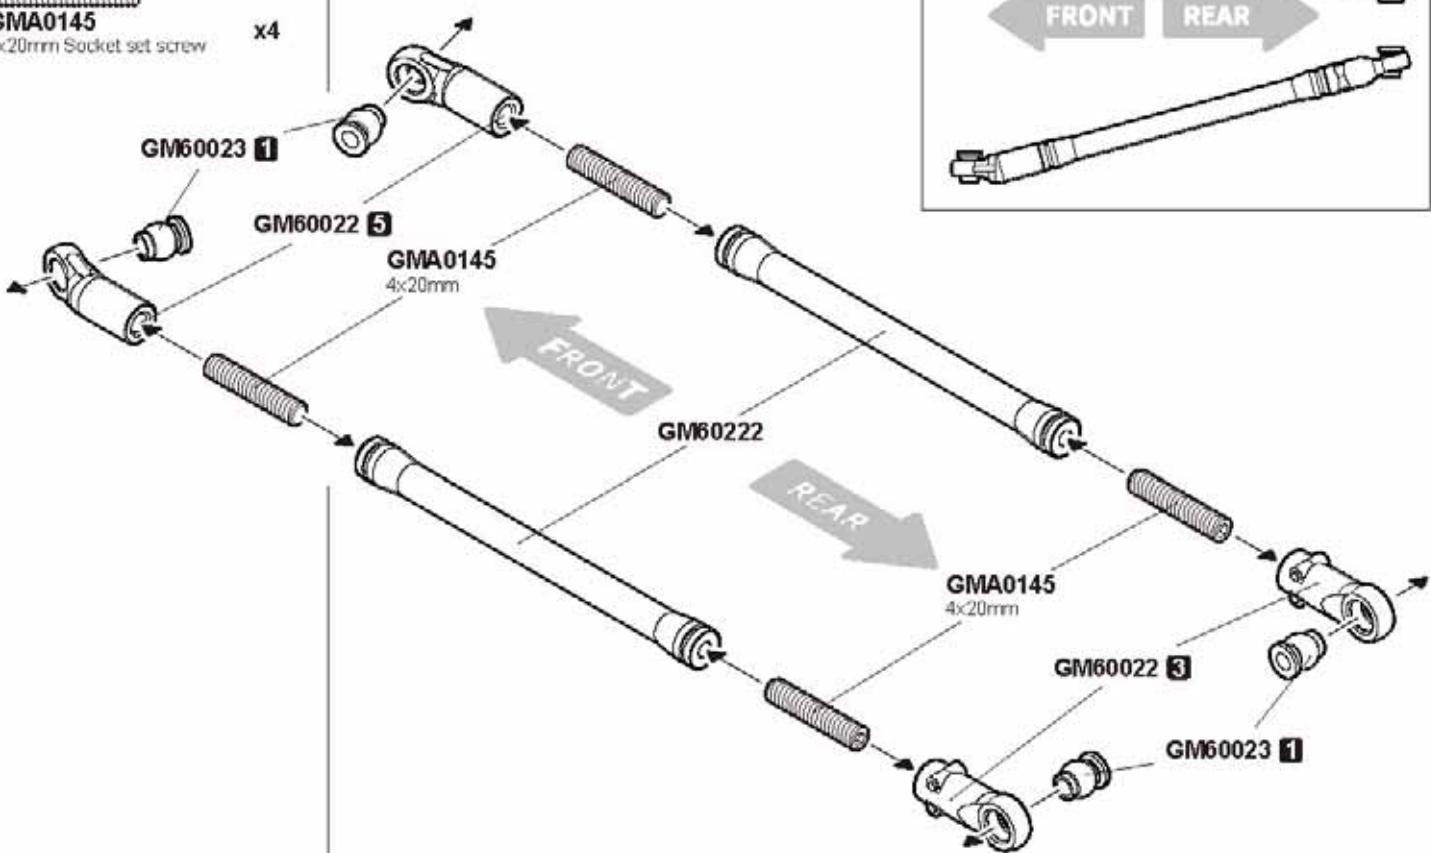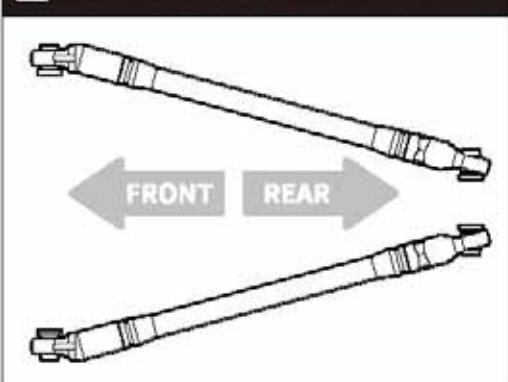
**▲ FRONT LOWER LINK TOP VIEW**

REAR UPPER LINK

28




GM60091
Upper link M4x6.8x98mm

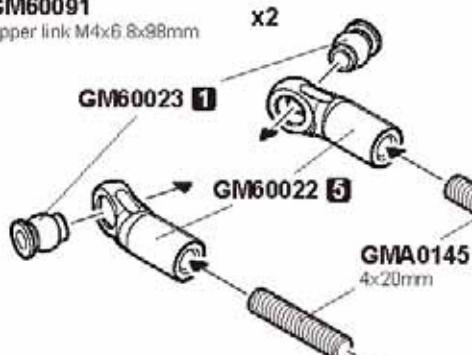

GMA0145
4x20mm Socket set screw

x4

REAR UPPER LINK TOP VIEW

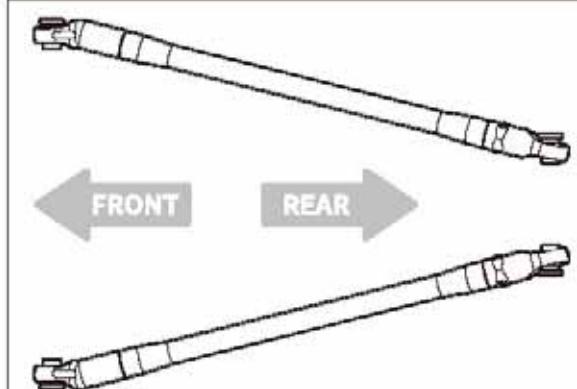


REAR LOWER LINK

29




GM60092
Lower link M4x6.8x100mm

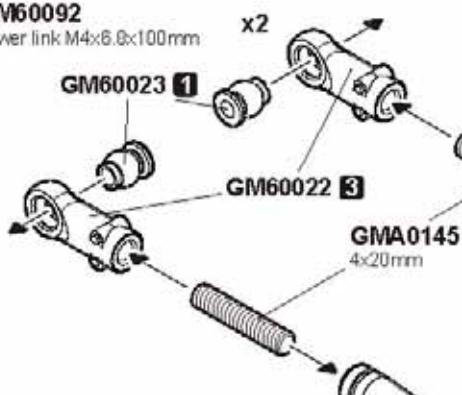

GMA0145
4x20mm Socket set screw

x4

REAR LOWER LINK TOP VIEW

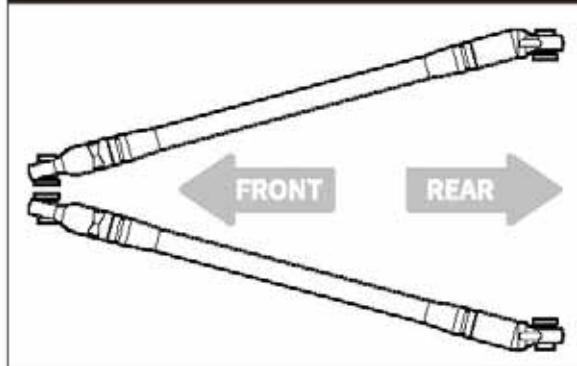

FRONT




REAR

FRONT

REAR

FRONT

REAR

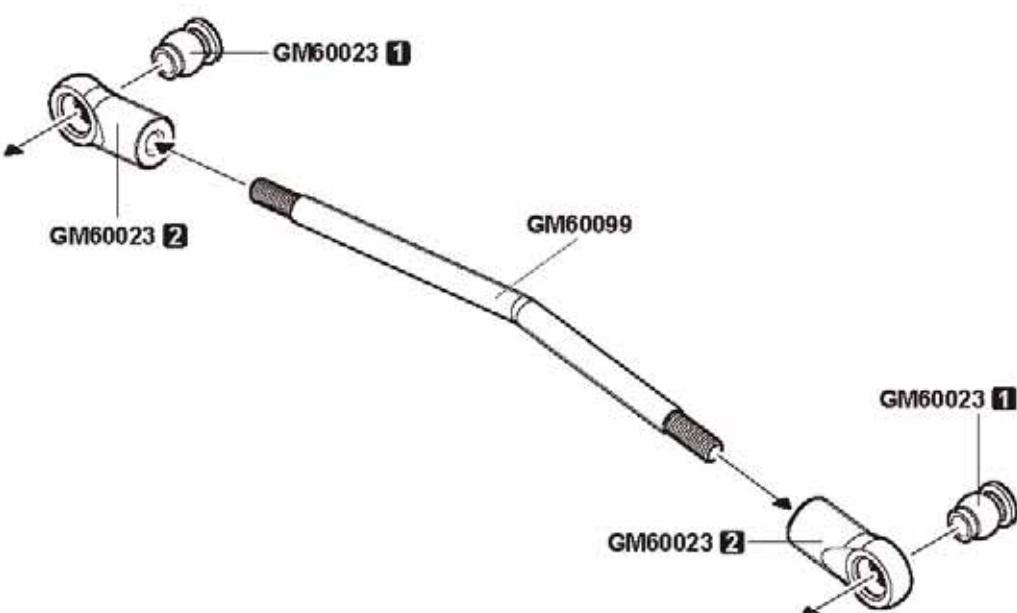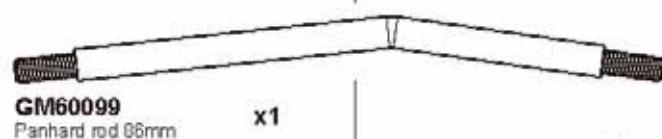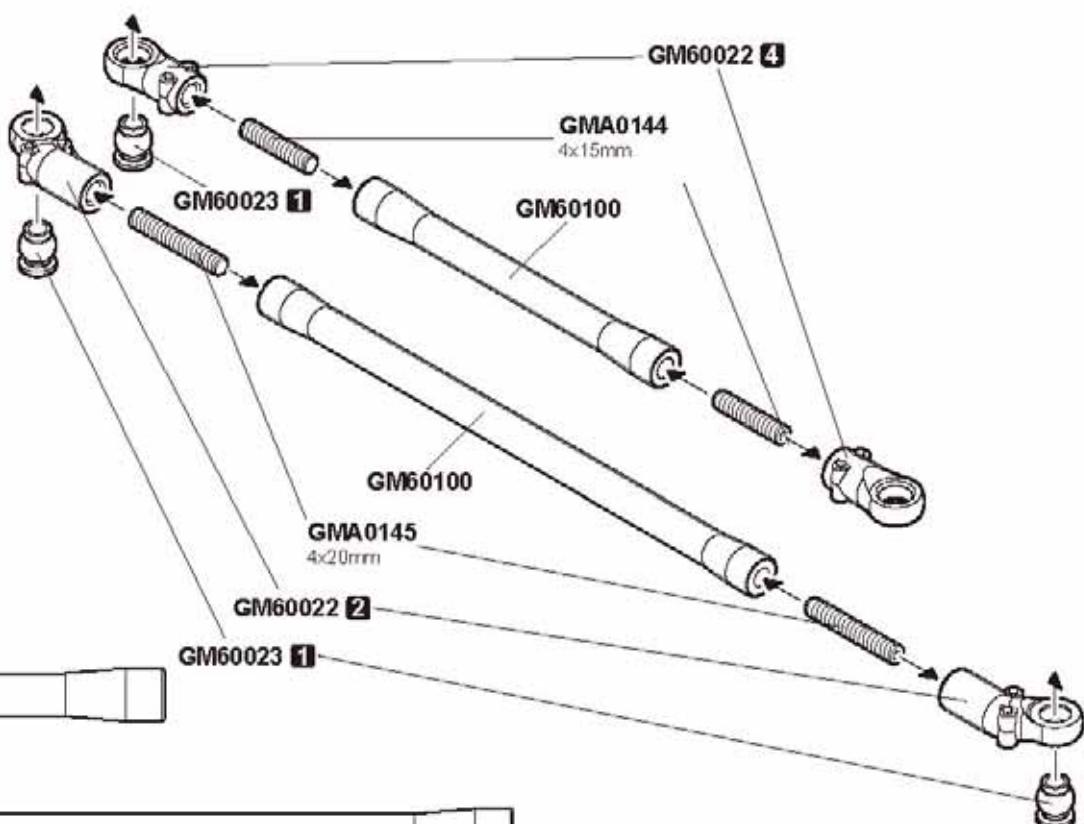PANHARD ROD**30****STEERING ROD****31**

GMA0144
4x15mm Socket set screw

GMA0145
4x20mm Socket set screw



GM60100
Steering rod M4x6.0x69mm



GM60100
Steering rod M4x6.0x115mm


SHOCK ABSORBER

32

▲ MAKE X 4



x4

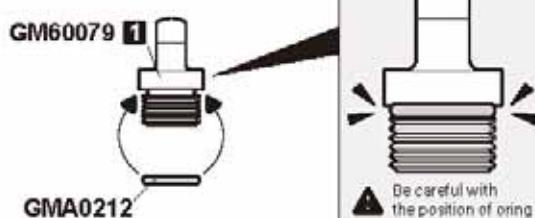

x4

33

▲ MAKE X 4




x8



x4




x4

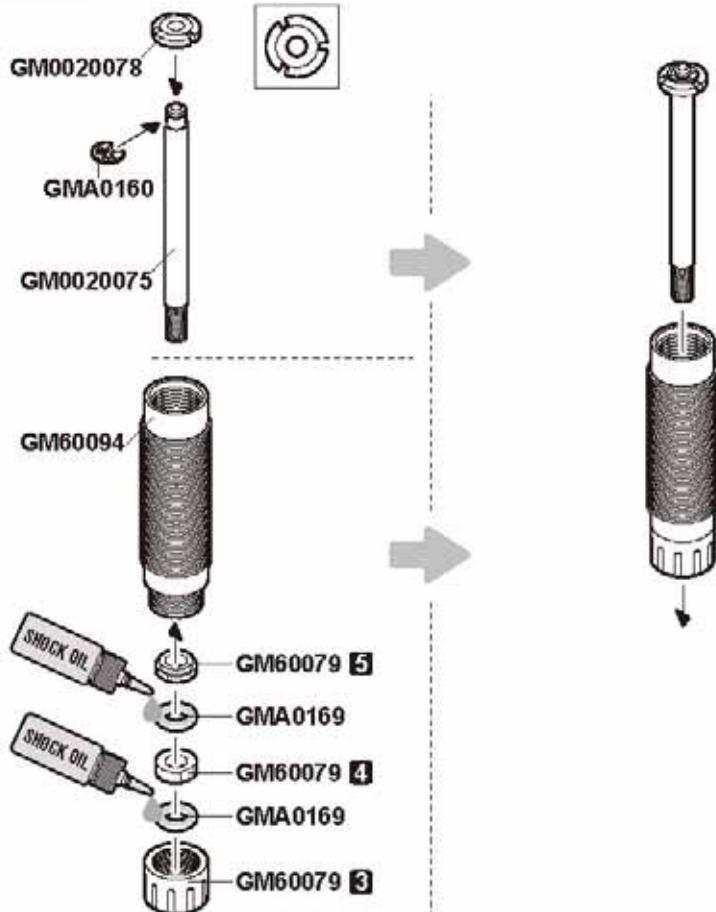


34

▲ MAKE X 4

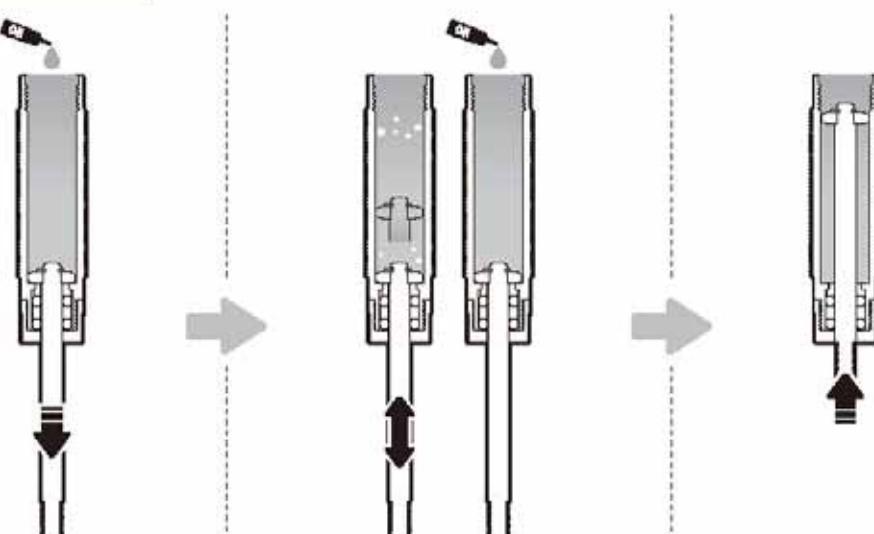


SLOWER REBOUND AND FASTER COMPRESSION

FASTER REBOUND AND SLOWER COMPRESSION

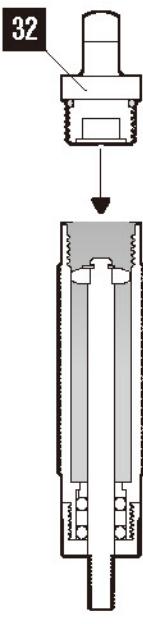


Push up the shock shaft slowly to the top and close the cap.

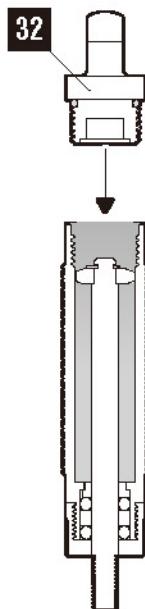

1mm space the cap.


Pull down the shock shaft slowly to the bottom.

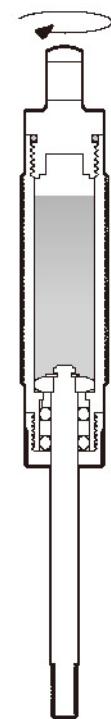

close the cap.

35

▲ MAKE X 4

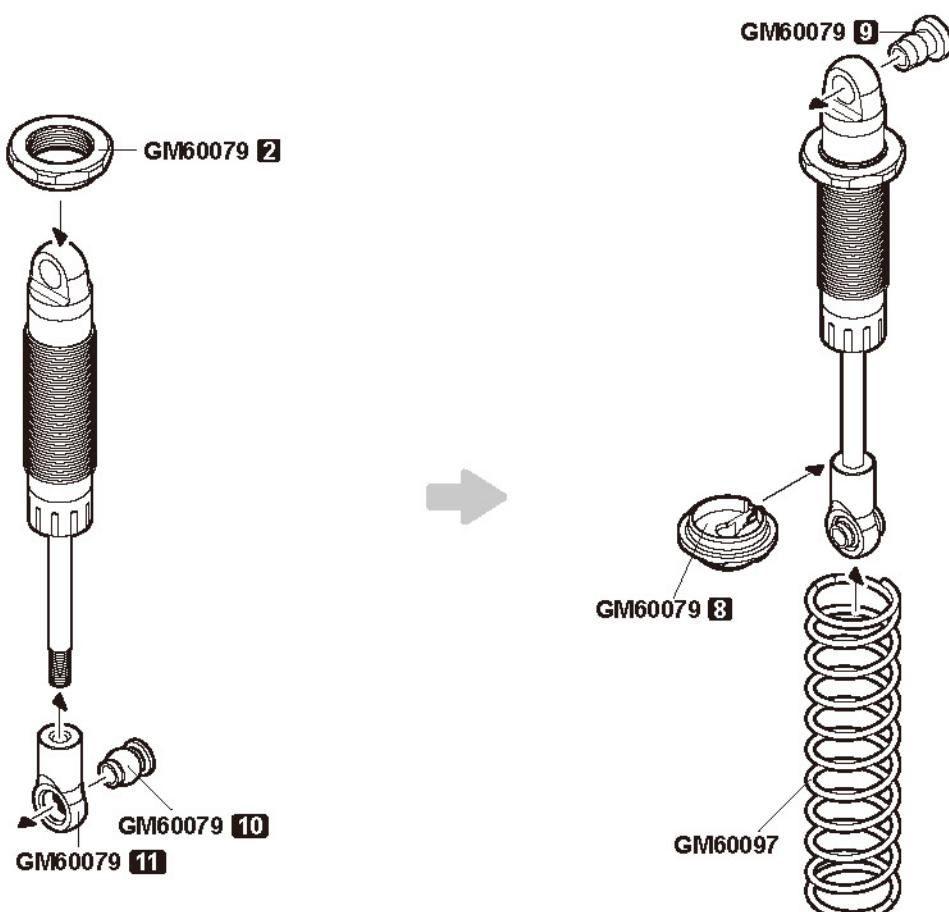



GMA0018
3x8mm
Round head wrench bolt

x1



GMA0020
3x12mm
Round head wrench bolt

x4





GMA0154
M3 Nut

x1




GM60093
5.0mm ball stud M3x5mm

x1

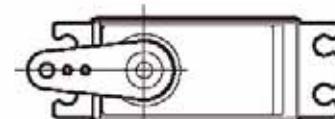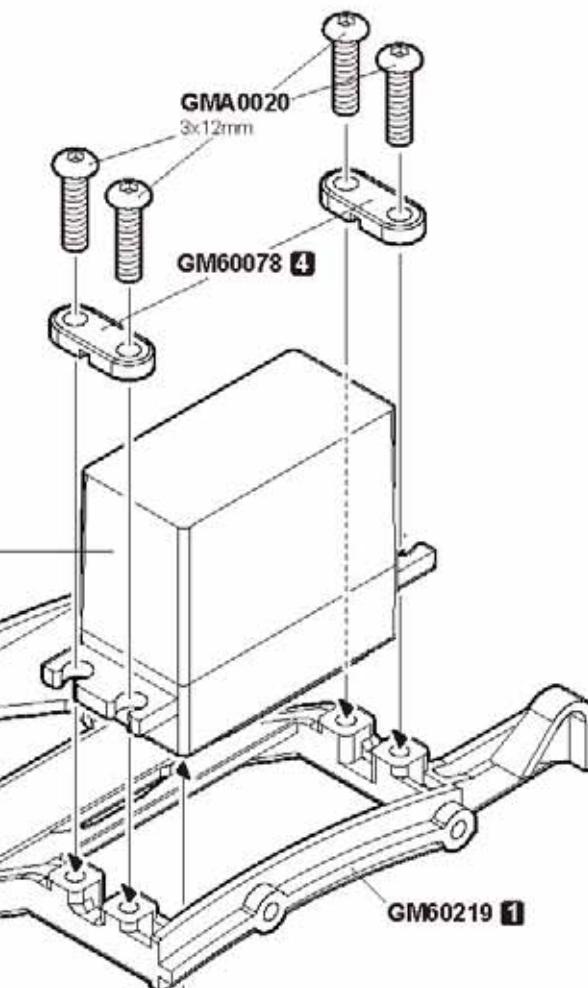


⚠ Set to the neutral position
before attaching the servo
horn to the servo.


SERVO HORN

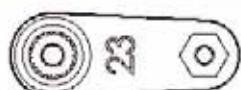

GM60078 5


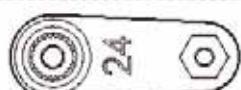


GM60078 6

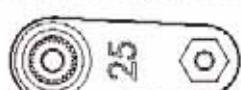

GM60078 7


GMA0154

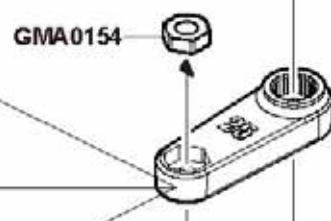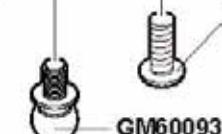GMA0018
3x8mm

GM60093

**GMA0019**3x10mm
Round head wrench bolt**GMA0021**3x15mm
Round head wrench bolt**GMA0058**

3x10mm Flat head wrench bolt

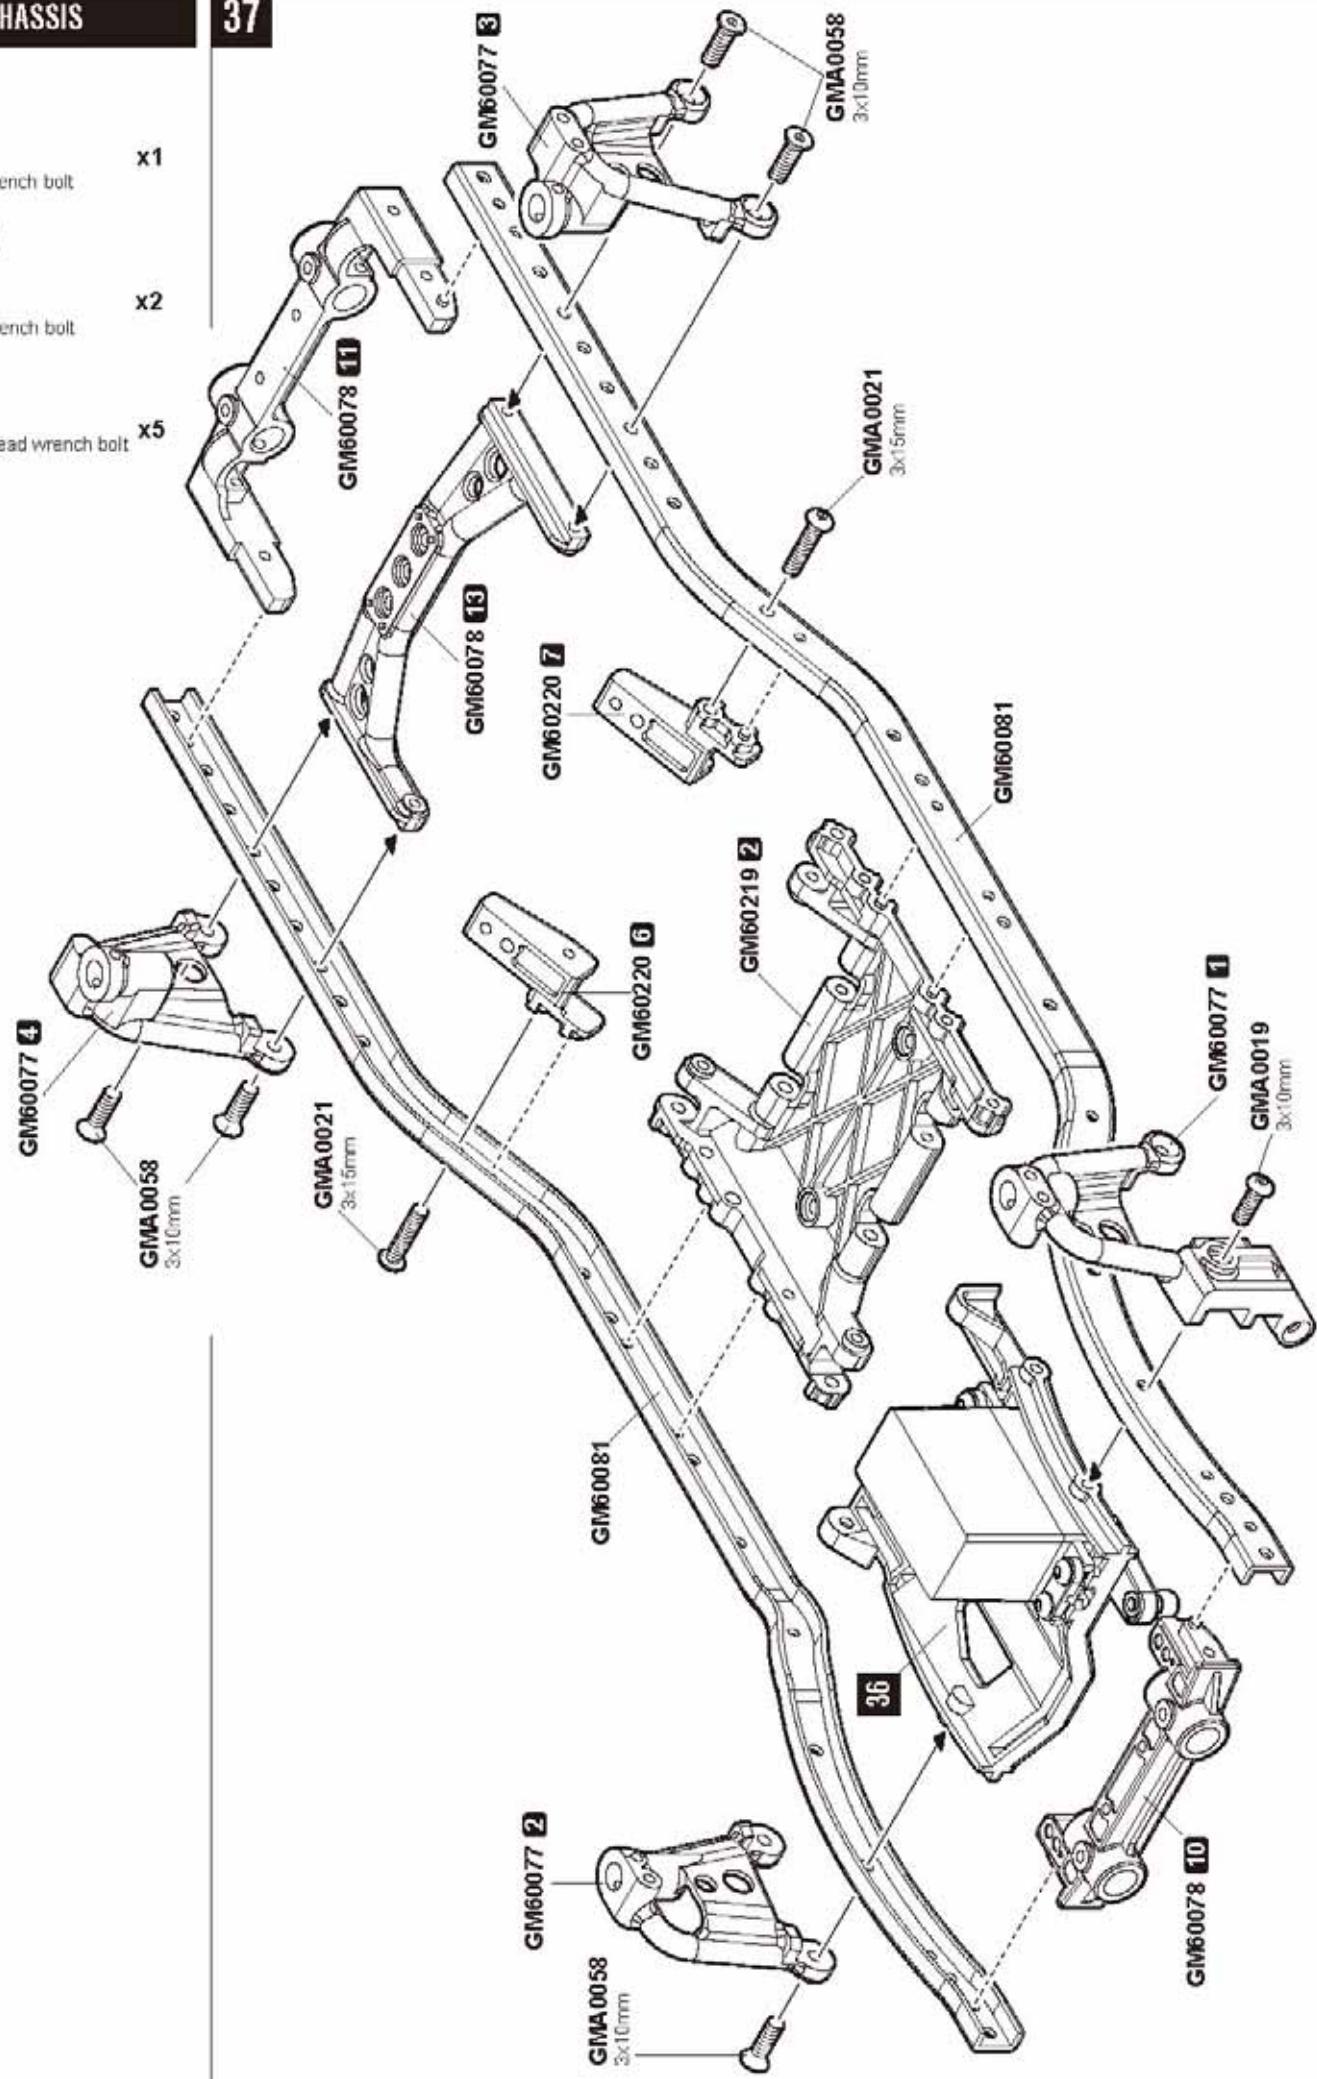

**GMA0018**3x8mm
Round head wrench bolt


x3

**GMA0019**3x10mm
Round head wrench bolt

x1

**GMA0021**3x15mm
Round head wrench bolt


x1

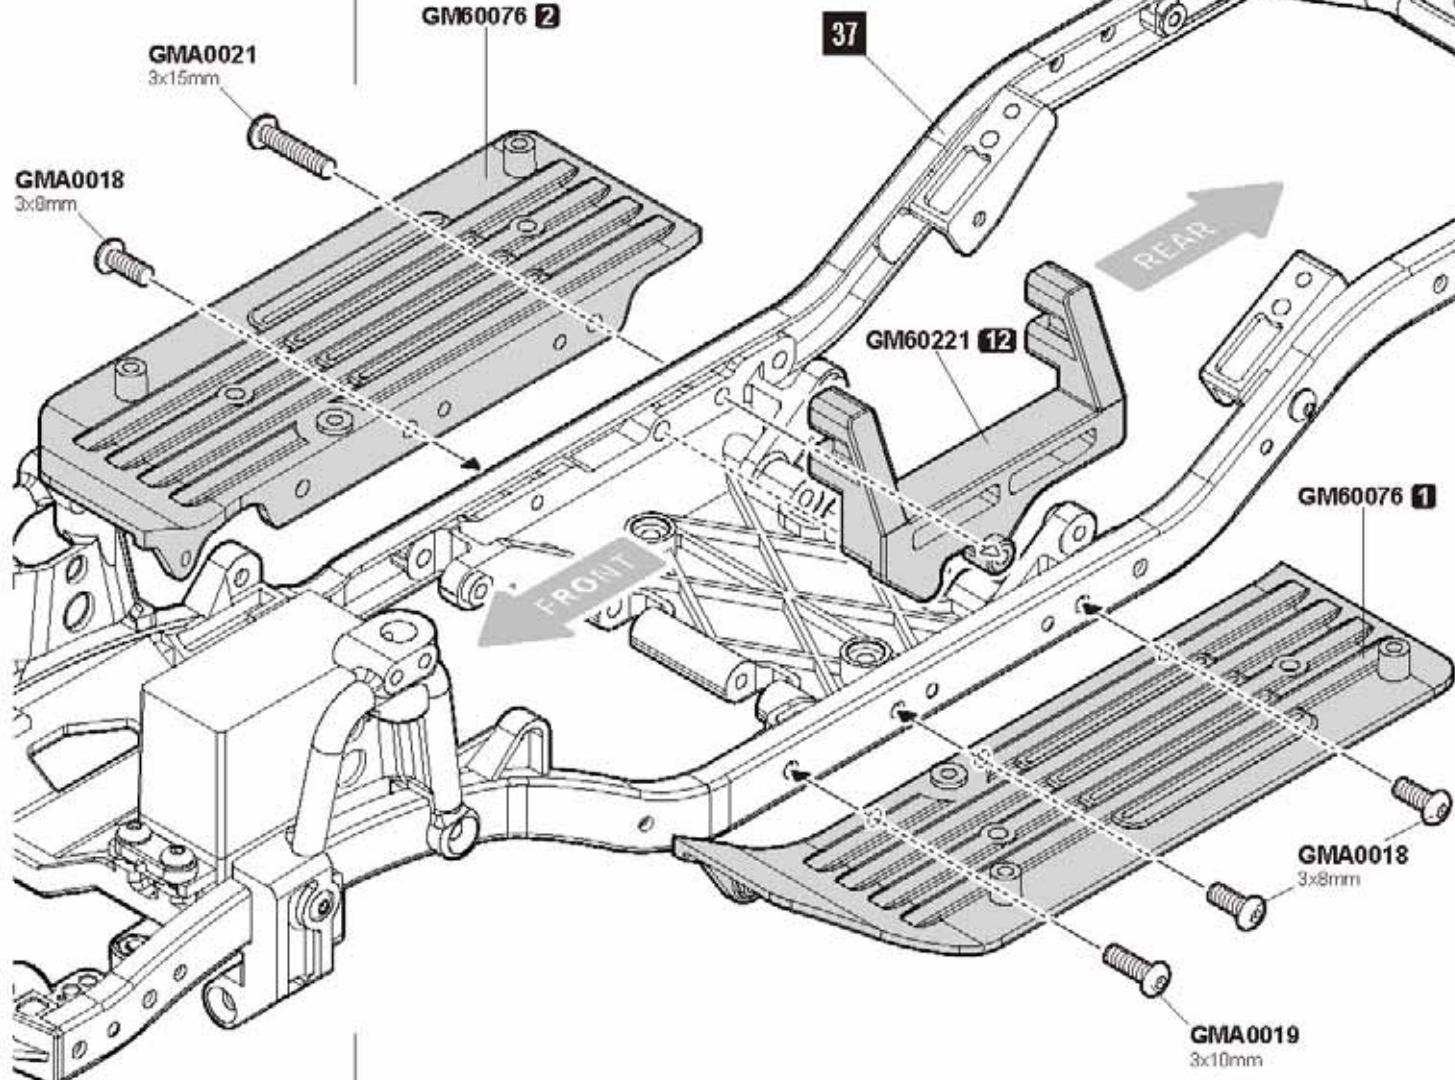

FRONT UNIVERSAL SHAFT

39


	GMA0126	x1
	3x3mm Socket set screw	
	GMA0057	x1
	3x8mm Flat head wrench bolt	
	GM60101	x1
	Universal joint cup	
	GM60119	x1
	Universal joint drive coupler	
	GM60065	x1
	Pin 2x11.4mm	

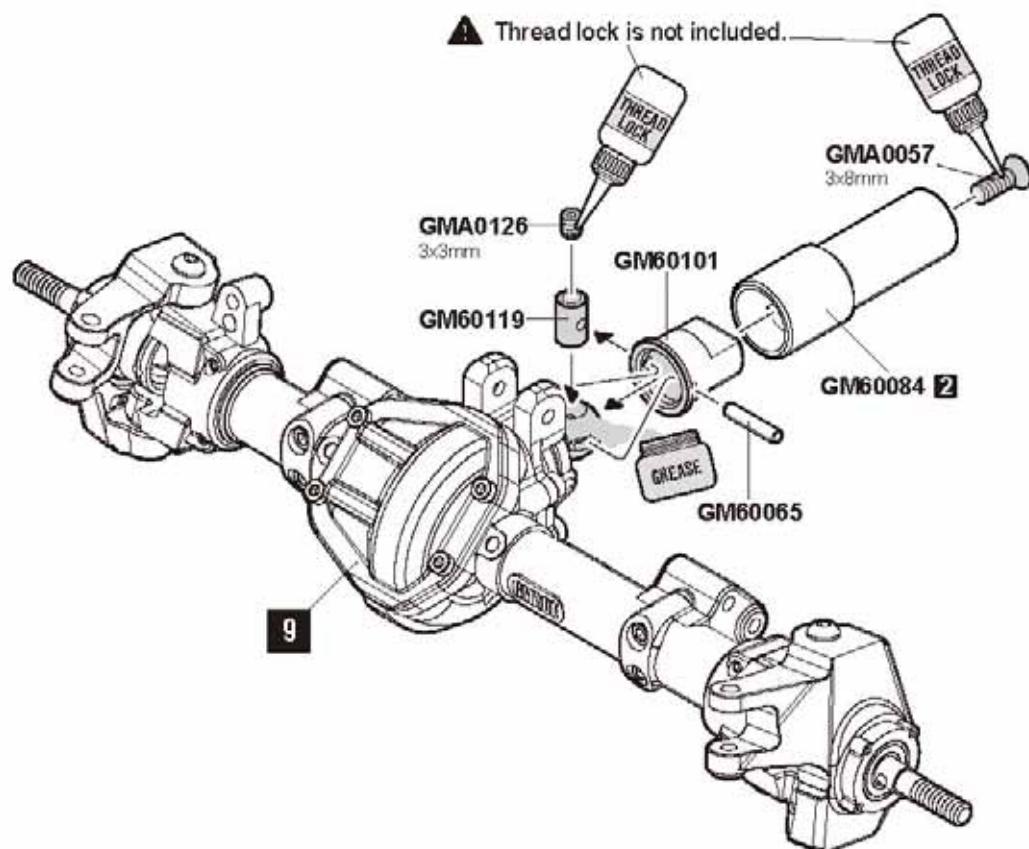

REAR UNIVERSAL SHAFT

40


	GMA0126	x1
	3x3mm Socket set screw	
	GMA0057	x1
	3x8mm Flat head wrench bolt	
	GM60101	x1
	Universal joint cup	
	GM60119	x1
	Universal joint drive coupler	
	GM60065	x1
	Pin 2x11.4mm	

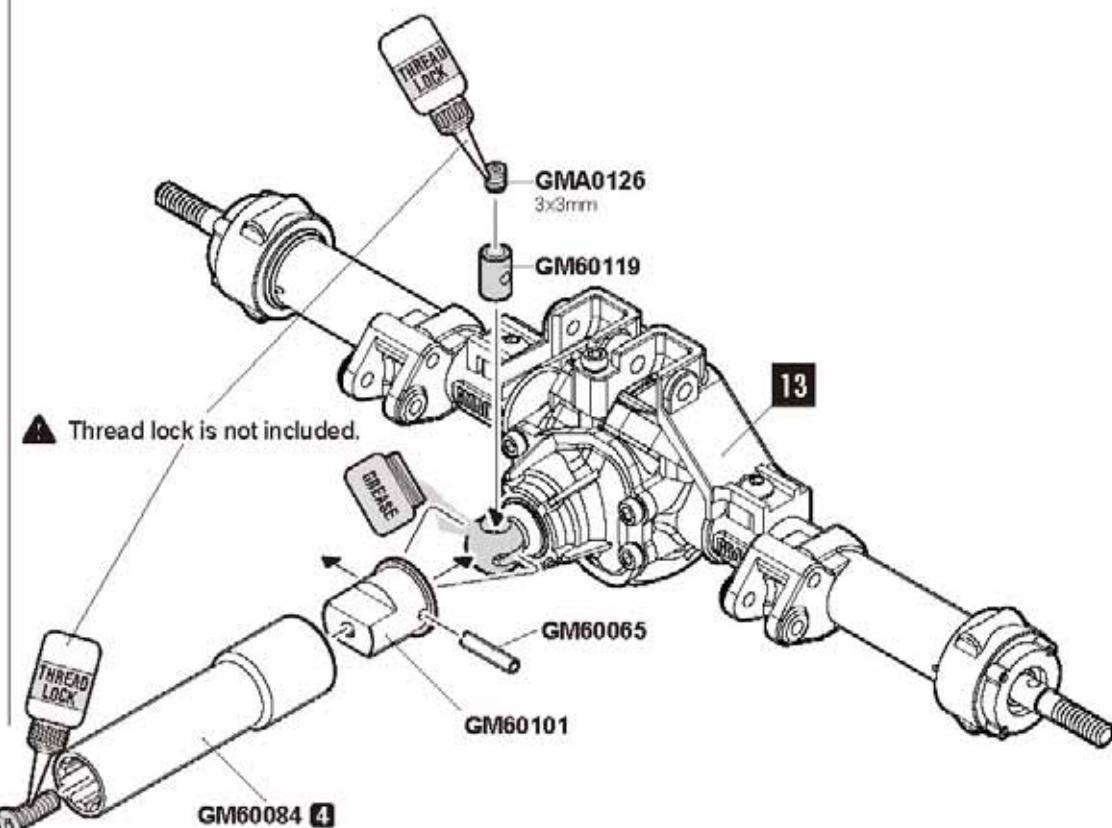

CHASSIS

41

	GMA0126	x2
	3x3mm Socket set screw	
	GMA0057	x2
	3x8mm Flat head wrench bolt	
	GM60101	x2
	Universal joint	
	GM60101	x2
	Universal joint cup	
	GM60119	x2
	Universal joint drive coupler	
	GM60065	x2
	Pin 2x11.4mm	
	GM60103	x2
	3x10mm Screw pin	

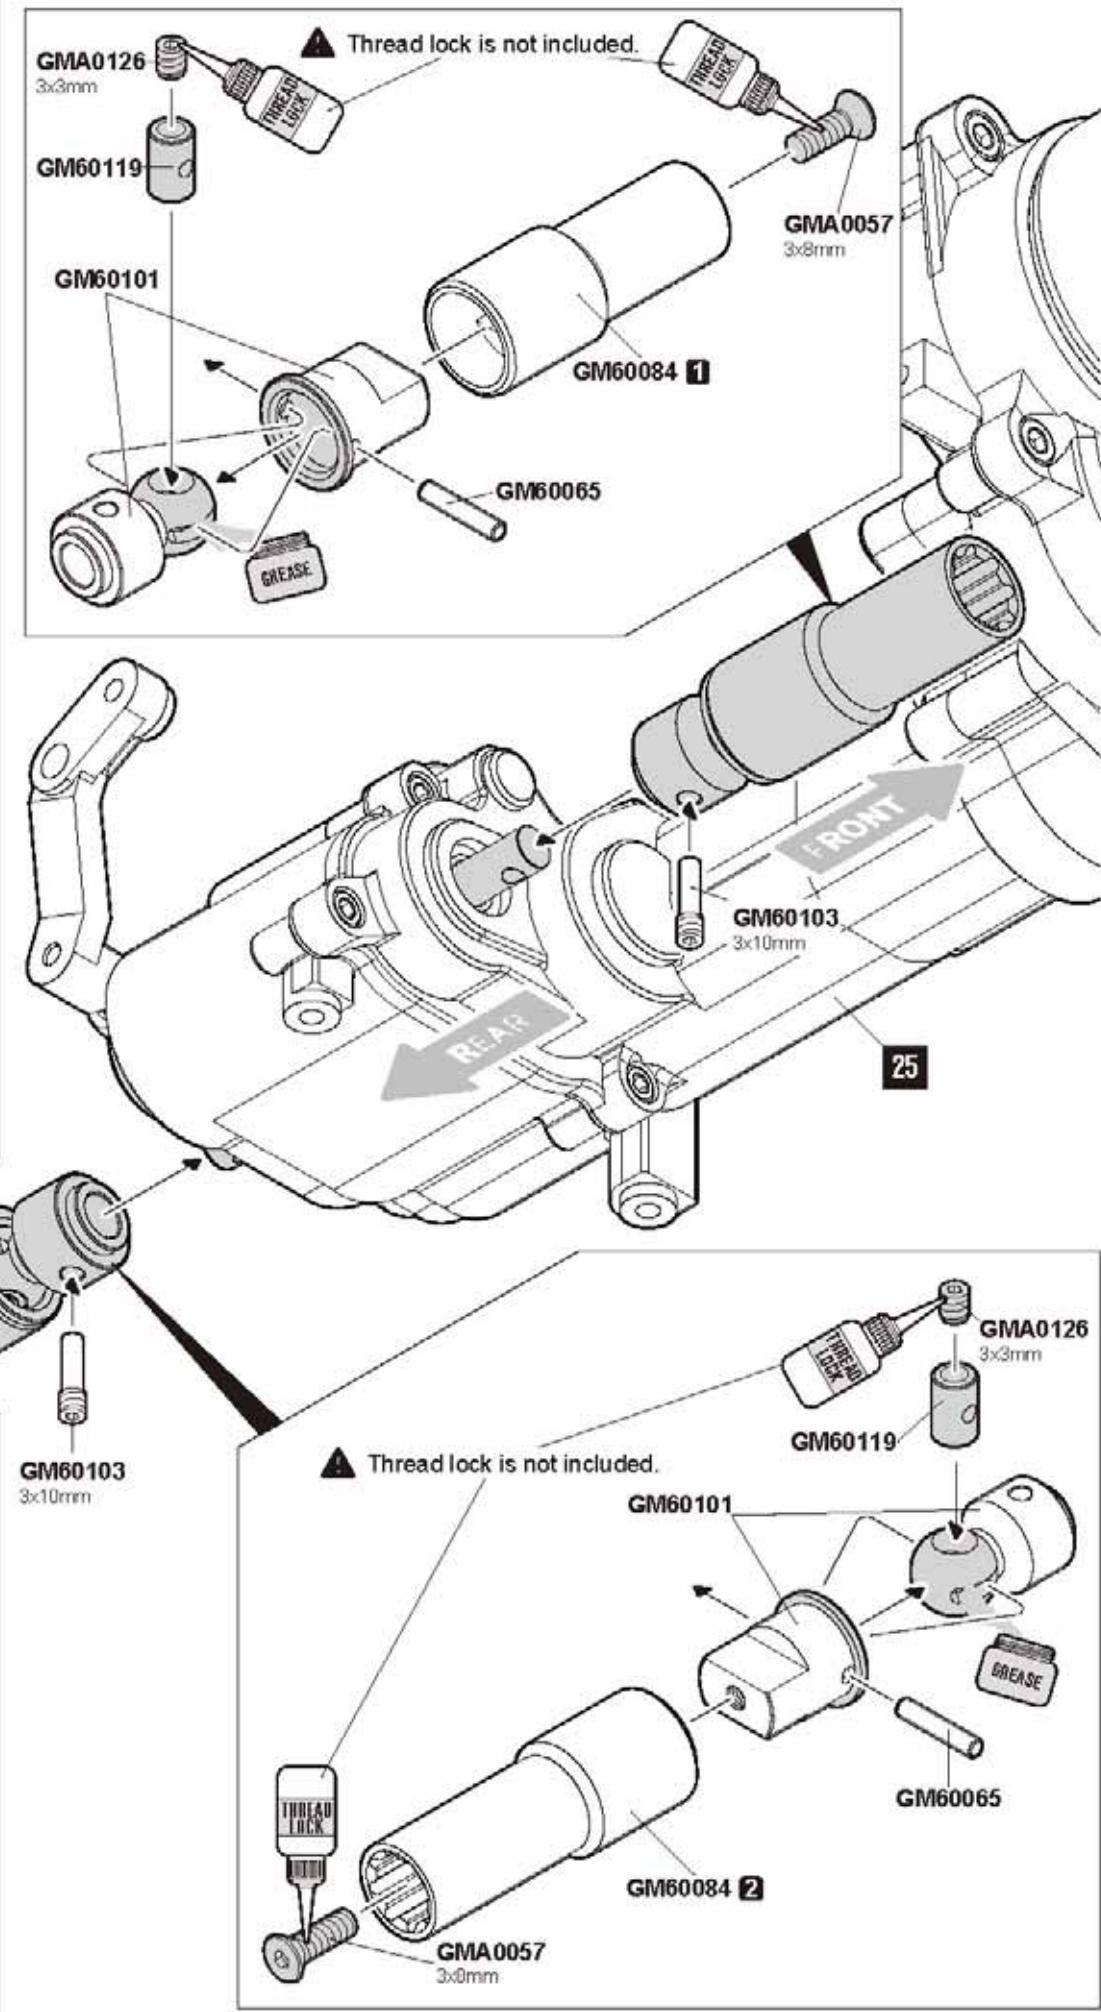




GMA0102
3x8mm Wrench bolt

x2



GMA0059
3x12mm Flat head wrench bolt

x2

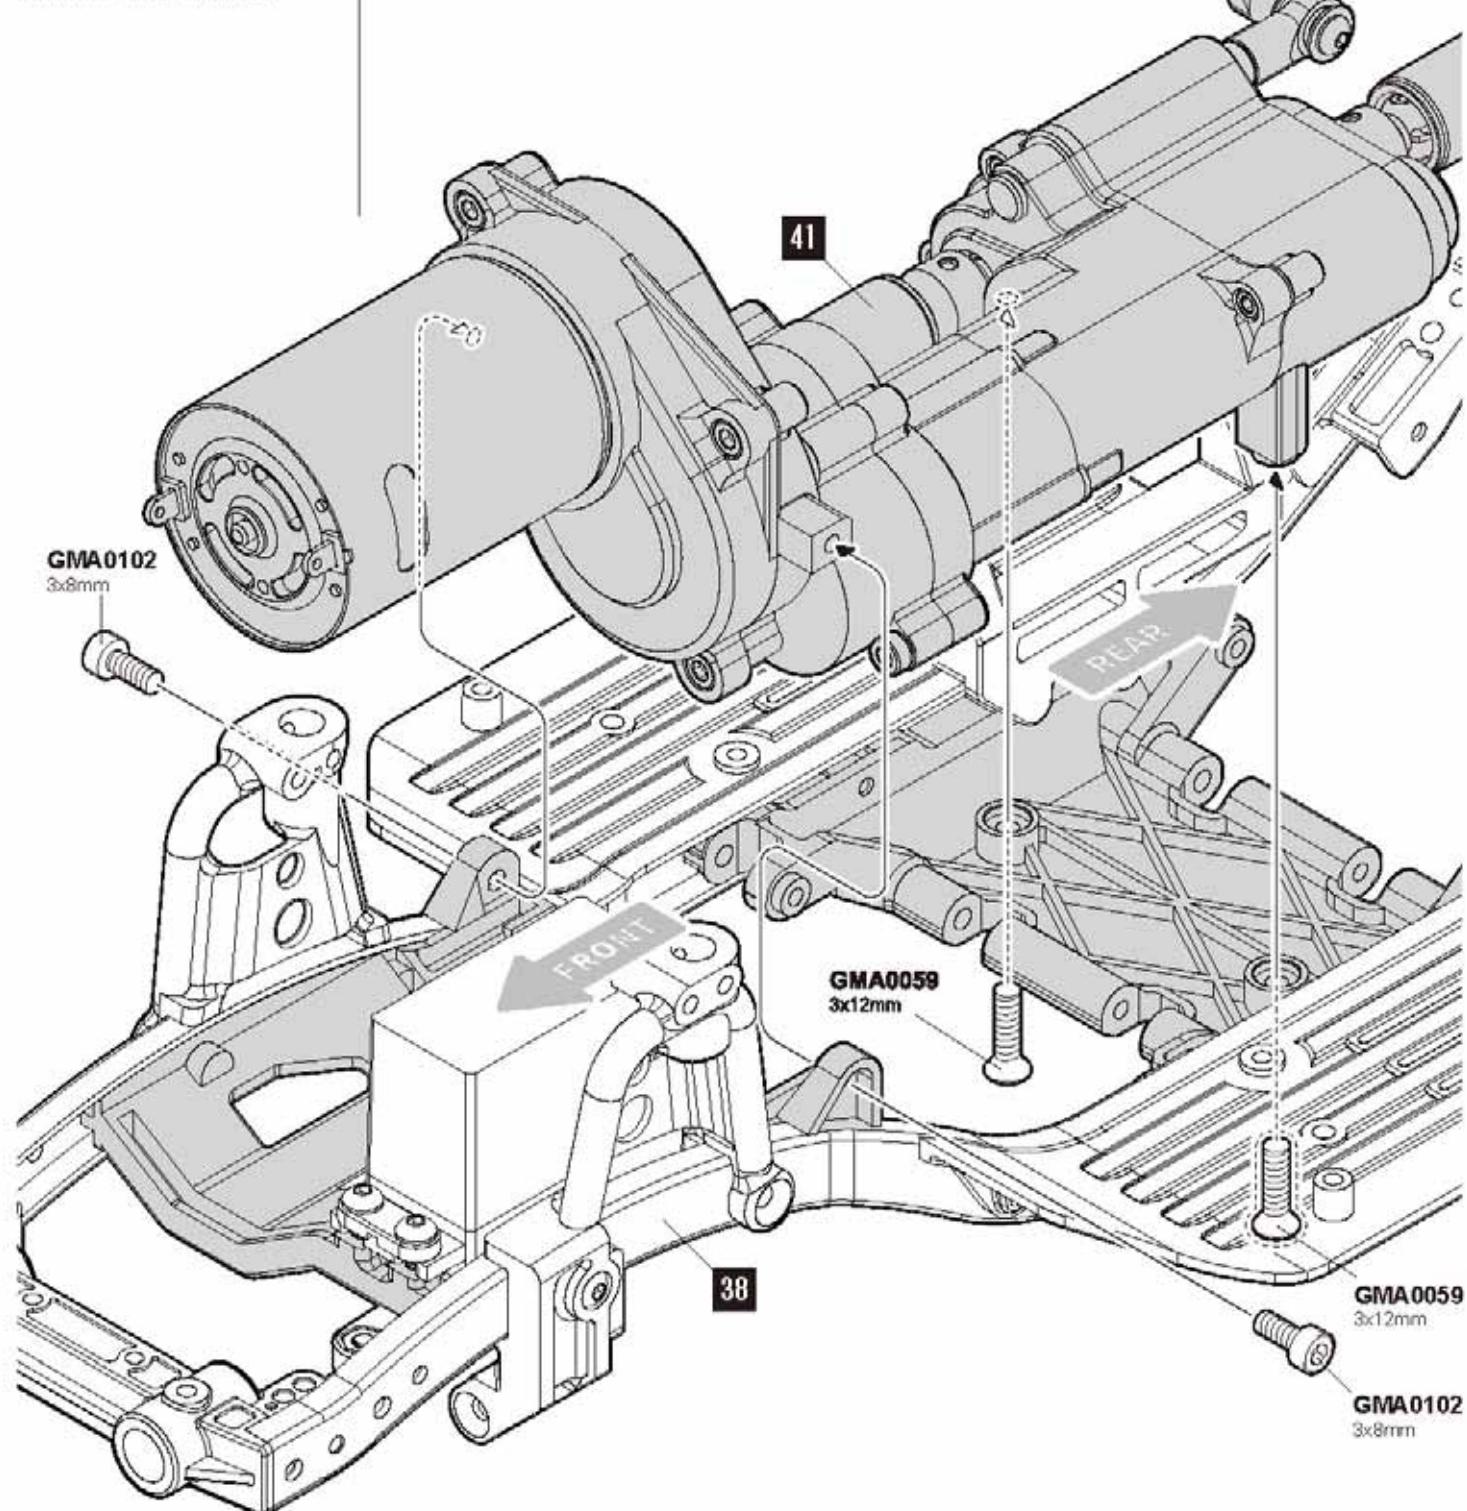




GMA0020

3x12mm

Round head wrench bolt

x2

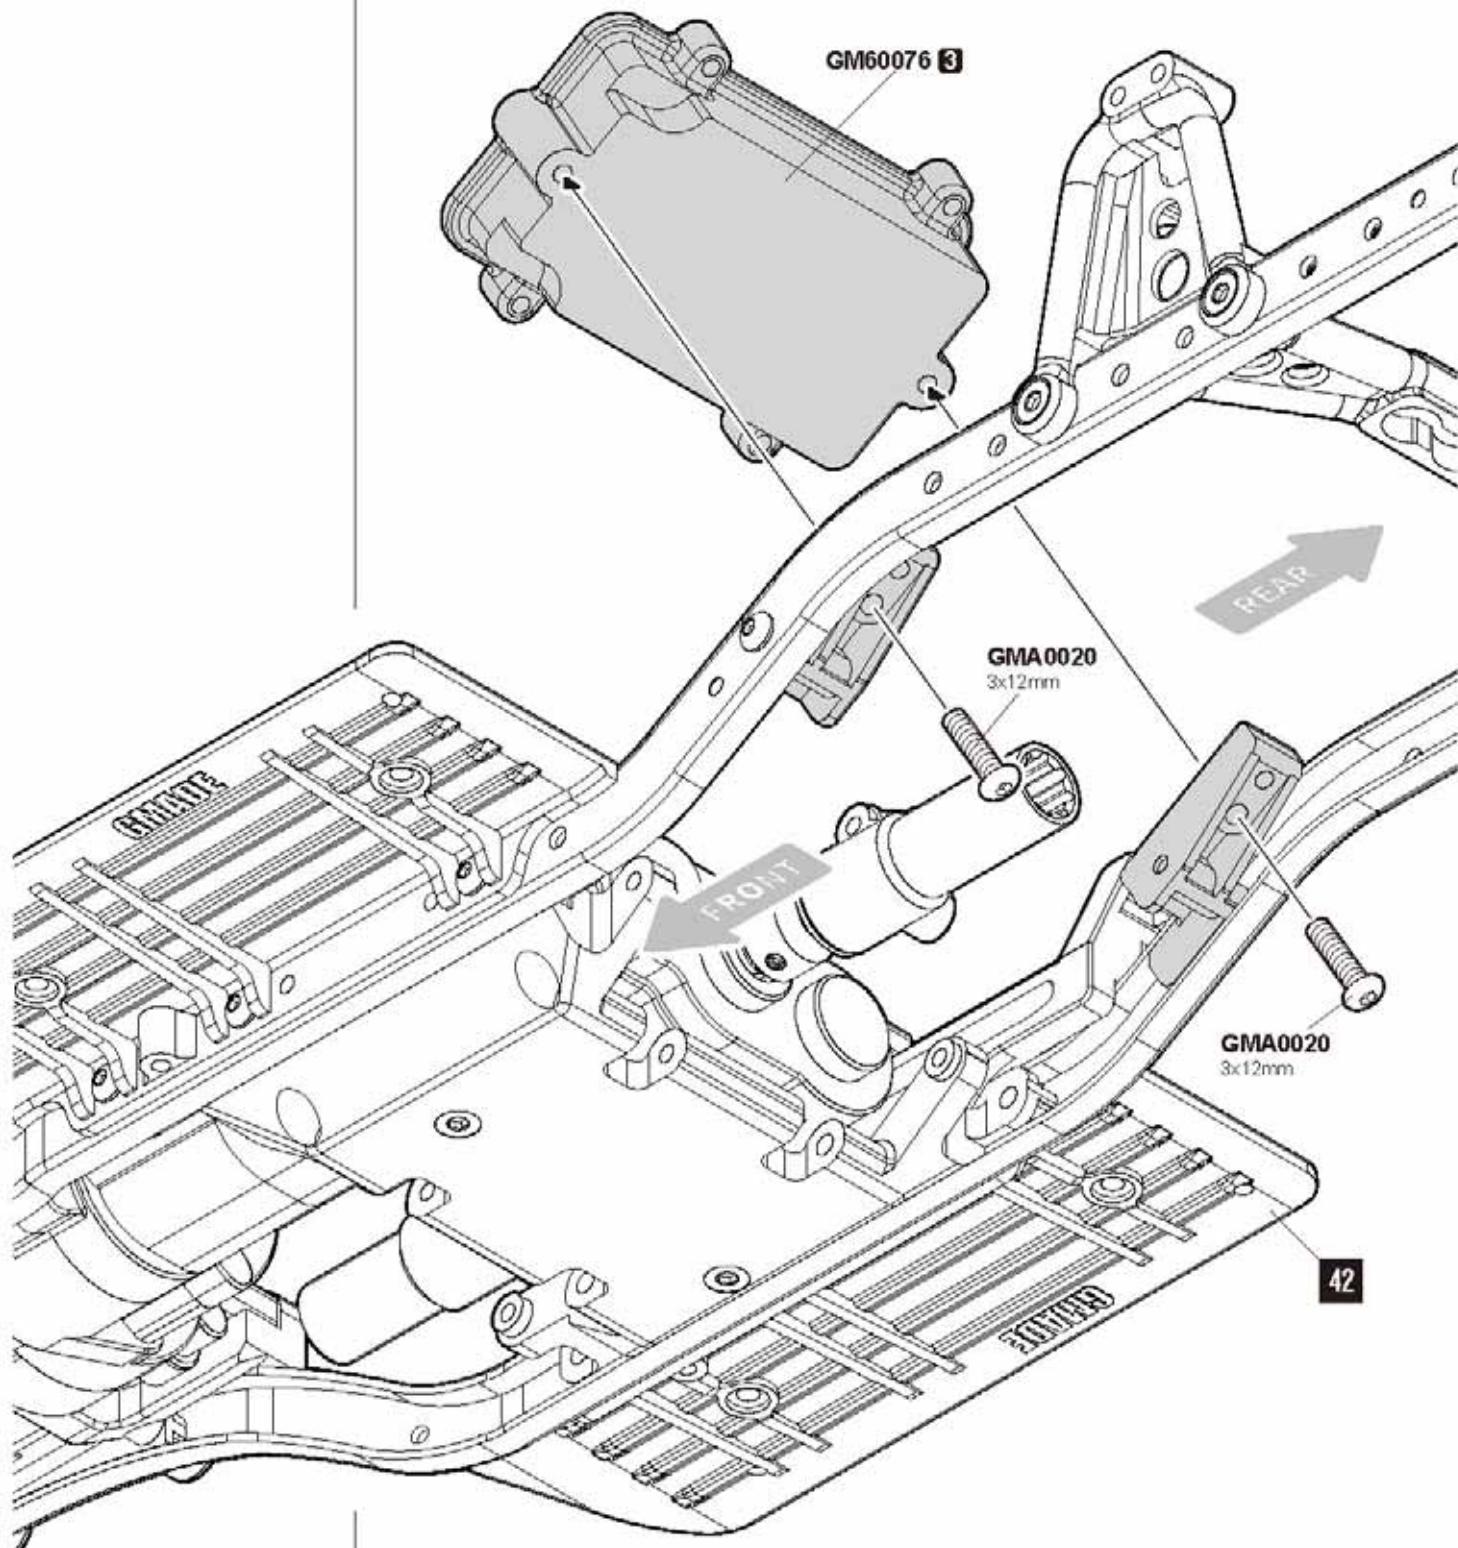

CHASSIS




GMA0022
3x20mm
Round head wrench bolt

x1



GMA0108
3x25mm Wrench bolt

x2

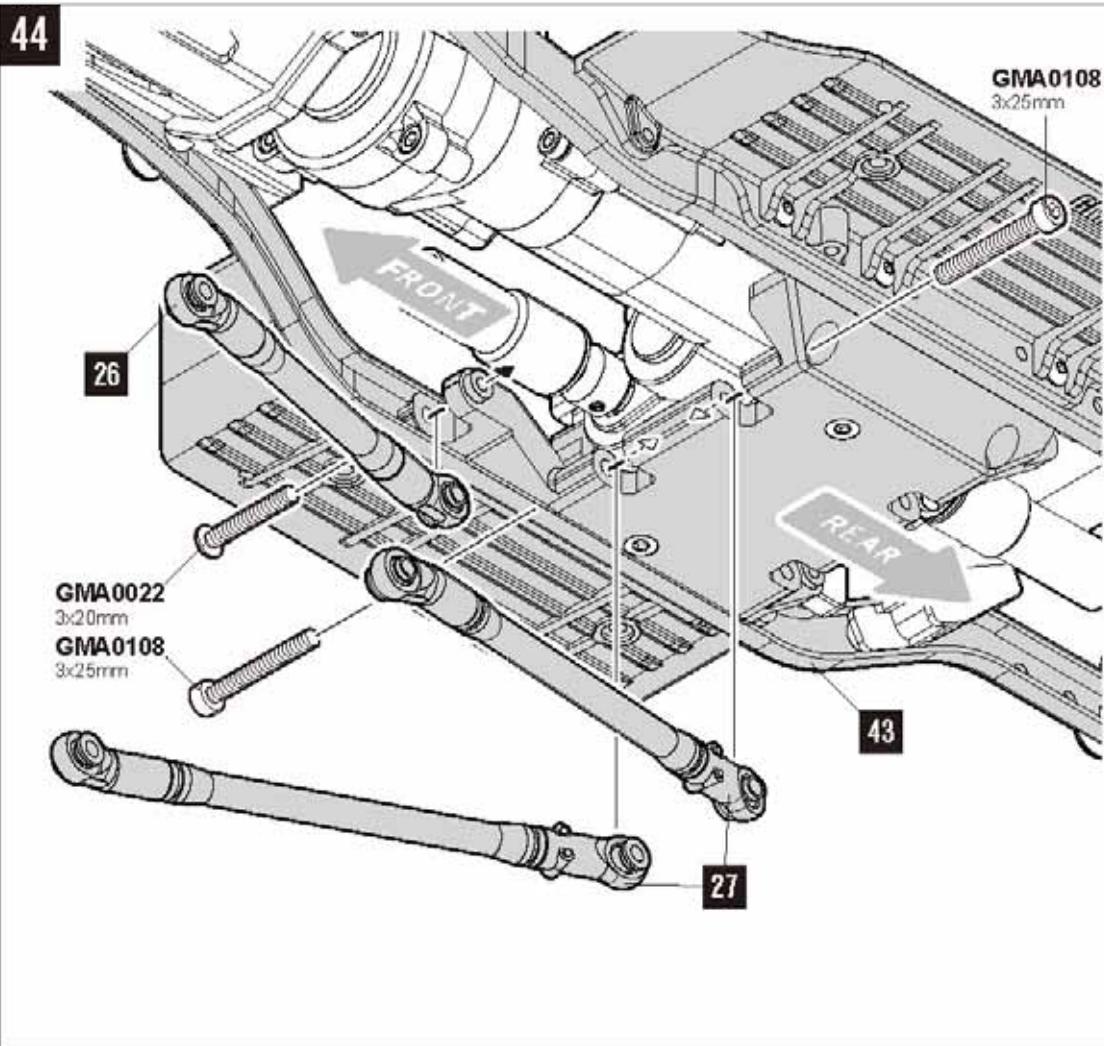


GMA0022
3x20mm
Round head wrench bolt

x2



GMA0108
3x25mm Wrench bolt

x2

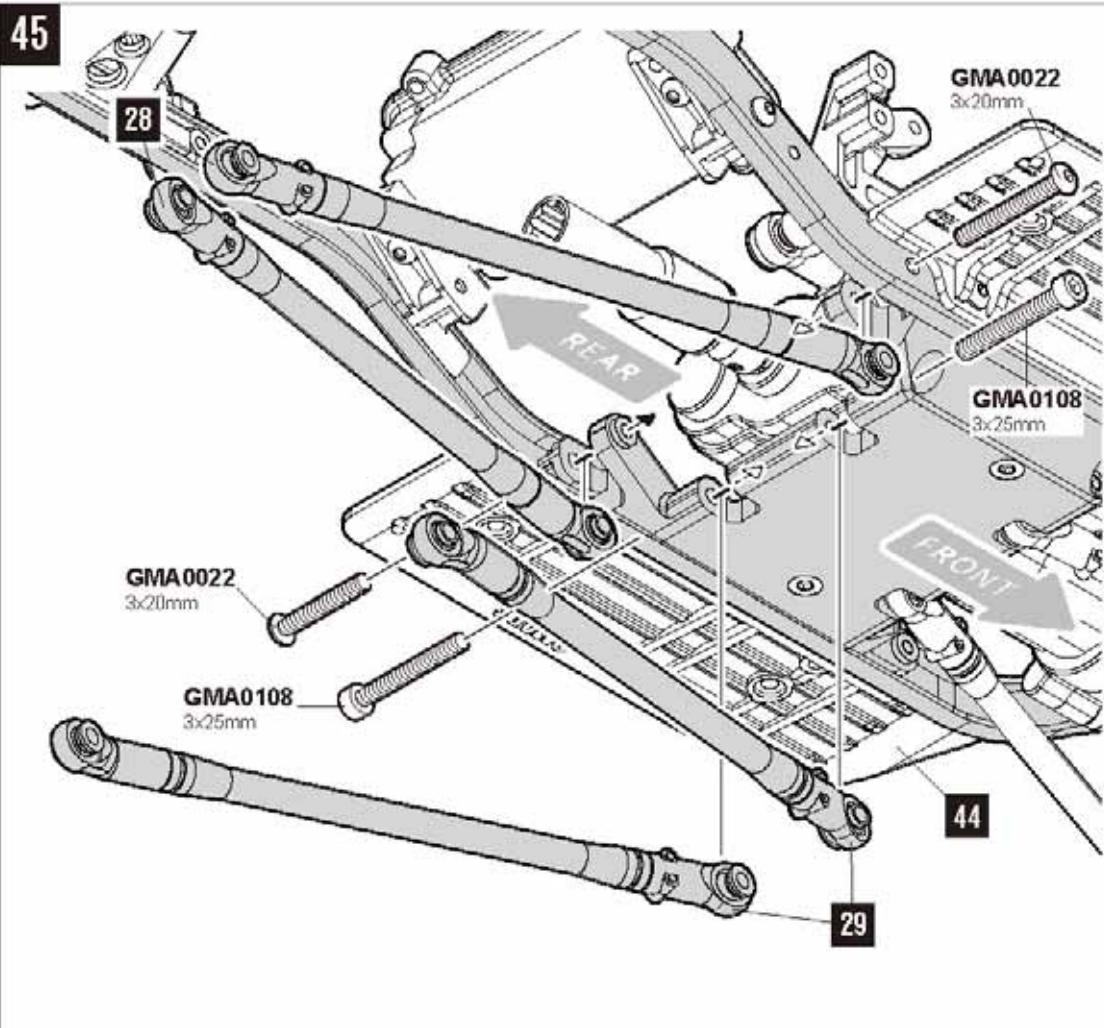


FRONT AXLE**46****GMA0021**

3x15mm

Round head wrench bolt

x3

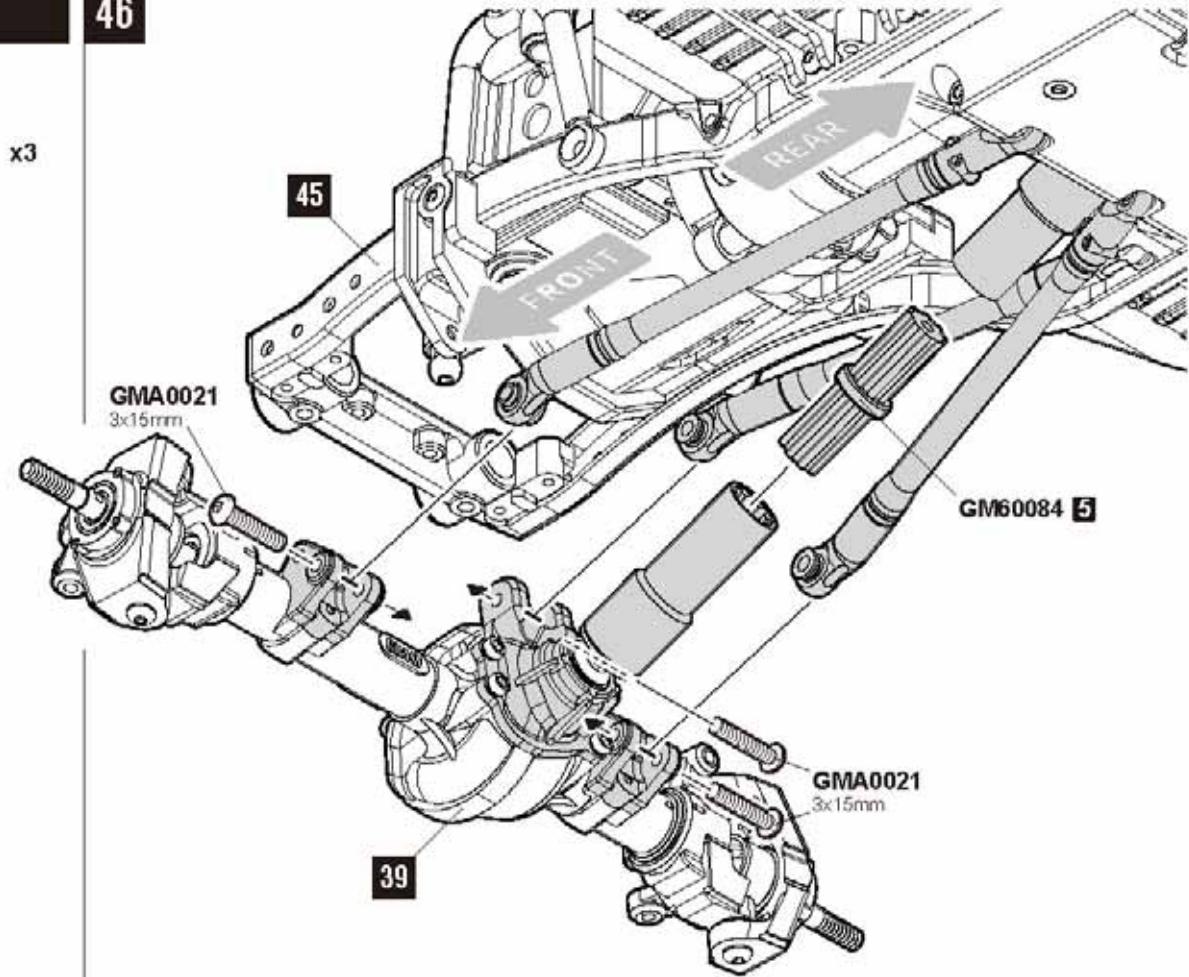**REAR AXLE****47****GMA0021**

3x15mm

Round head wrench bolt

x2

**GMA0024**


3x30mm

Round head wrench bolt

x1

GMA0021

3x15mm

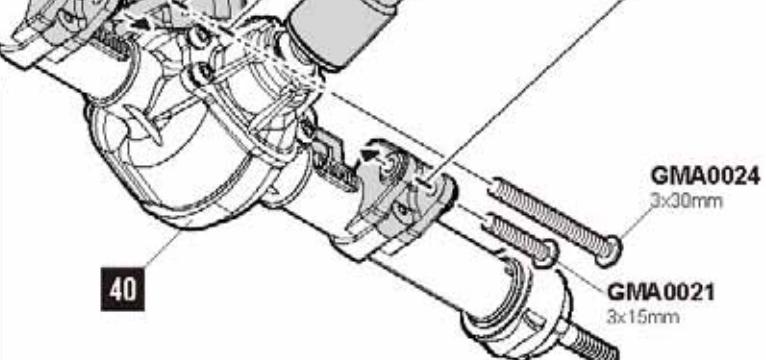40**GM60084**

3x30mm

GMA0021

3x15mm

PANHARD ROD

48



GMA0021

3x15mm
Round head wrench bolt


x1



GMA0060

3x15mm Flat head wrench bolt

x1

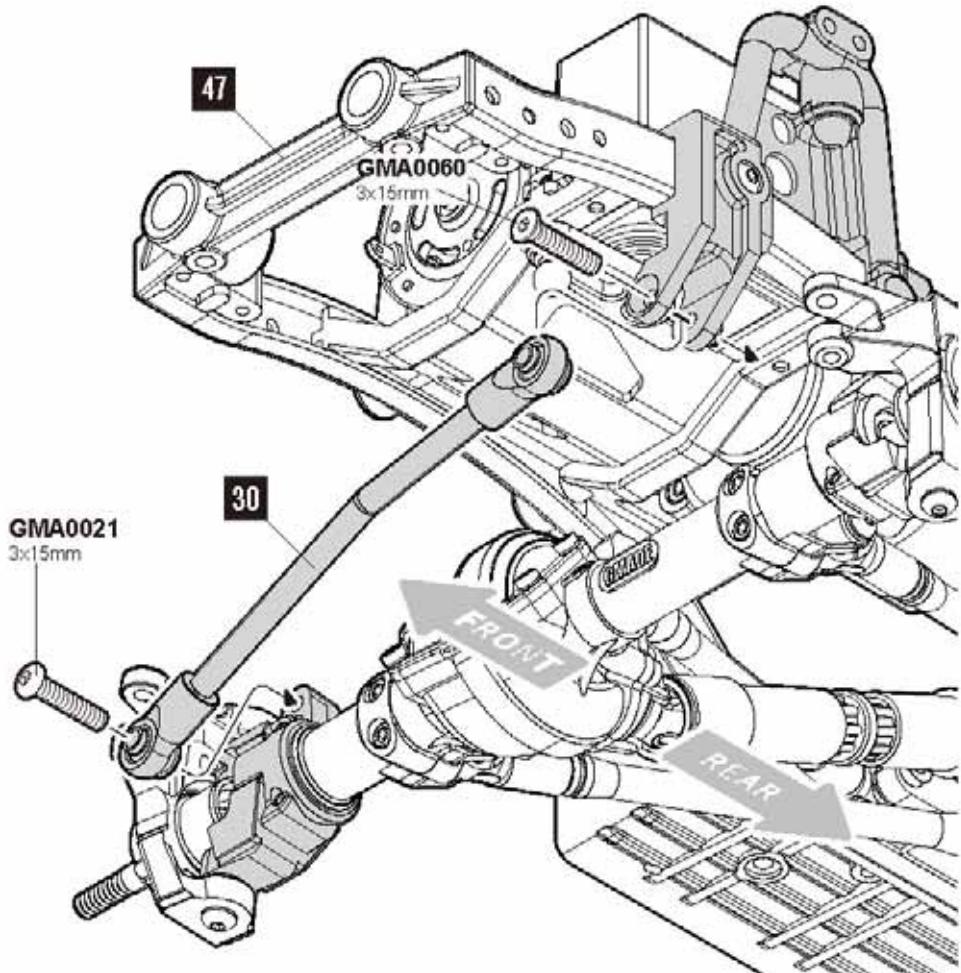

STEERING ROD

49



GMA0021

3x15mm
Round head wrench bolt


x1



GMA0023

3x25mm
Round head wrench bolt

x1

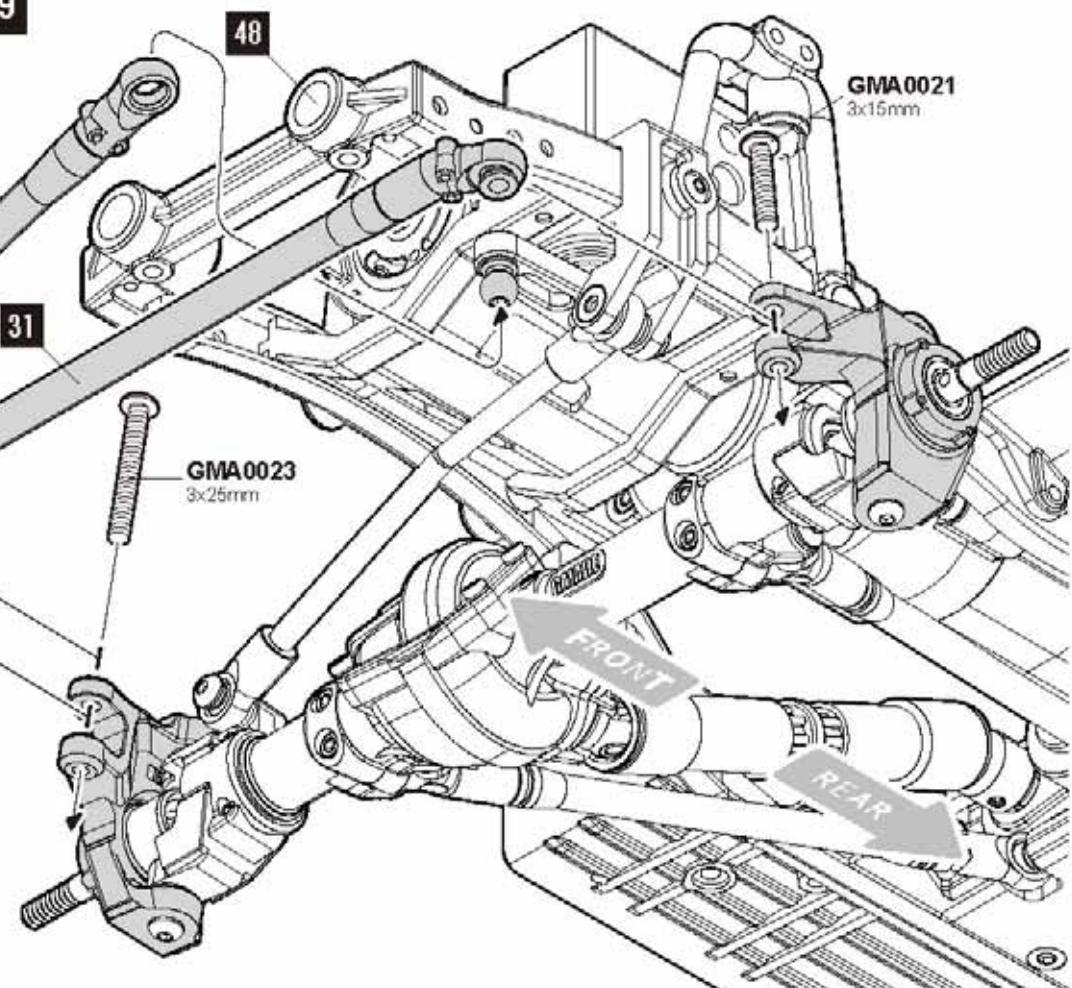

LEFT INNER FENDER

50

Front

**GMA0019**3x10mm
Round head wrench bolt


x1

**GMA0020**3x12mm
Round head wrench bolt

x1

GM60218 2**GMA0019**
3x10mm**GMA0020**
3x12mm

49

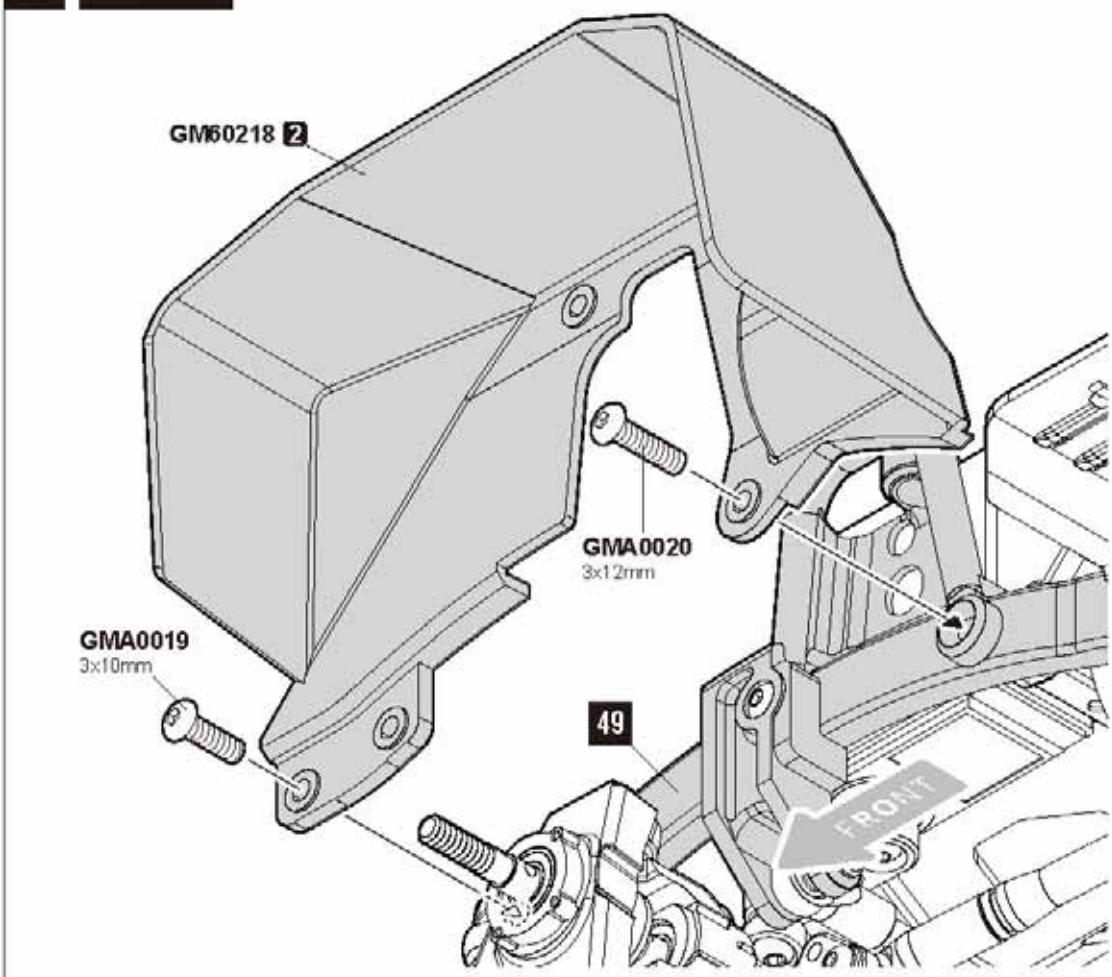**GMA0018**3x8mm
Round head wrench bolt

x1

**GMA0020**3x12mm
Round head wrench bolt


x1

**GMA0191**
M3 flange nut

x2

GM60218 4**GMA0020**
3x12mm

50

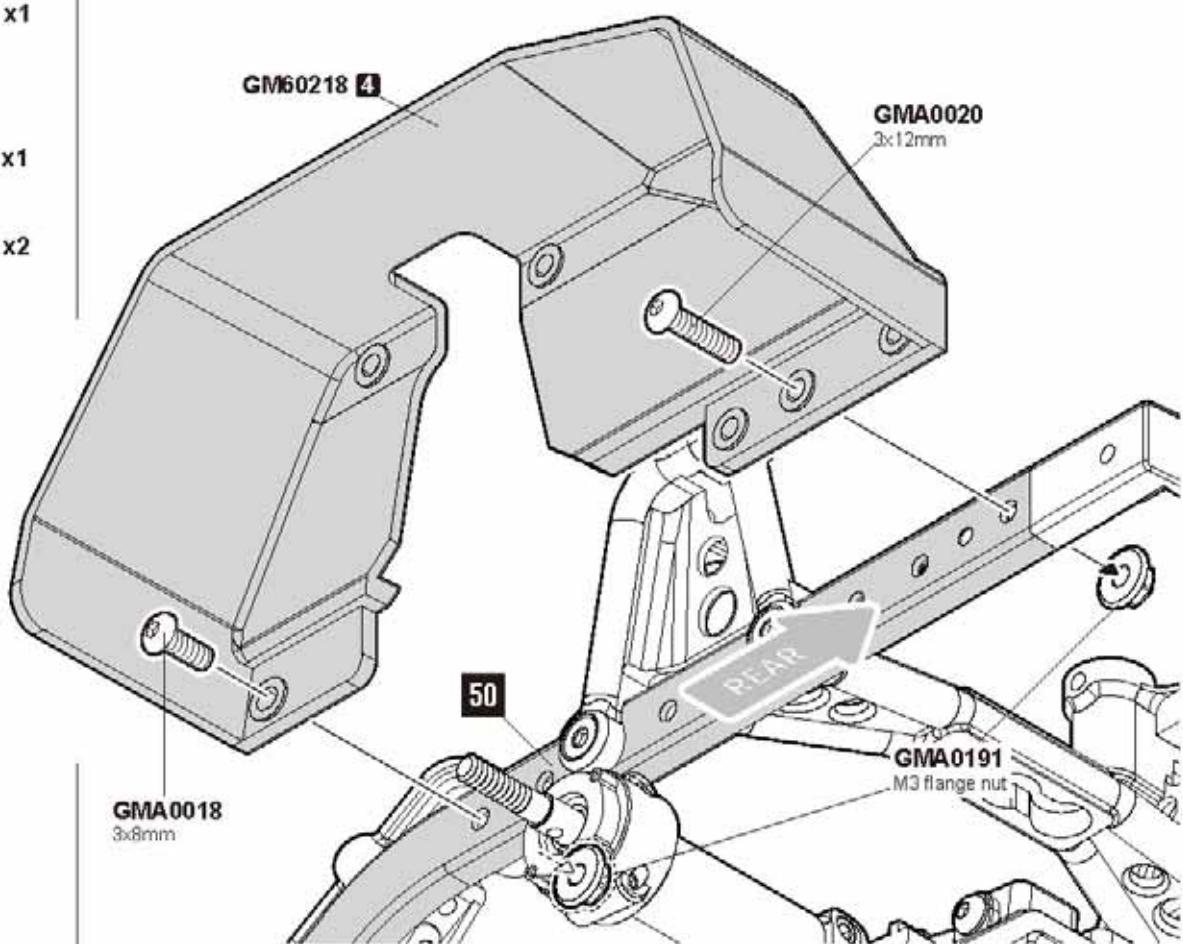GMA0018
3x8mm**GMA0191**
M3 flange nut

RIGHT INNER FENDER

52


Front

**GMA0019**3x10mm
Round head wrench bolt

x1

**GMA0020**3x12mm
Round head wrench bolt

x1

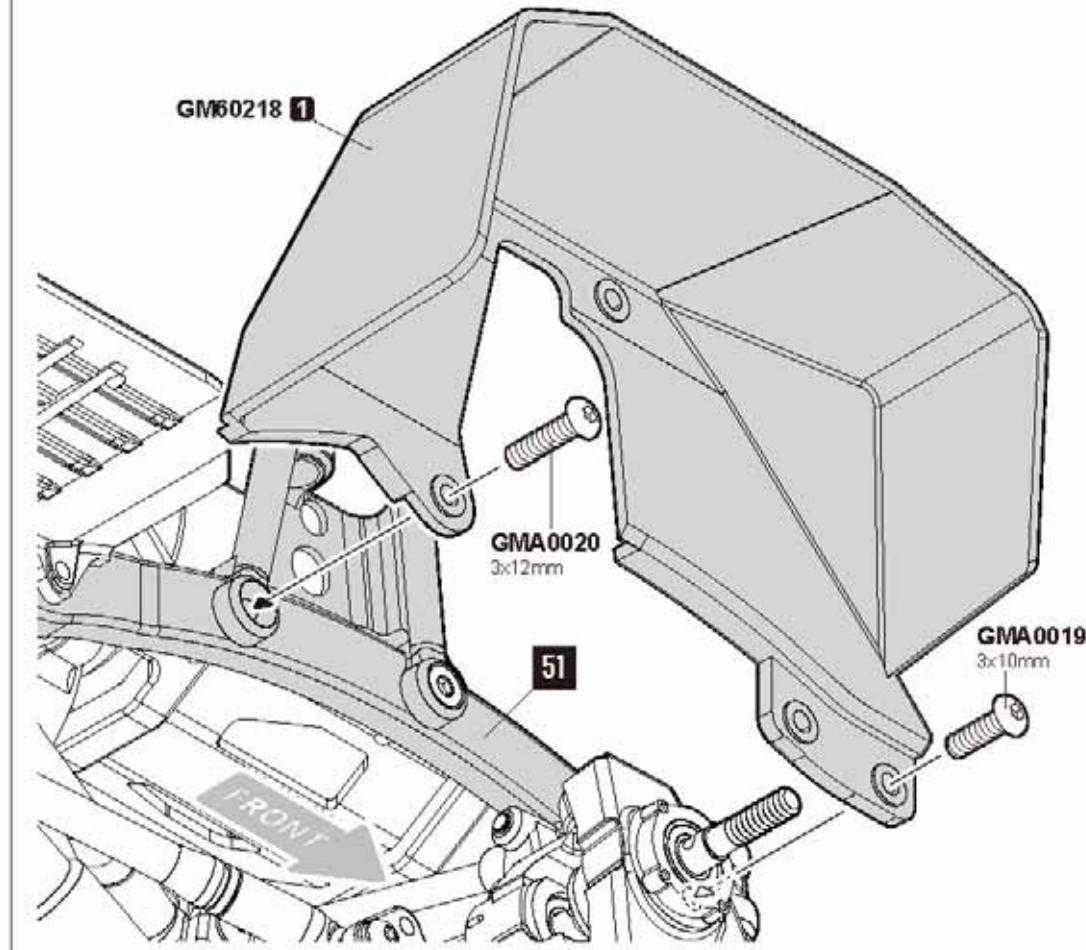**GMA0018**3x8mm
Round head wrench bolt


x1

**GMA0020**3x12mm
Round head wrench bolt

x1




x2

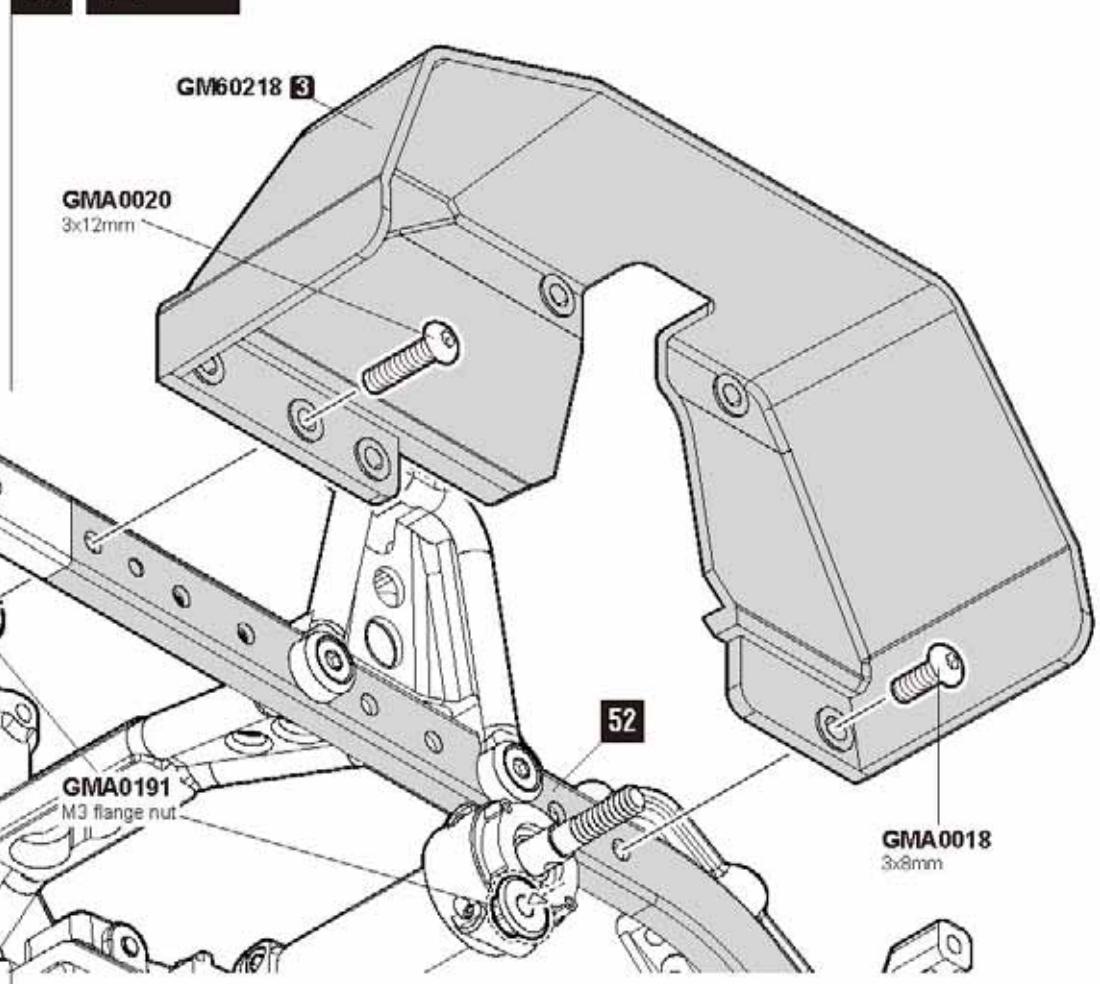


**GMA0019**

3x10mm

Round head wrench bolt

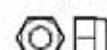
**GMA0156**

M3 Nylon lock nut

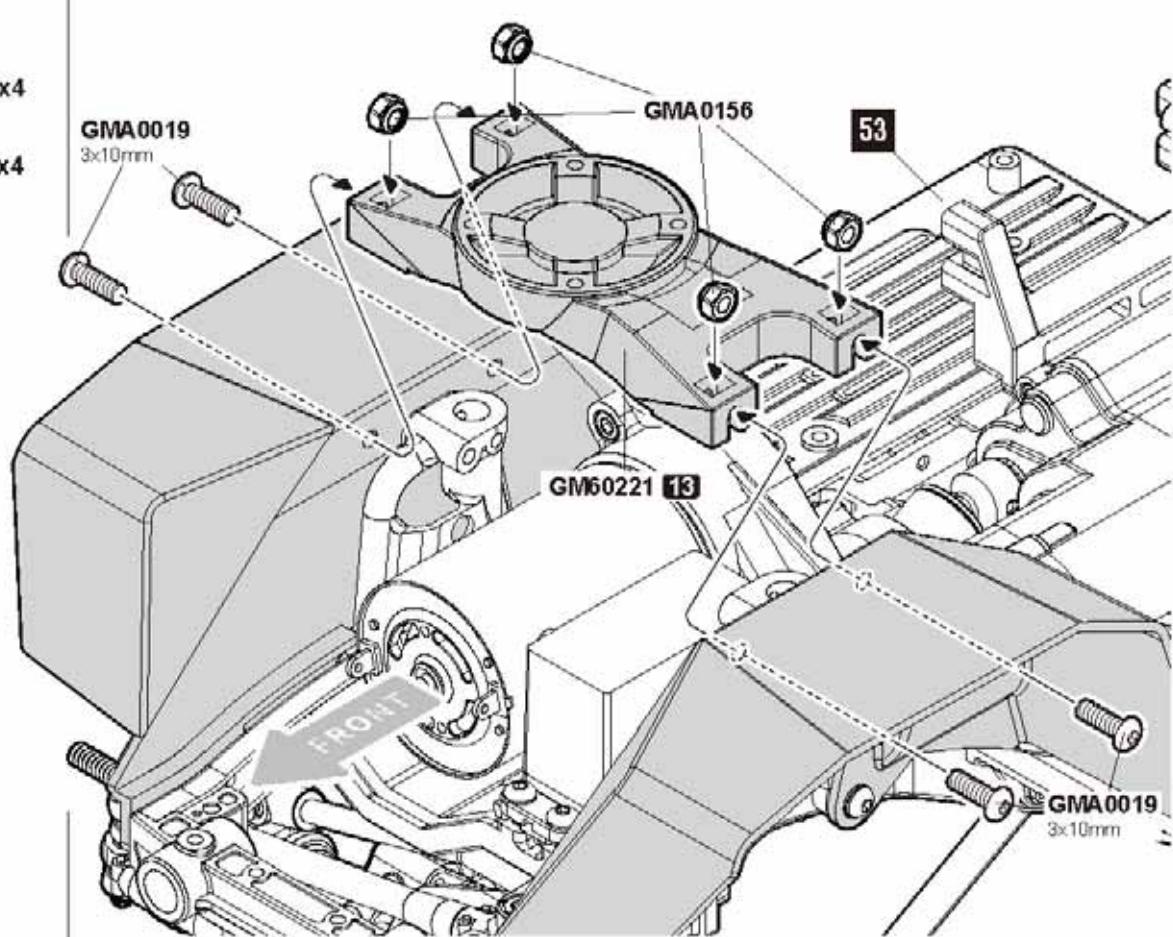x4
x4**GMA0019**

3x10mm

Round head wrench bolt

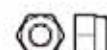**GMA0156**

M3 Nylon lock nut


x4
x4**GMA0019**

3x10mm

Round head wrench bolt

**GMA0156**

M3 Nylon lock nut

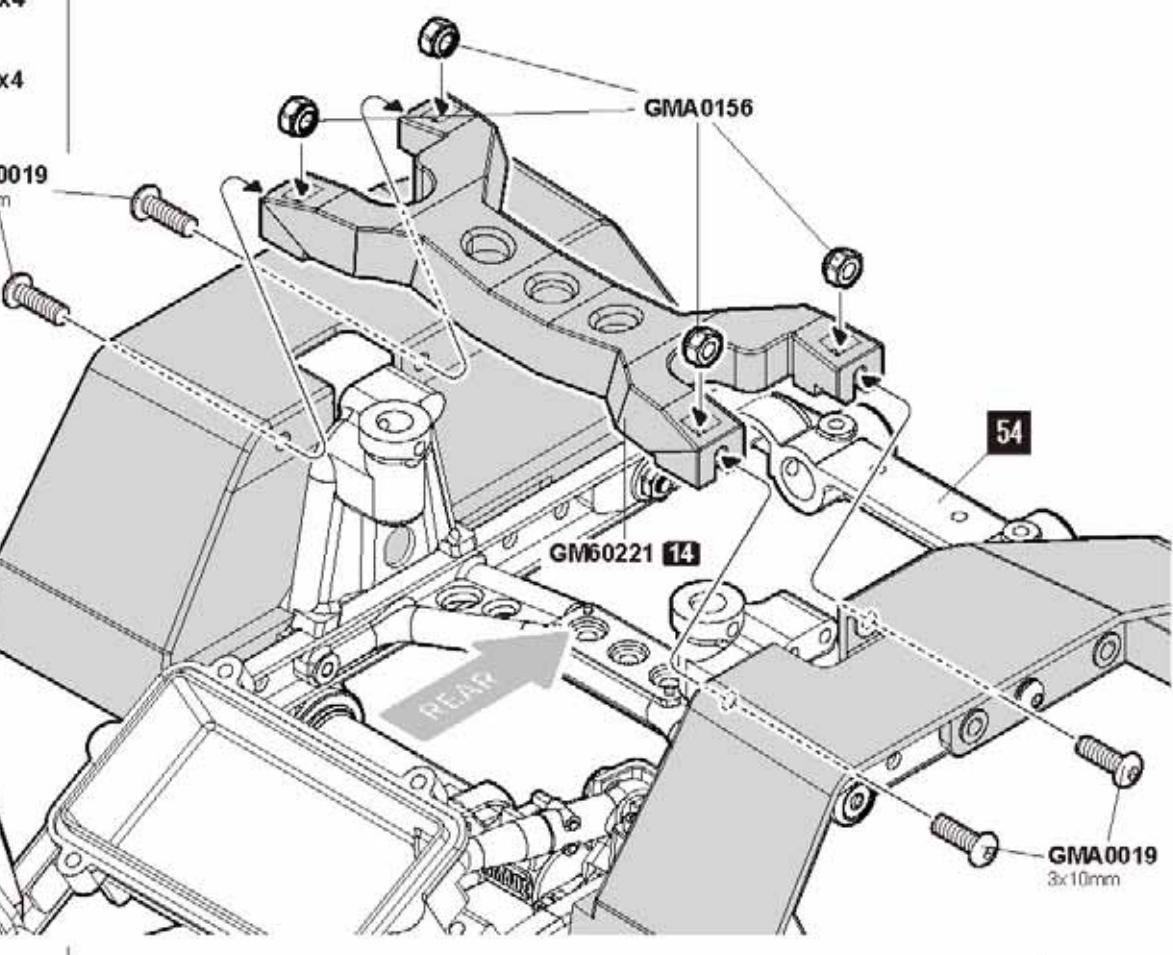x4
x4

FRONT SHOCK ABSORBER

56




GMA0020
3x12mm
Round head wrench bolt



GMA0172
3x18mm
Round head wrench bolt

x2

x2

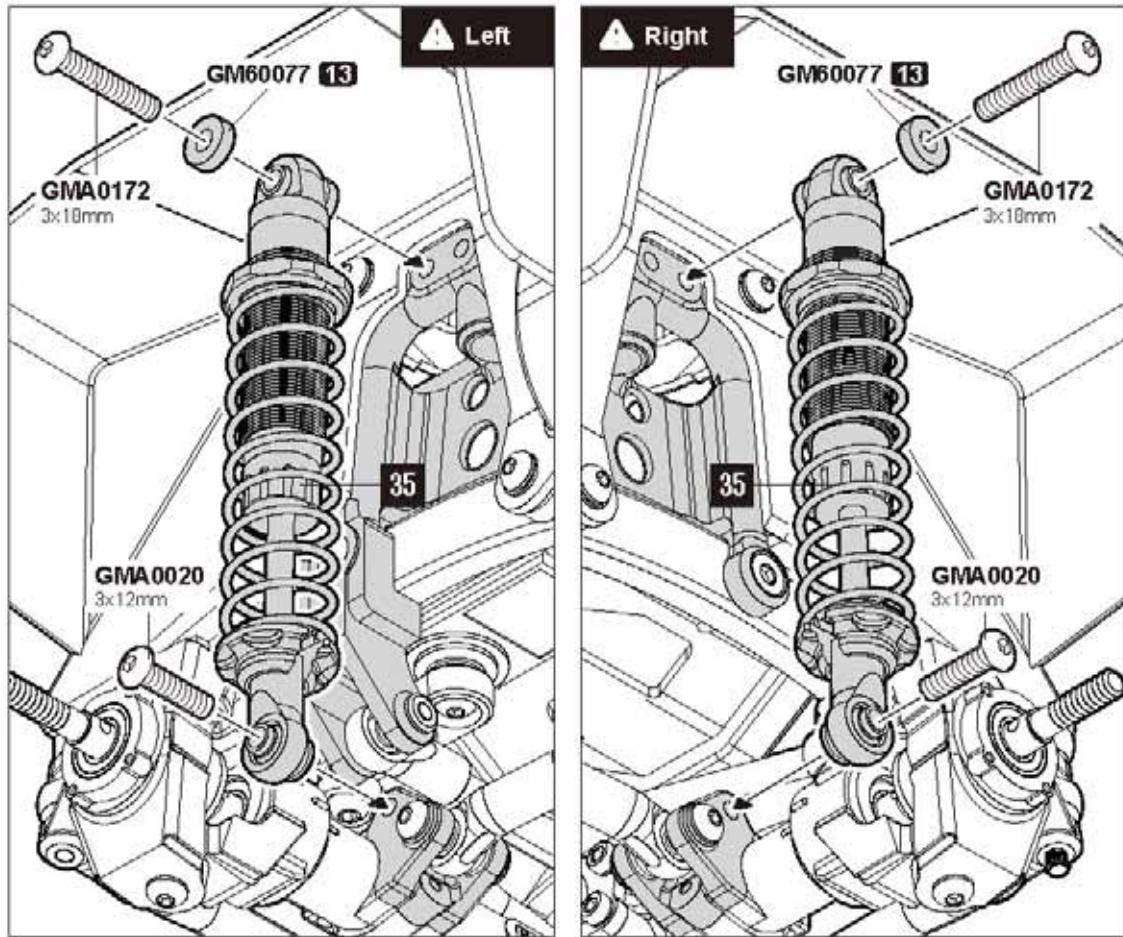

REAR SHOCK ABSORBER

57




GMA0021
3x15mm
Round head wrench bolt



GMA0172
3x18mm
Round head wrench bolt

x2

x2

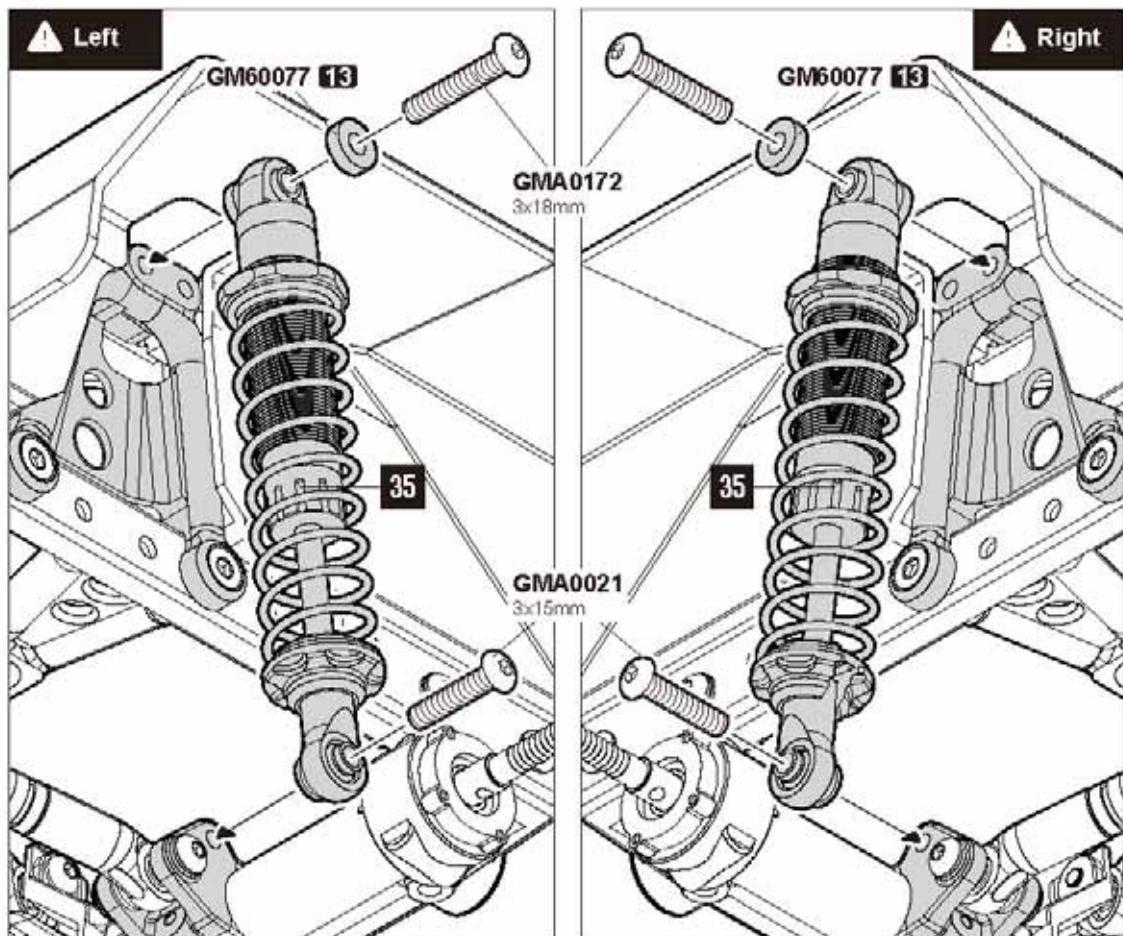



GMA0020
3x12mm
Round head wrench bolt

x5



GMA0172
3x10mm
Round head wrench bolt

x1




GMA0158
3mm Washer

x1



GM60226
Servo saver spring 8x9.5mm

x1

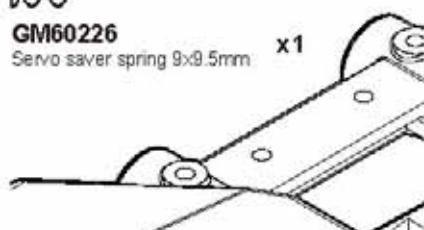**SERVO SAVER ADAPTER**


SANWA
Airtronics
JR
KO




Hitec



Futaba

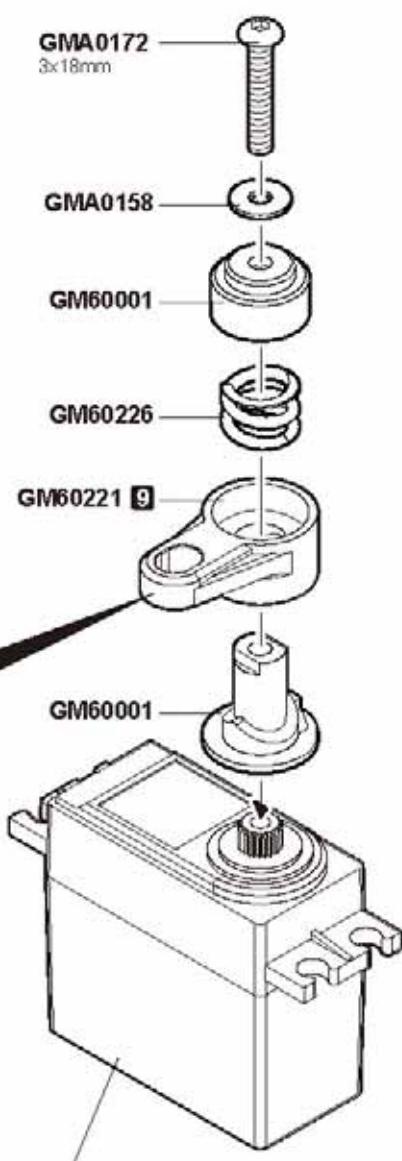


GM60221 5

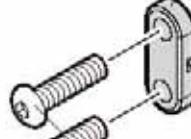


GMA0020
3x12mm


GM60221 7

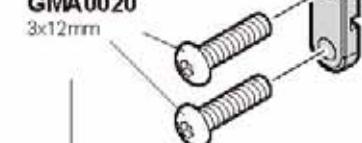


▲ Receiver is not included.

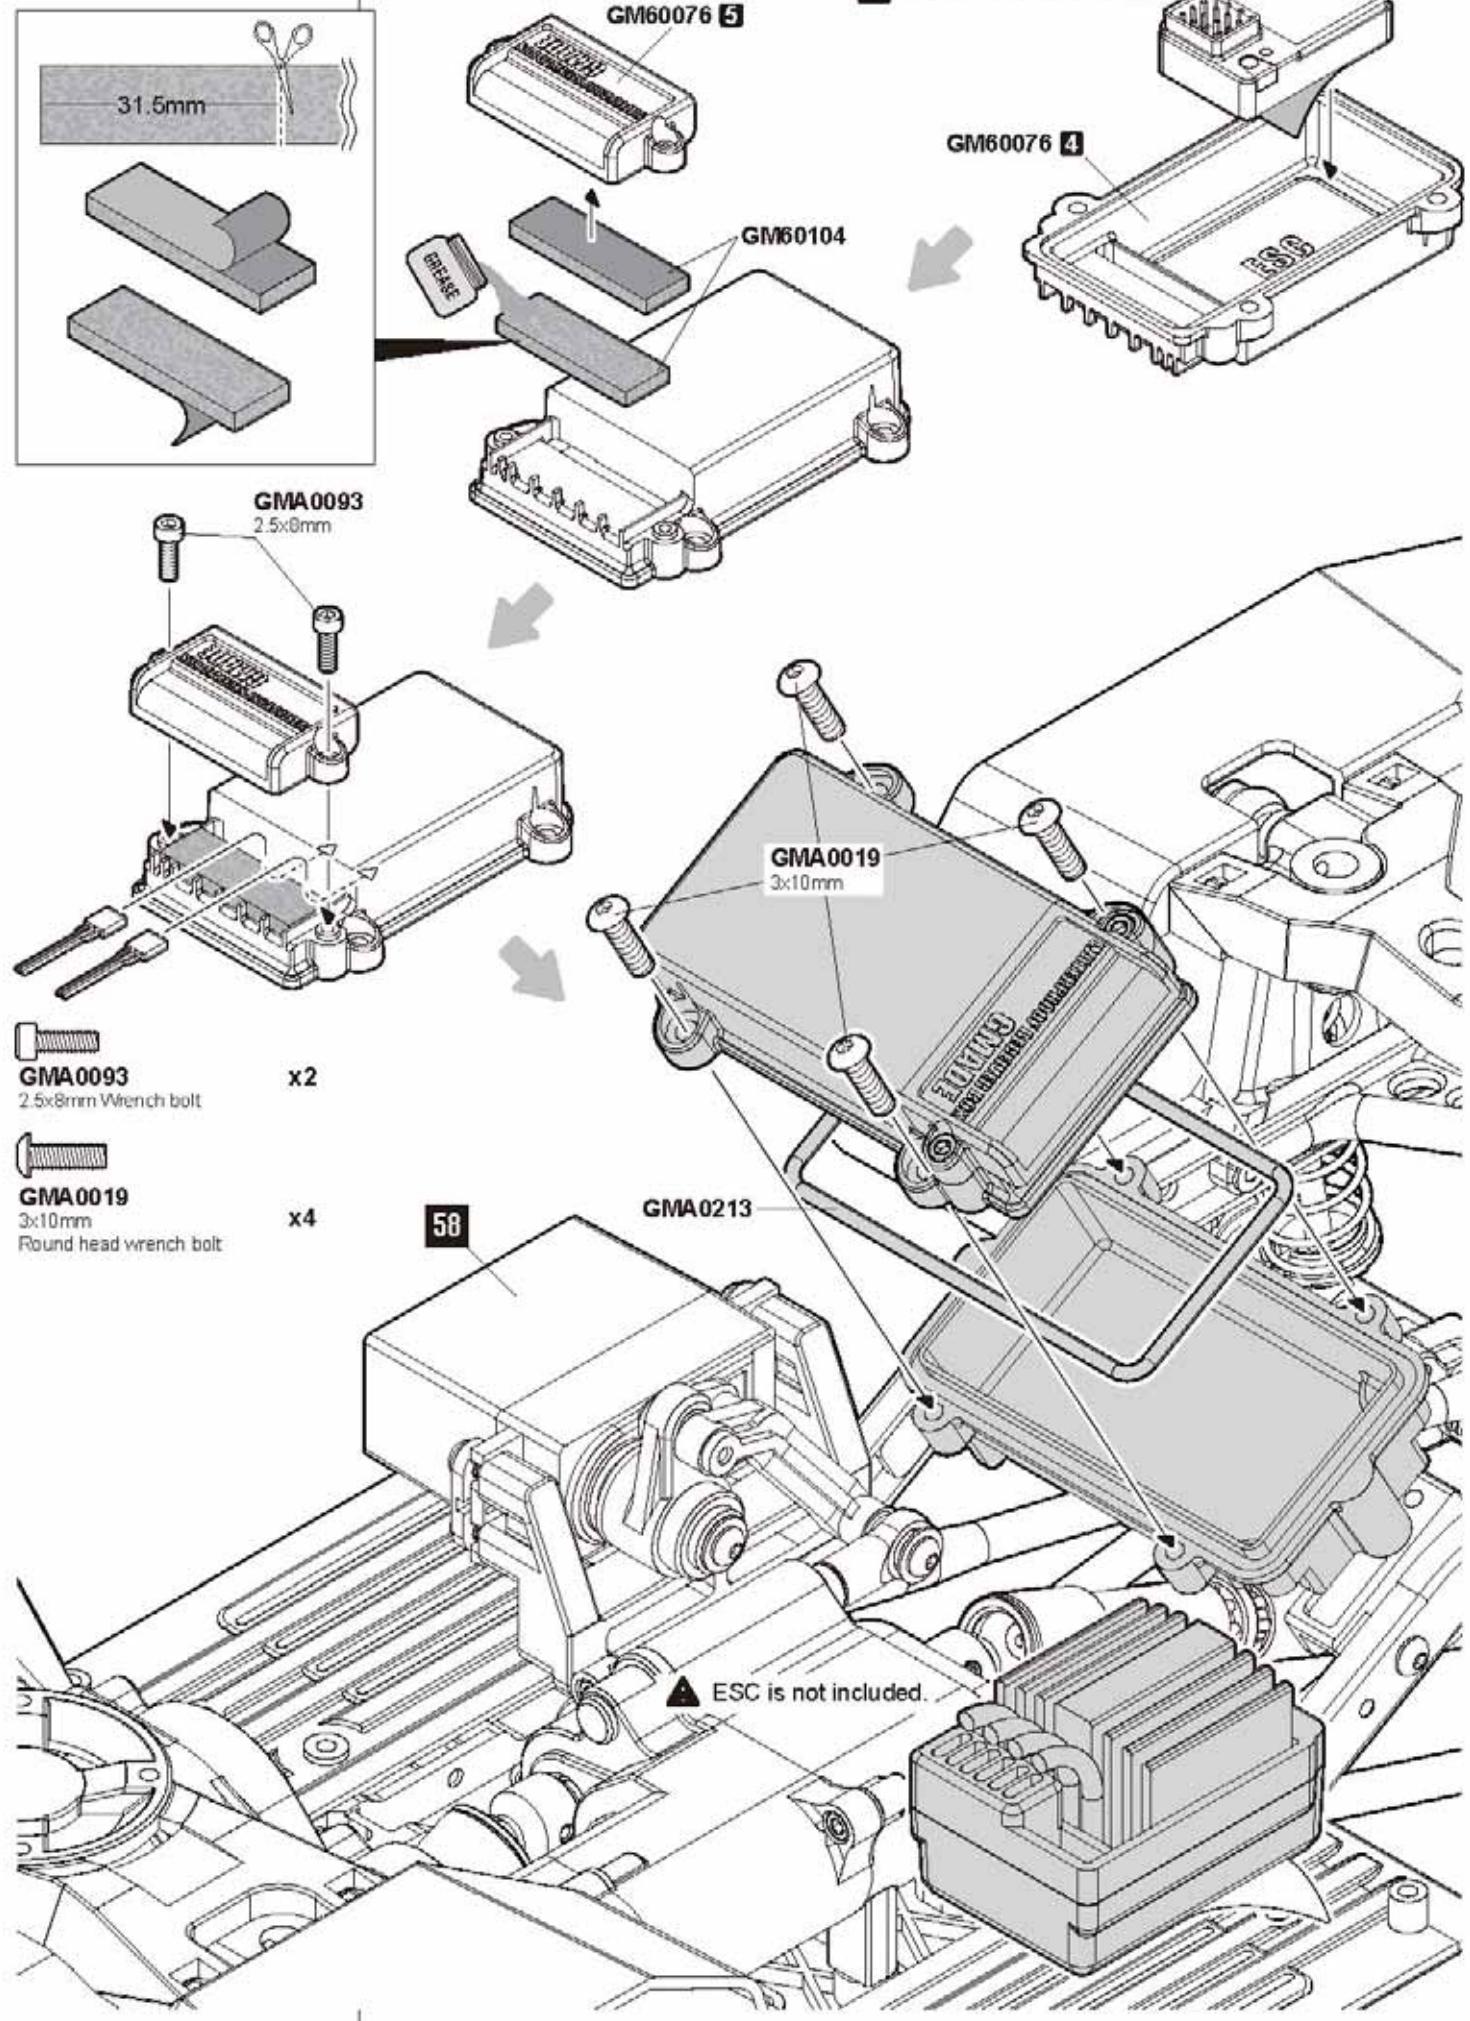

FOR SHORTY BATTERY

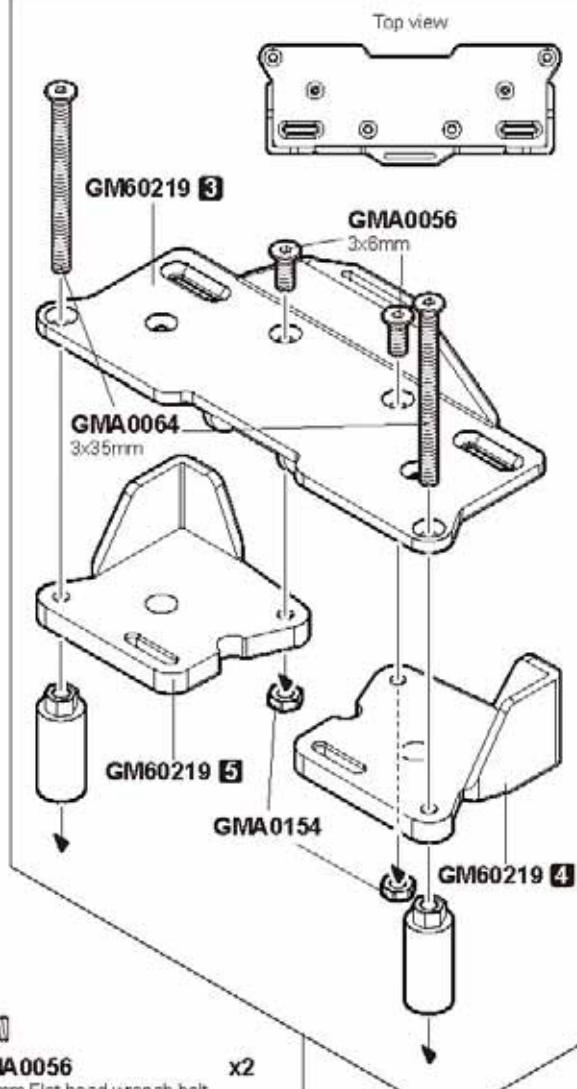

FOR STANDARD BATTERY


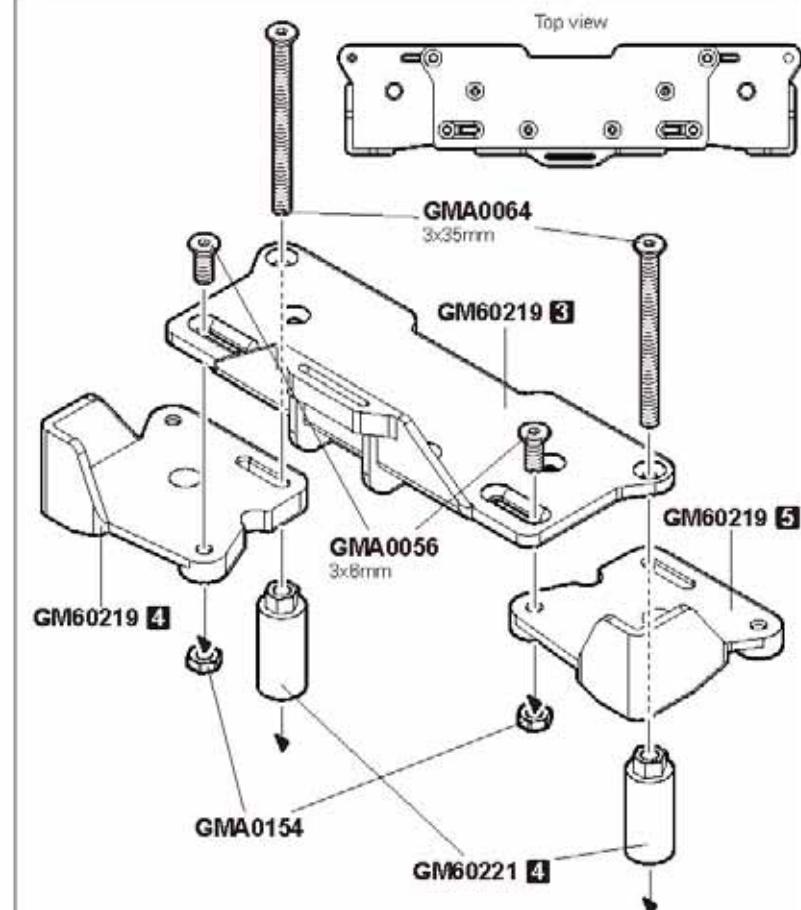




GMA0056
3x6mm Flat head wrench bolt x2

GMA0064
3x35mm Flat head wrench bolt x2

GMA0154
M3 Nut x2

**⚠ INSTALL VELCRO STRAP
BEFORE BATTERY TRAY IS INSTALLED.**

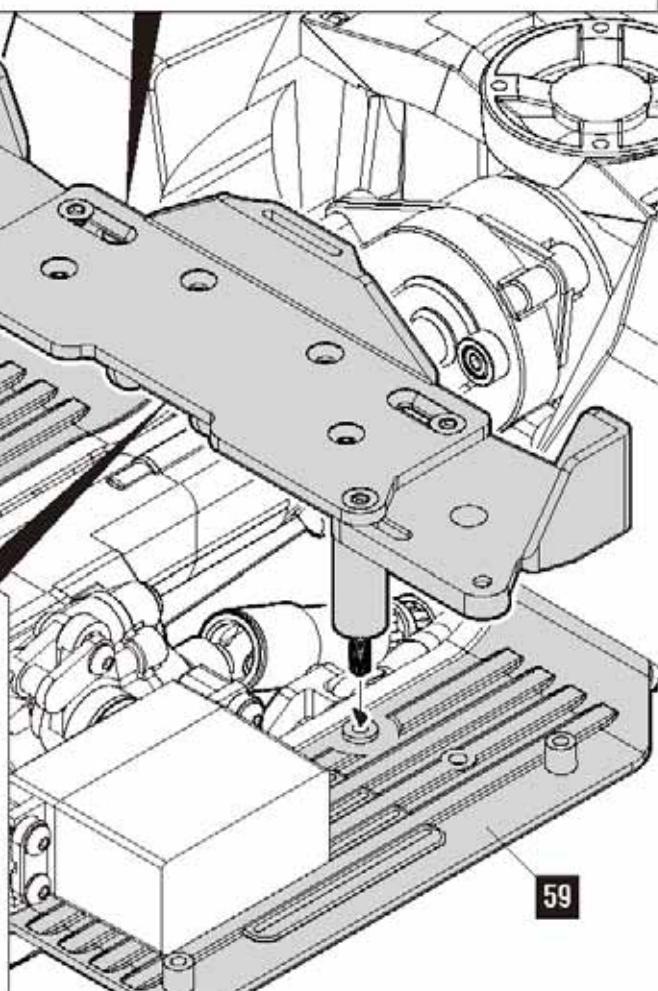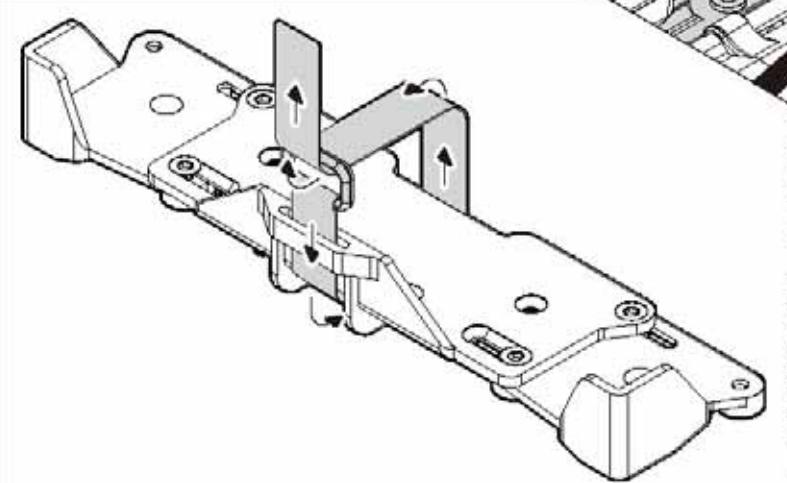

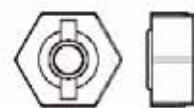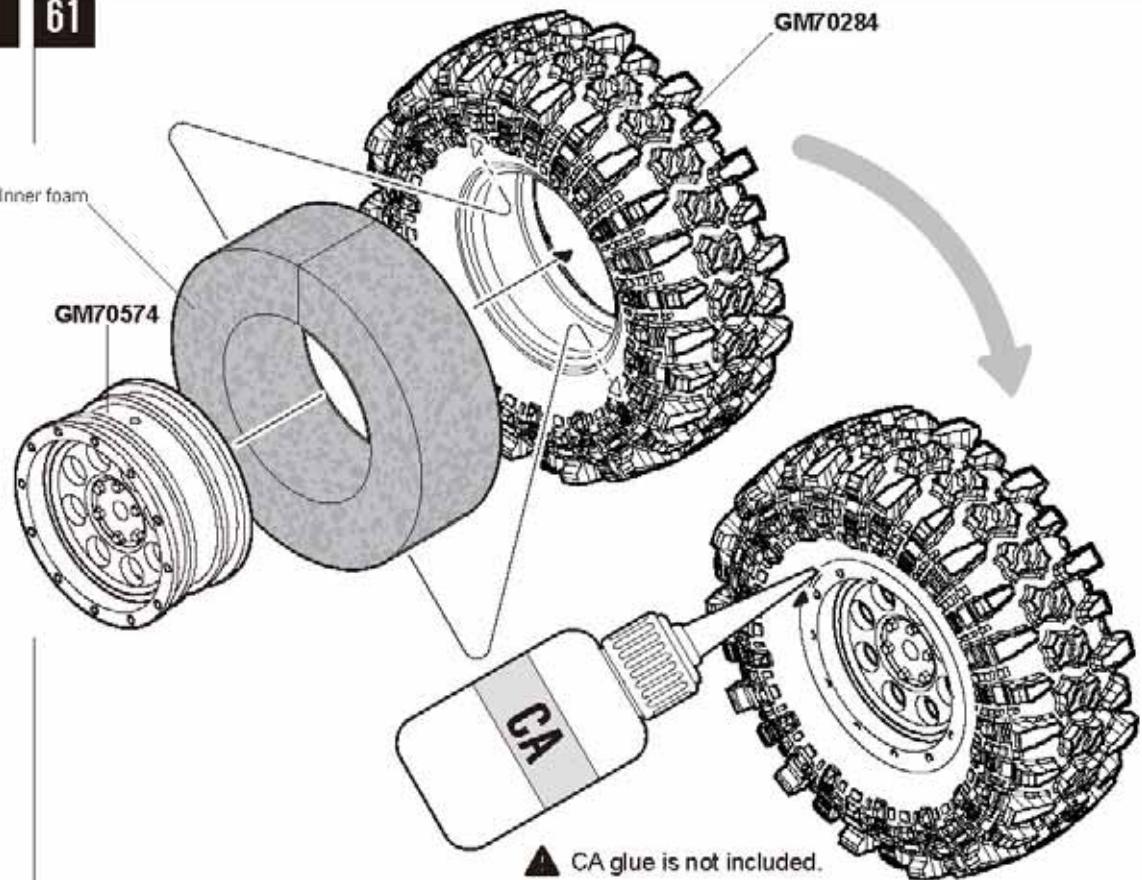

GM60064
12mm Wheel hub

x4




GM51603
Pin 2x10.3mm


x4



GMA0157
M4 nylon lock nut




x4

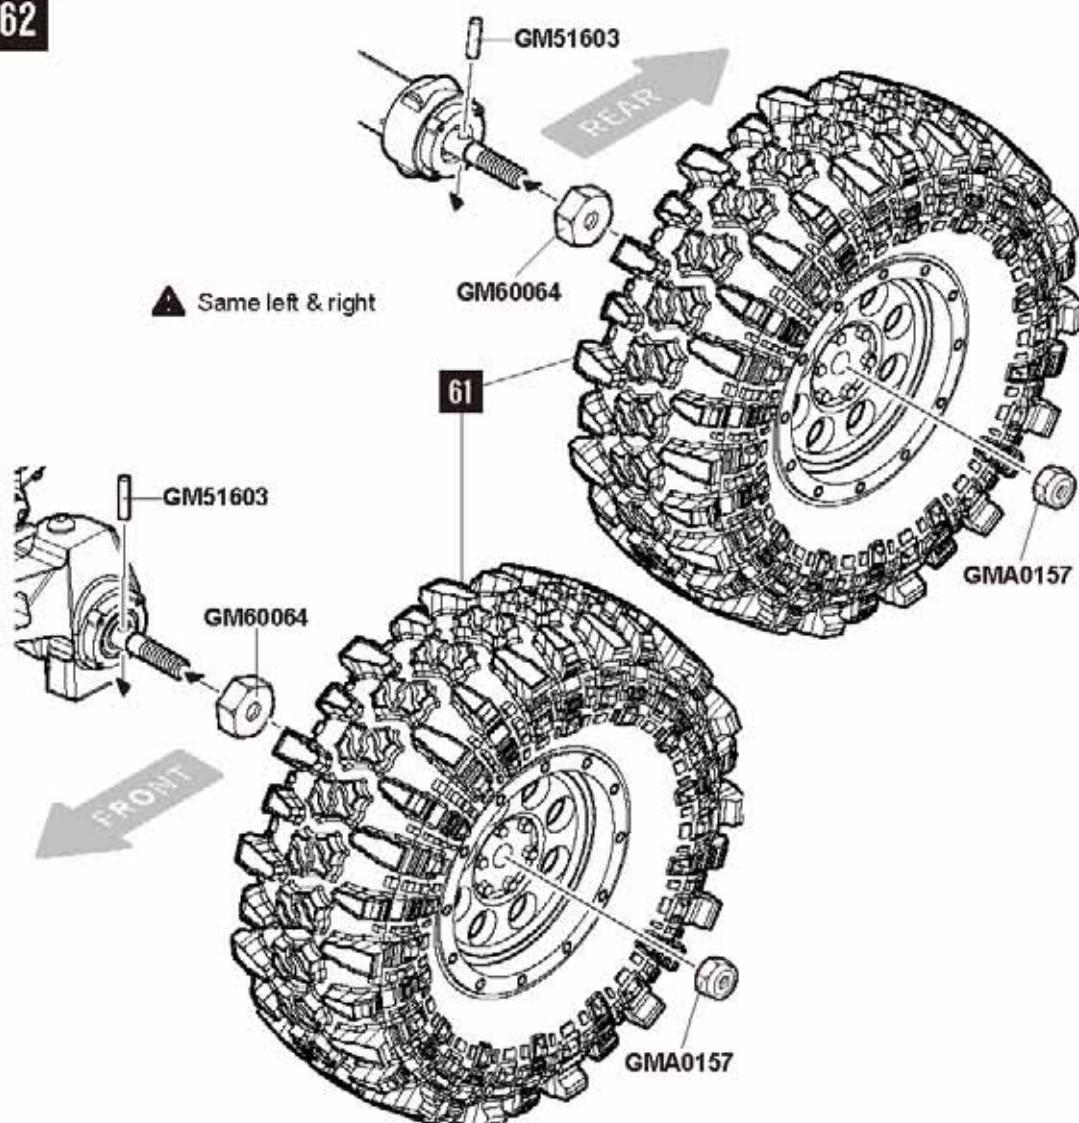

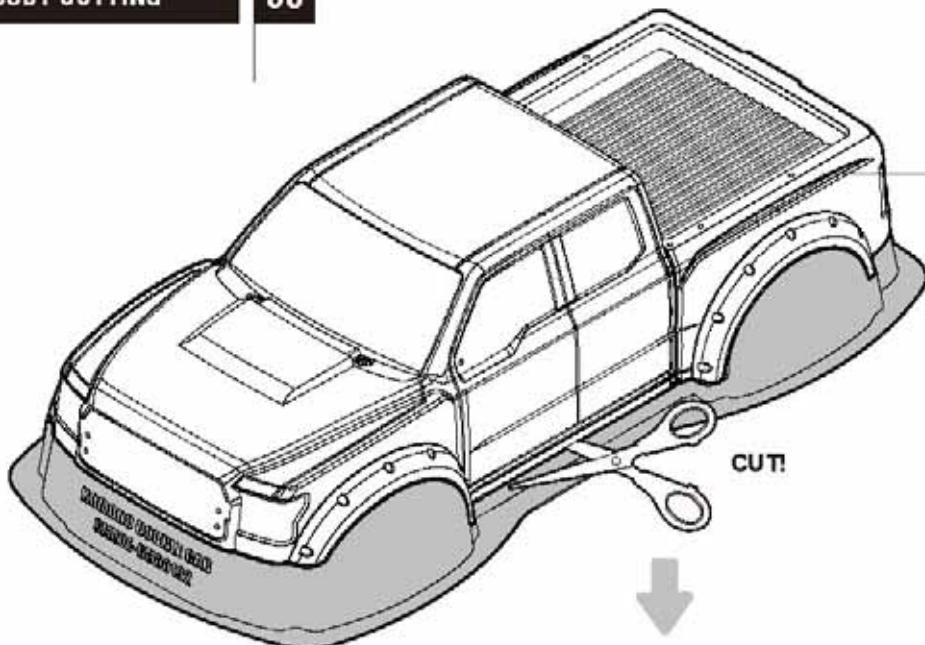

GM60192




▲ See on 60 page.

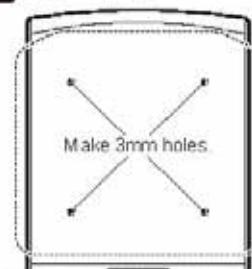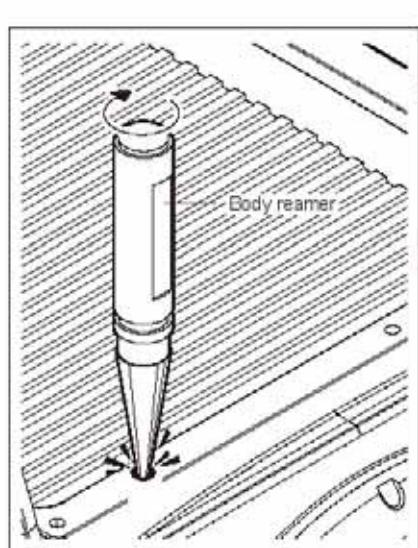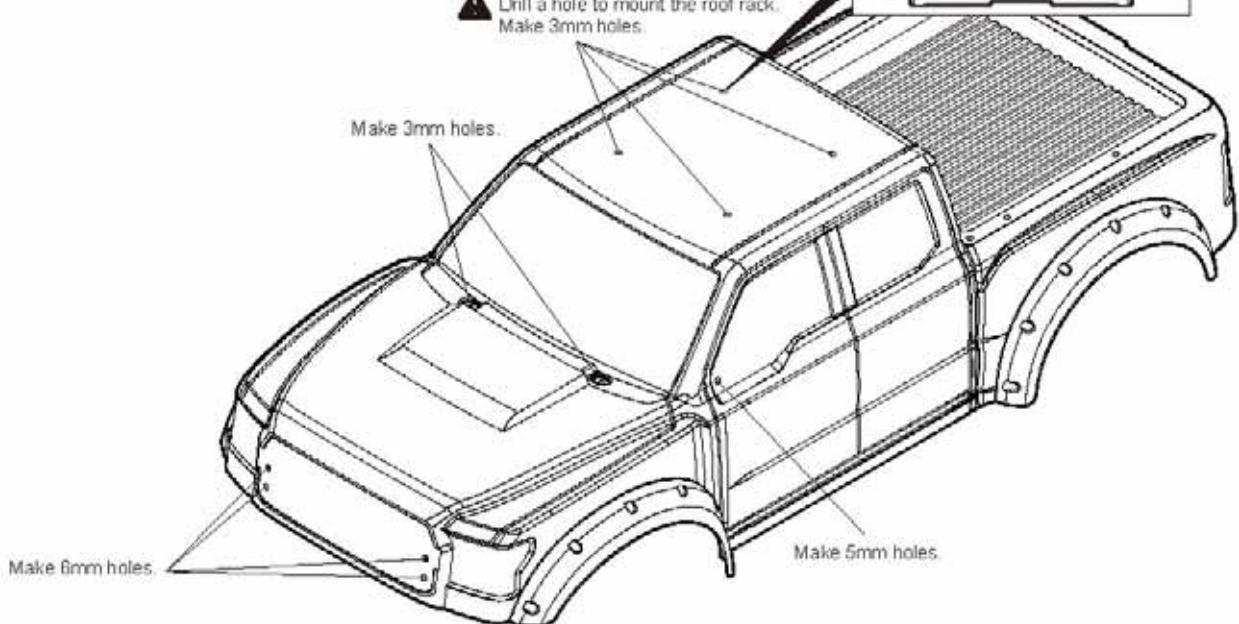▲ Drill a hole to mount the roof rack.
Make 3mm holes.




Make 3mm holes.

Make 5mm holes.

Make 3mm holes.

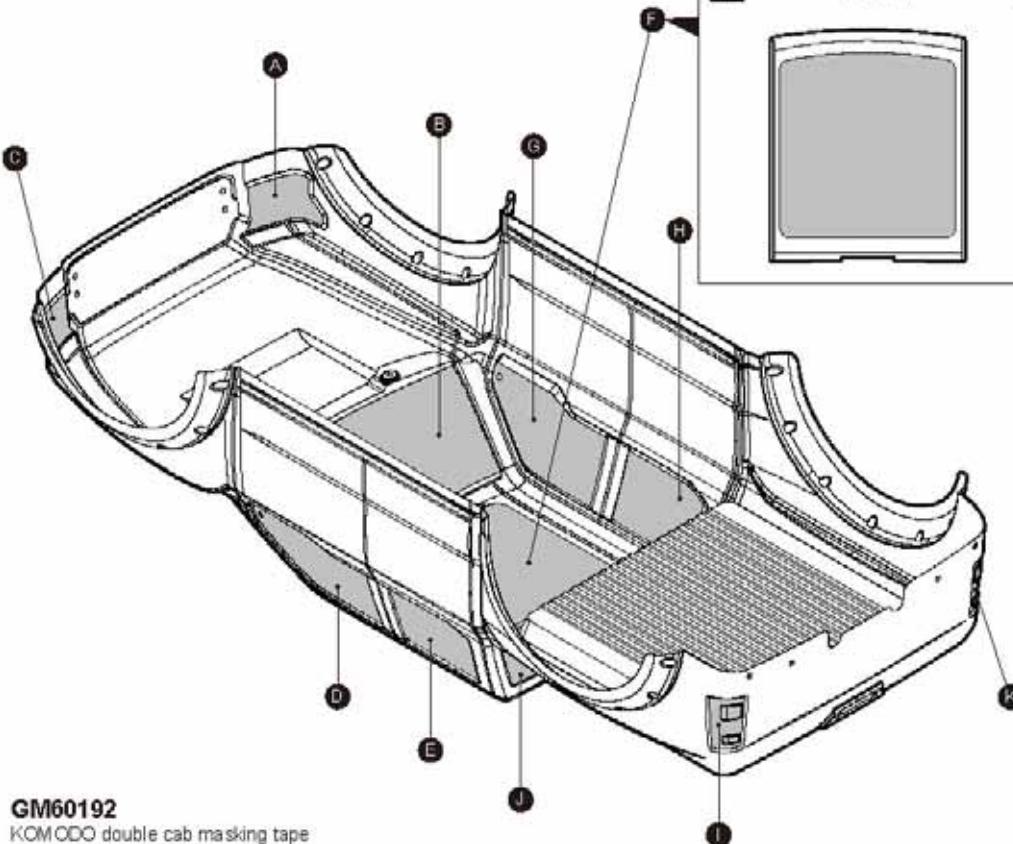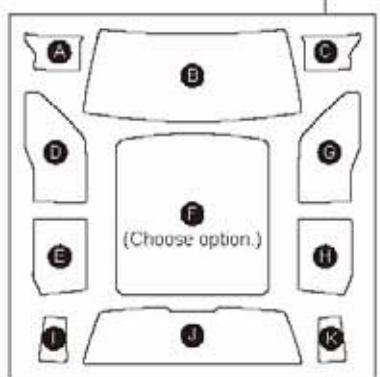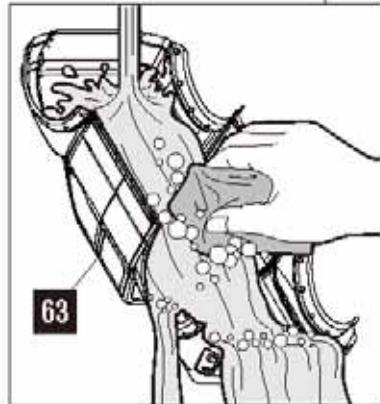BODY MASKING**64**

GM60192
KOMODO double cab masking tape

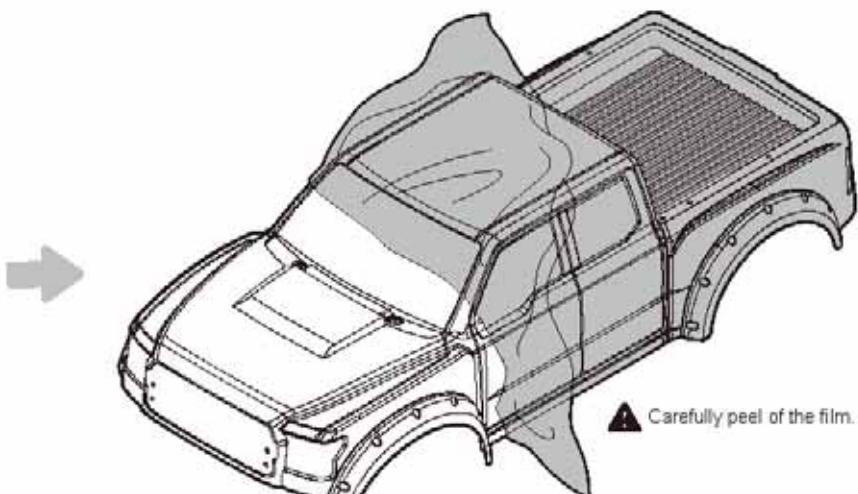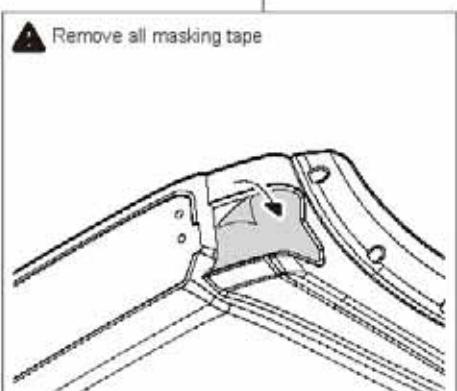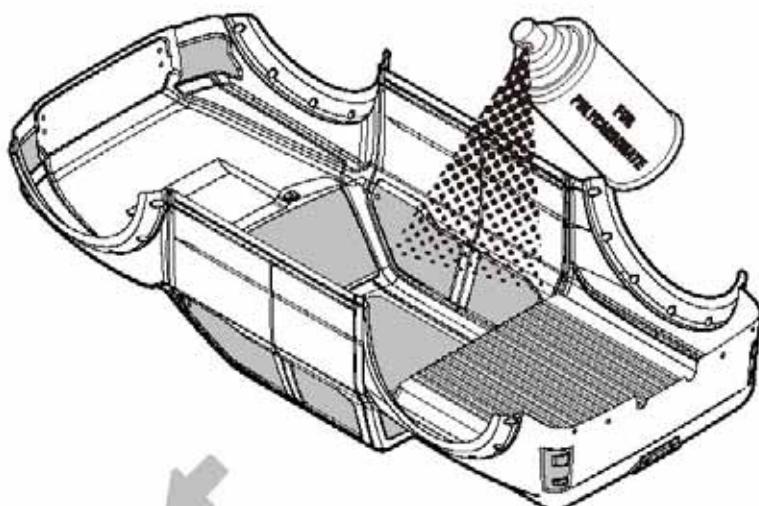BODY PAINTING**65**

⚠ Carefully peel off the film.

FRONT LIGHT BUCKET

66




GMA0198

2x6mm

Nickel round head tapping screw

x4

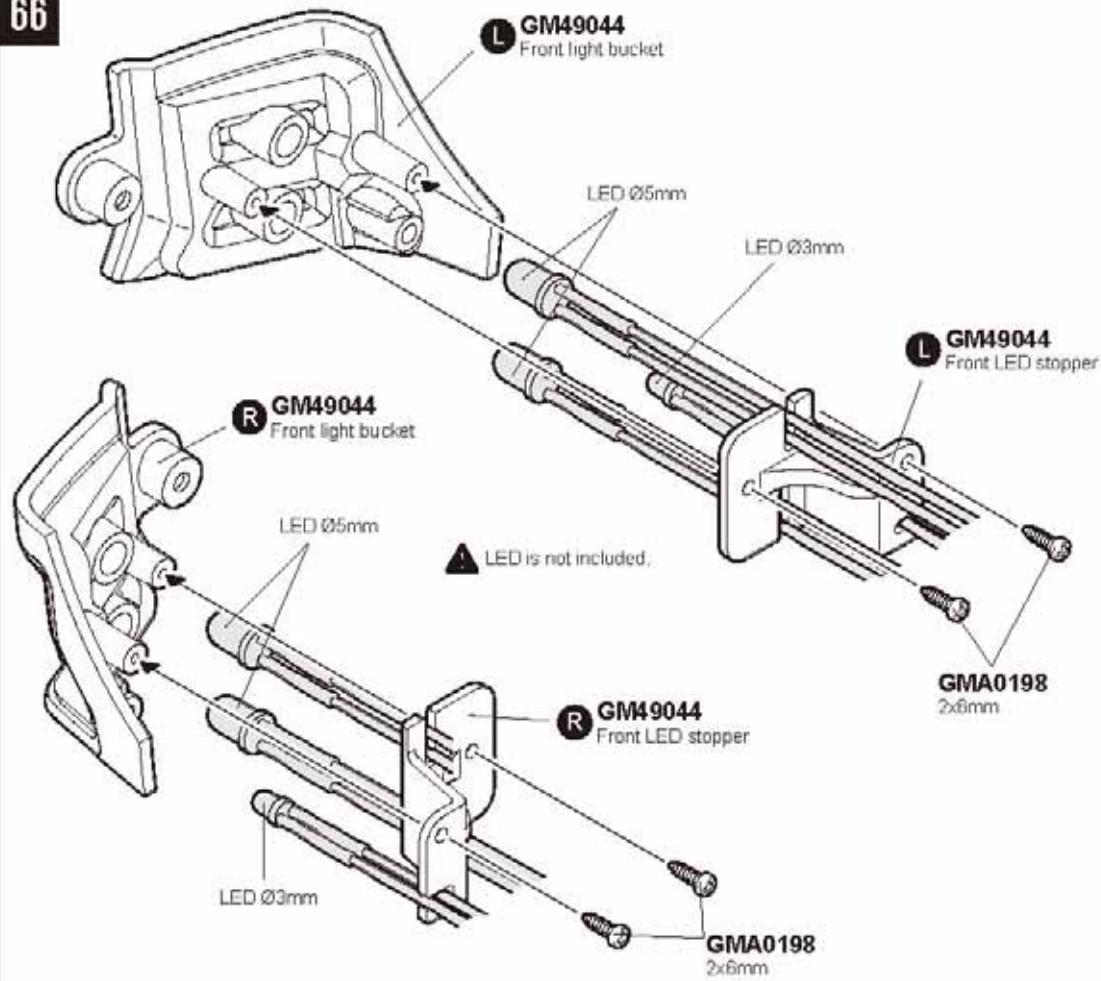

67




GMA0175

3x8mm

Round head tapping screw

x4

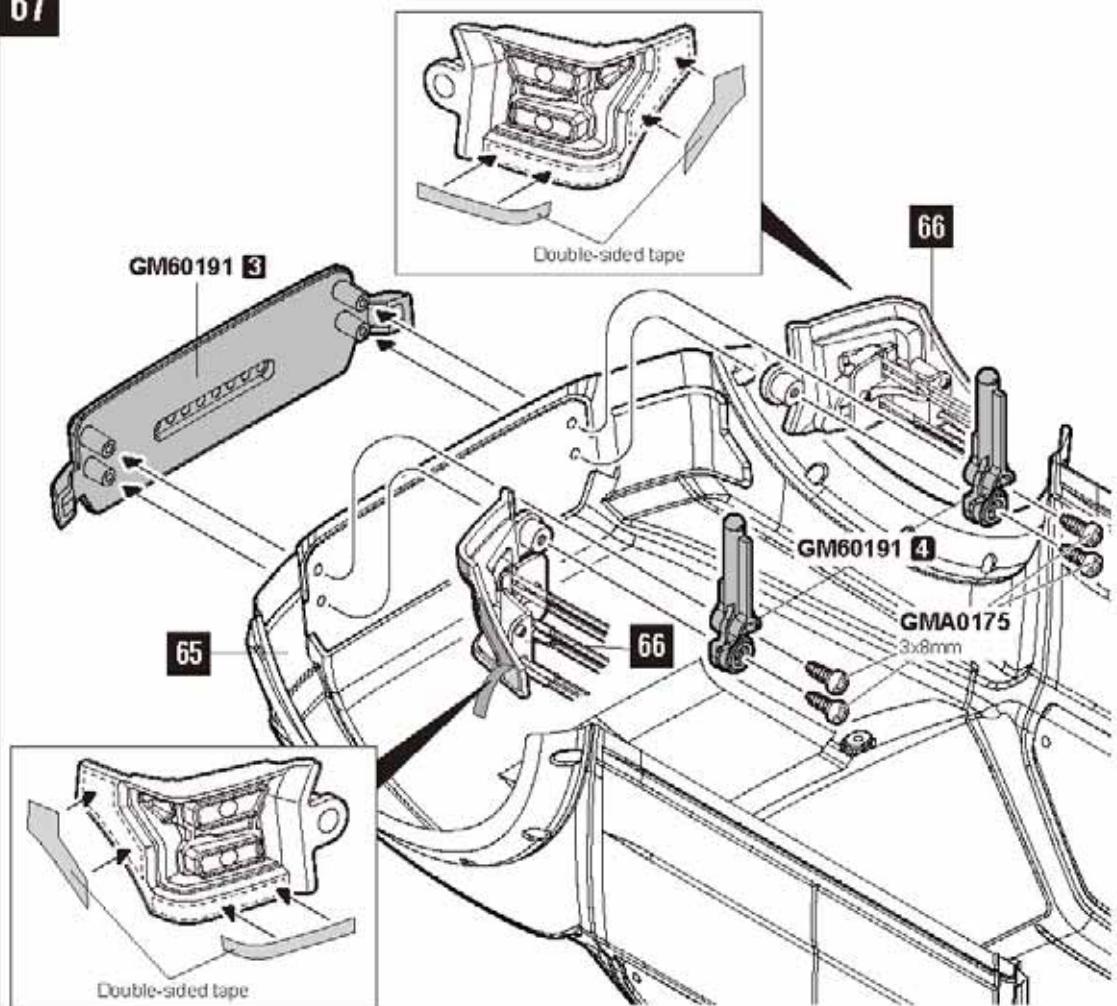

REAR LIGHT BUCKET

68




GMA0198


2x6mm


Nickel round head tapping screw

x4


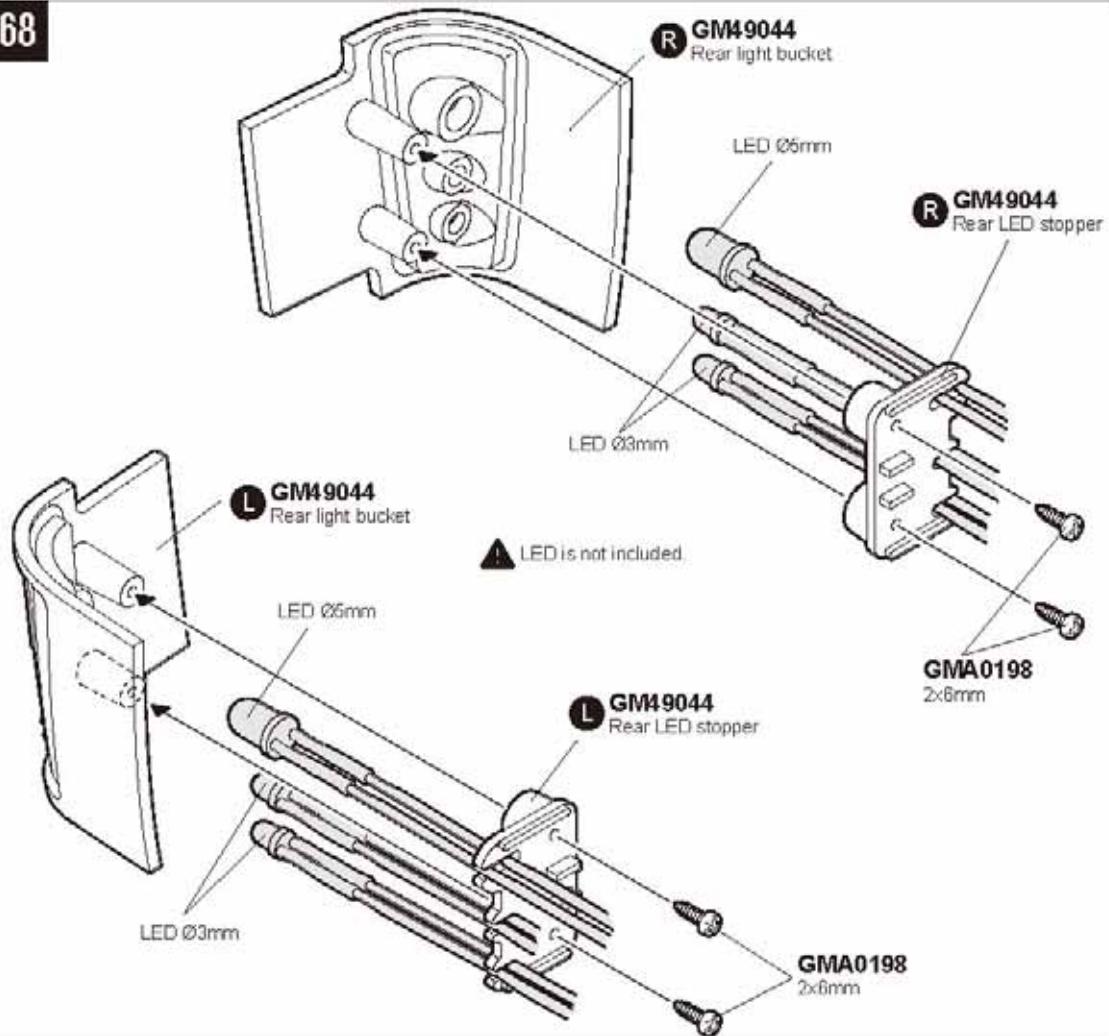


69

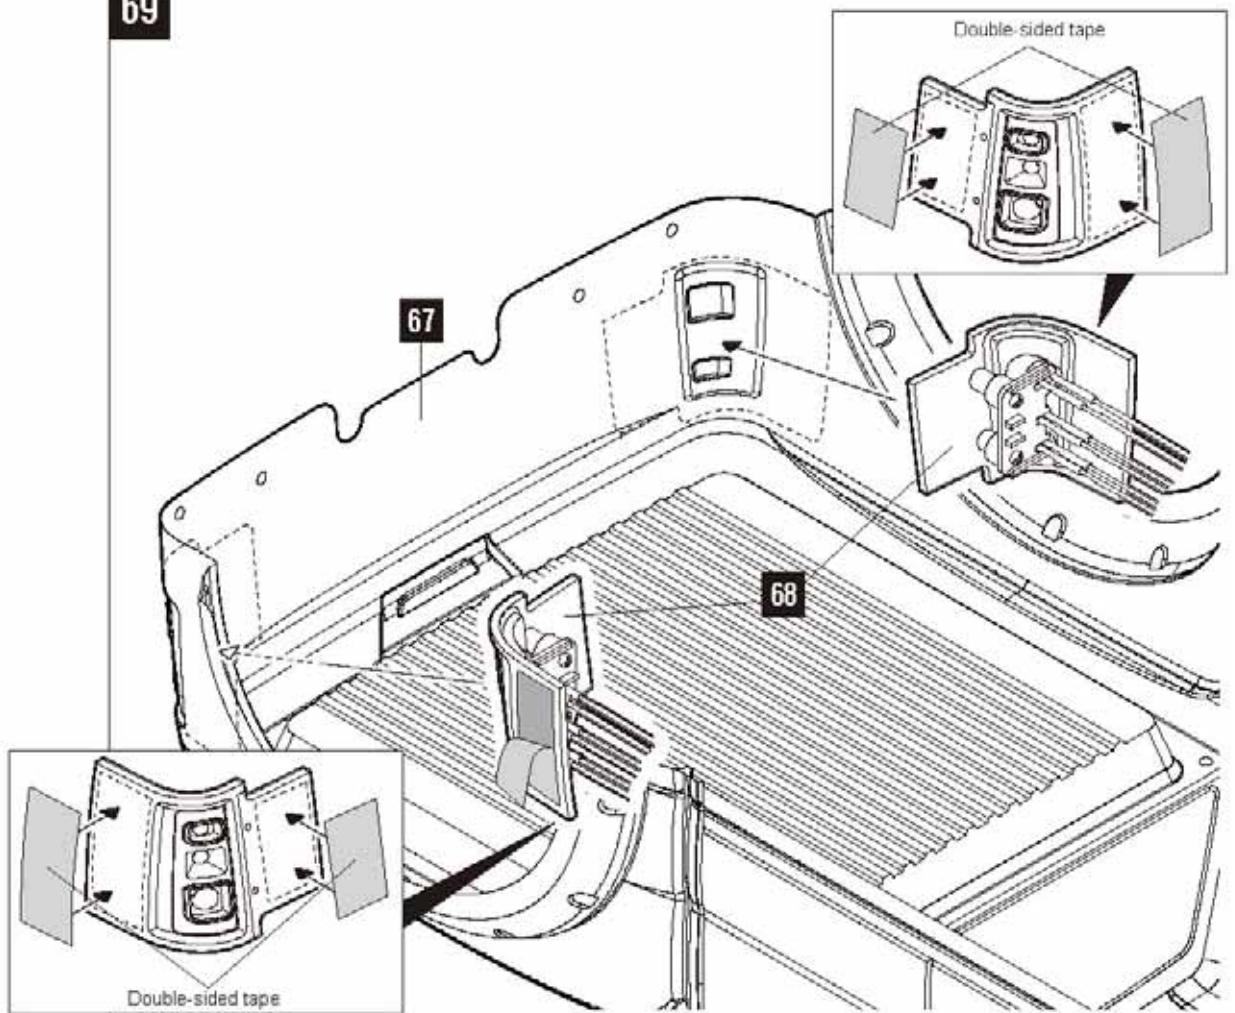

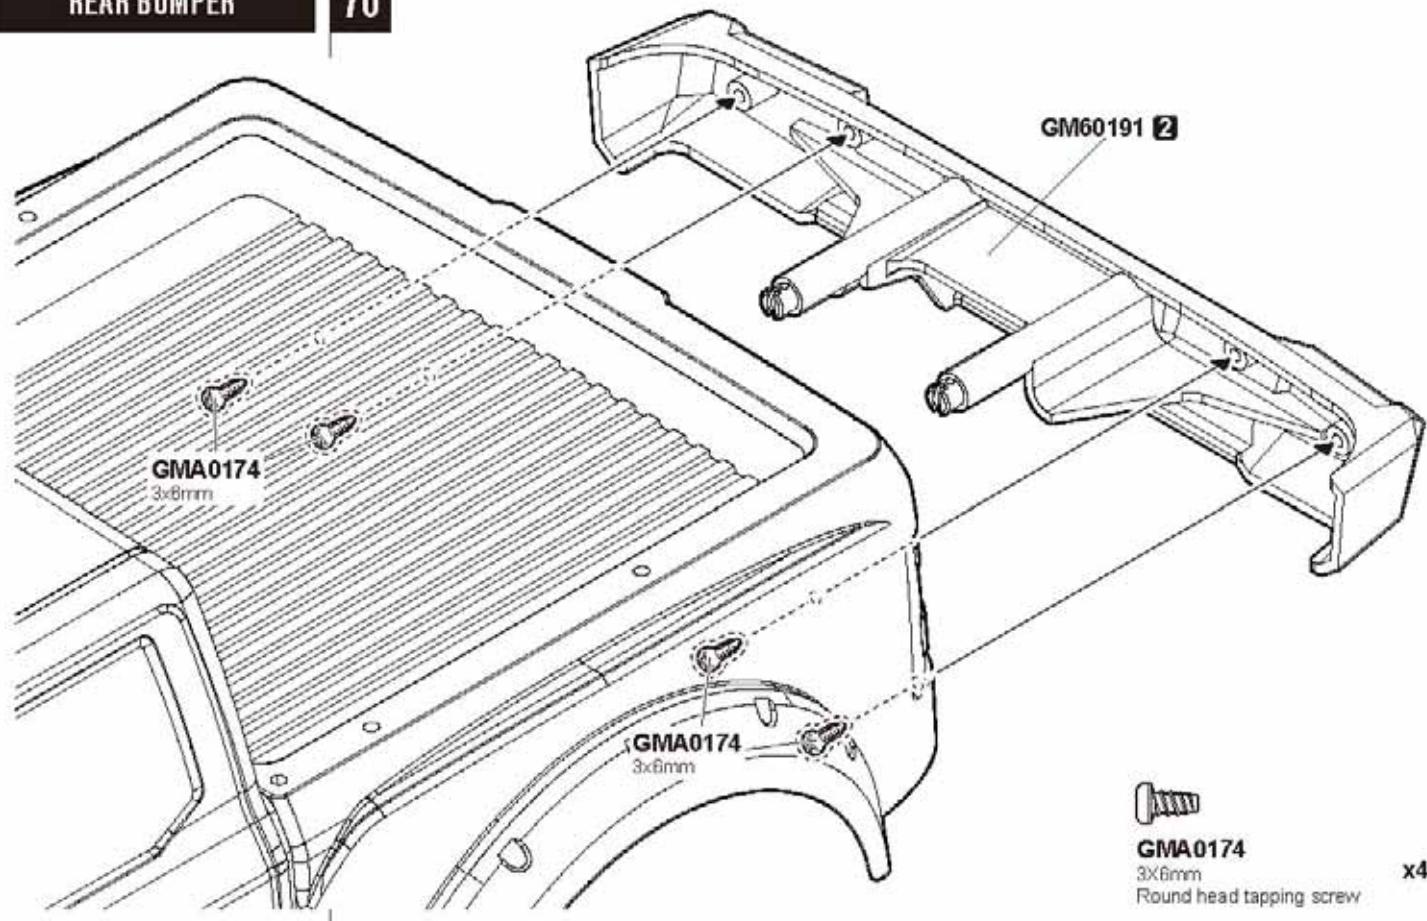REAR BUMPER**70****WIPER GRILLE & MIRROR****71****GMA0174**3x6mm
Round head tapping screw

x2

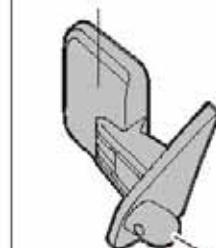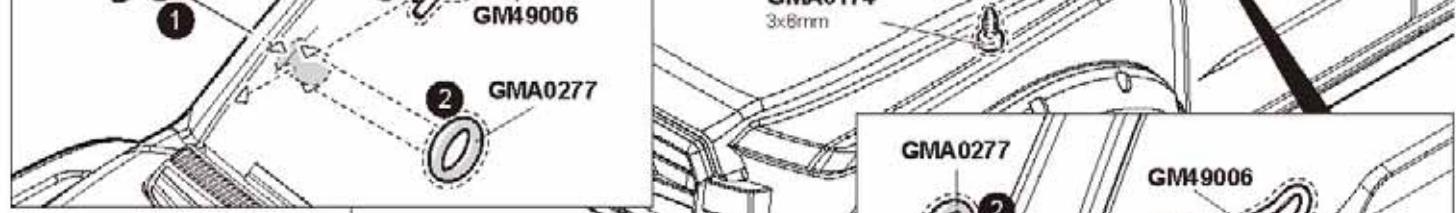R GM49044**GM49044****GM49006**


R5 snap pin


x2

**GMA0277**


P4 O-ring (RED)

x2

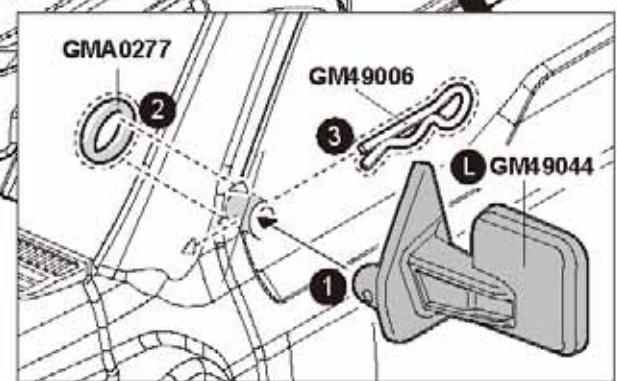70

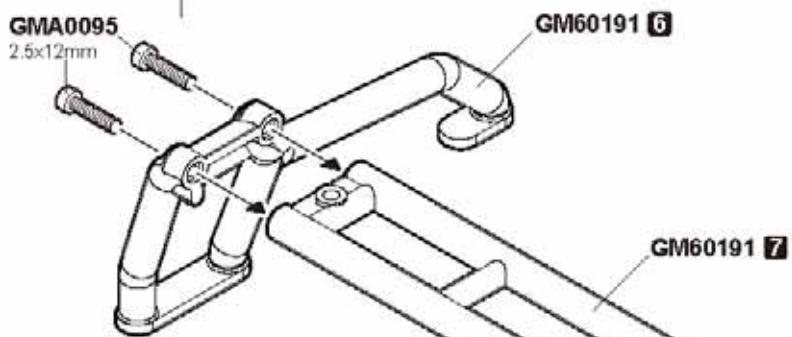REAR CAGE**72**

x4

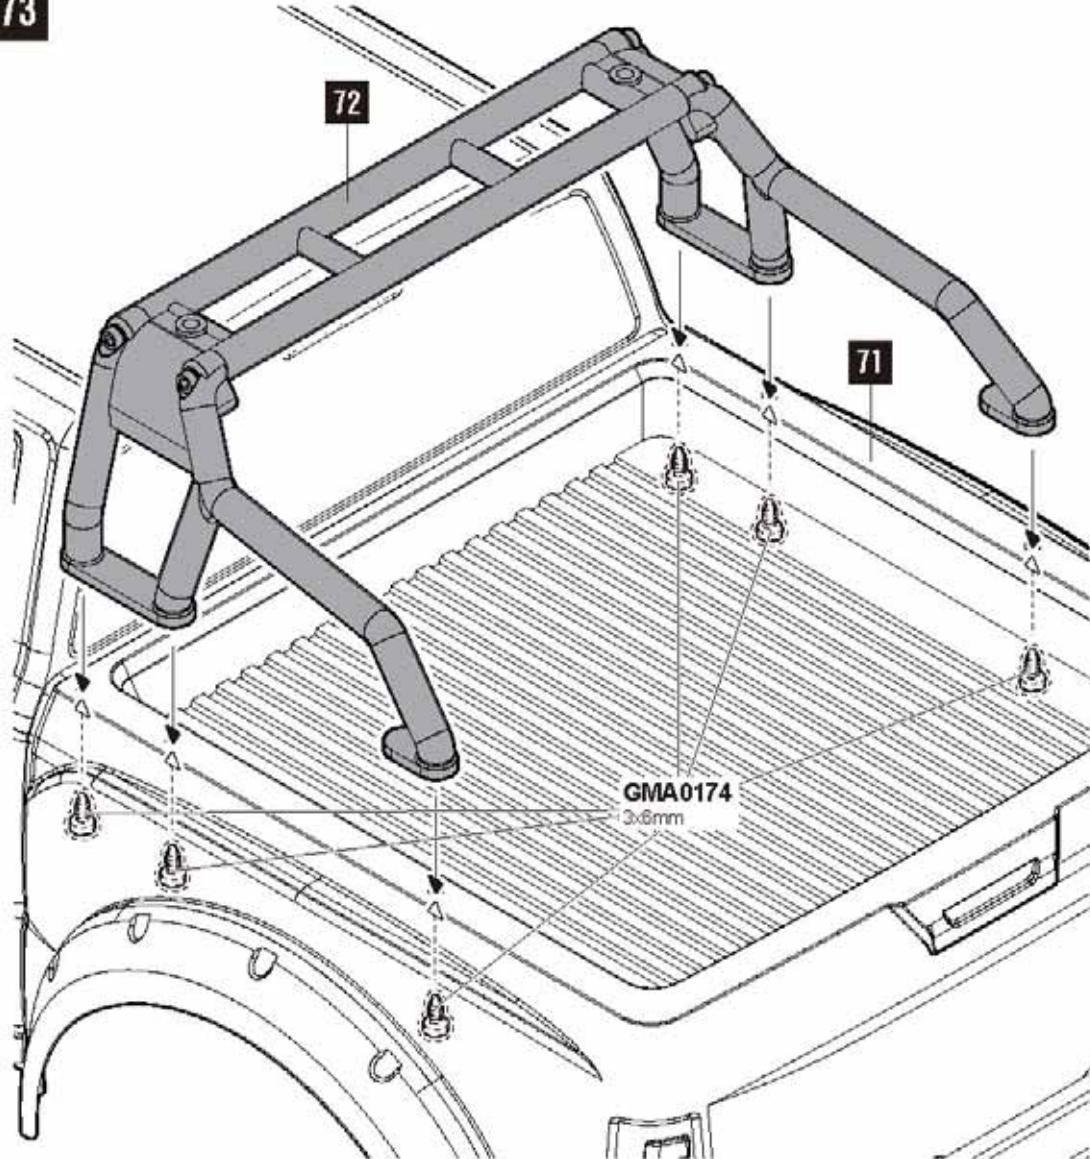
GMA0095
2.5x12mm Wrench bolt**73**

ROOF RACK

74



GMA0198

2x6mm

Nickel round head tapping screw

x5



GMA0174

3x6mm

Round head tapping screw

x4



GMA0175

3x8mm

Round head tapping screw


x2



GMA0170

P5 O-ring

x4

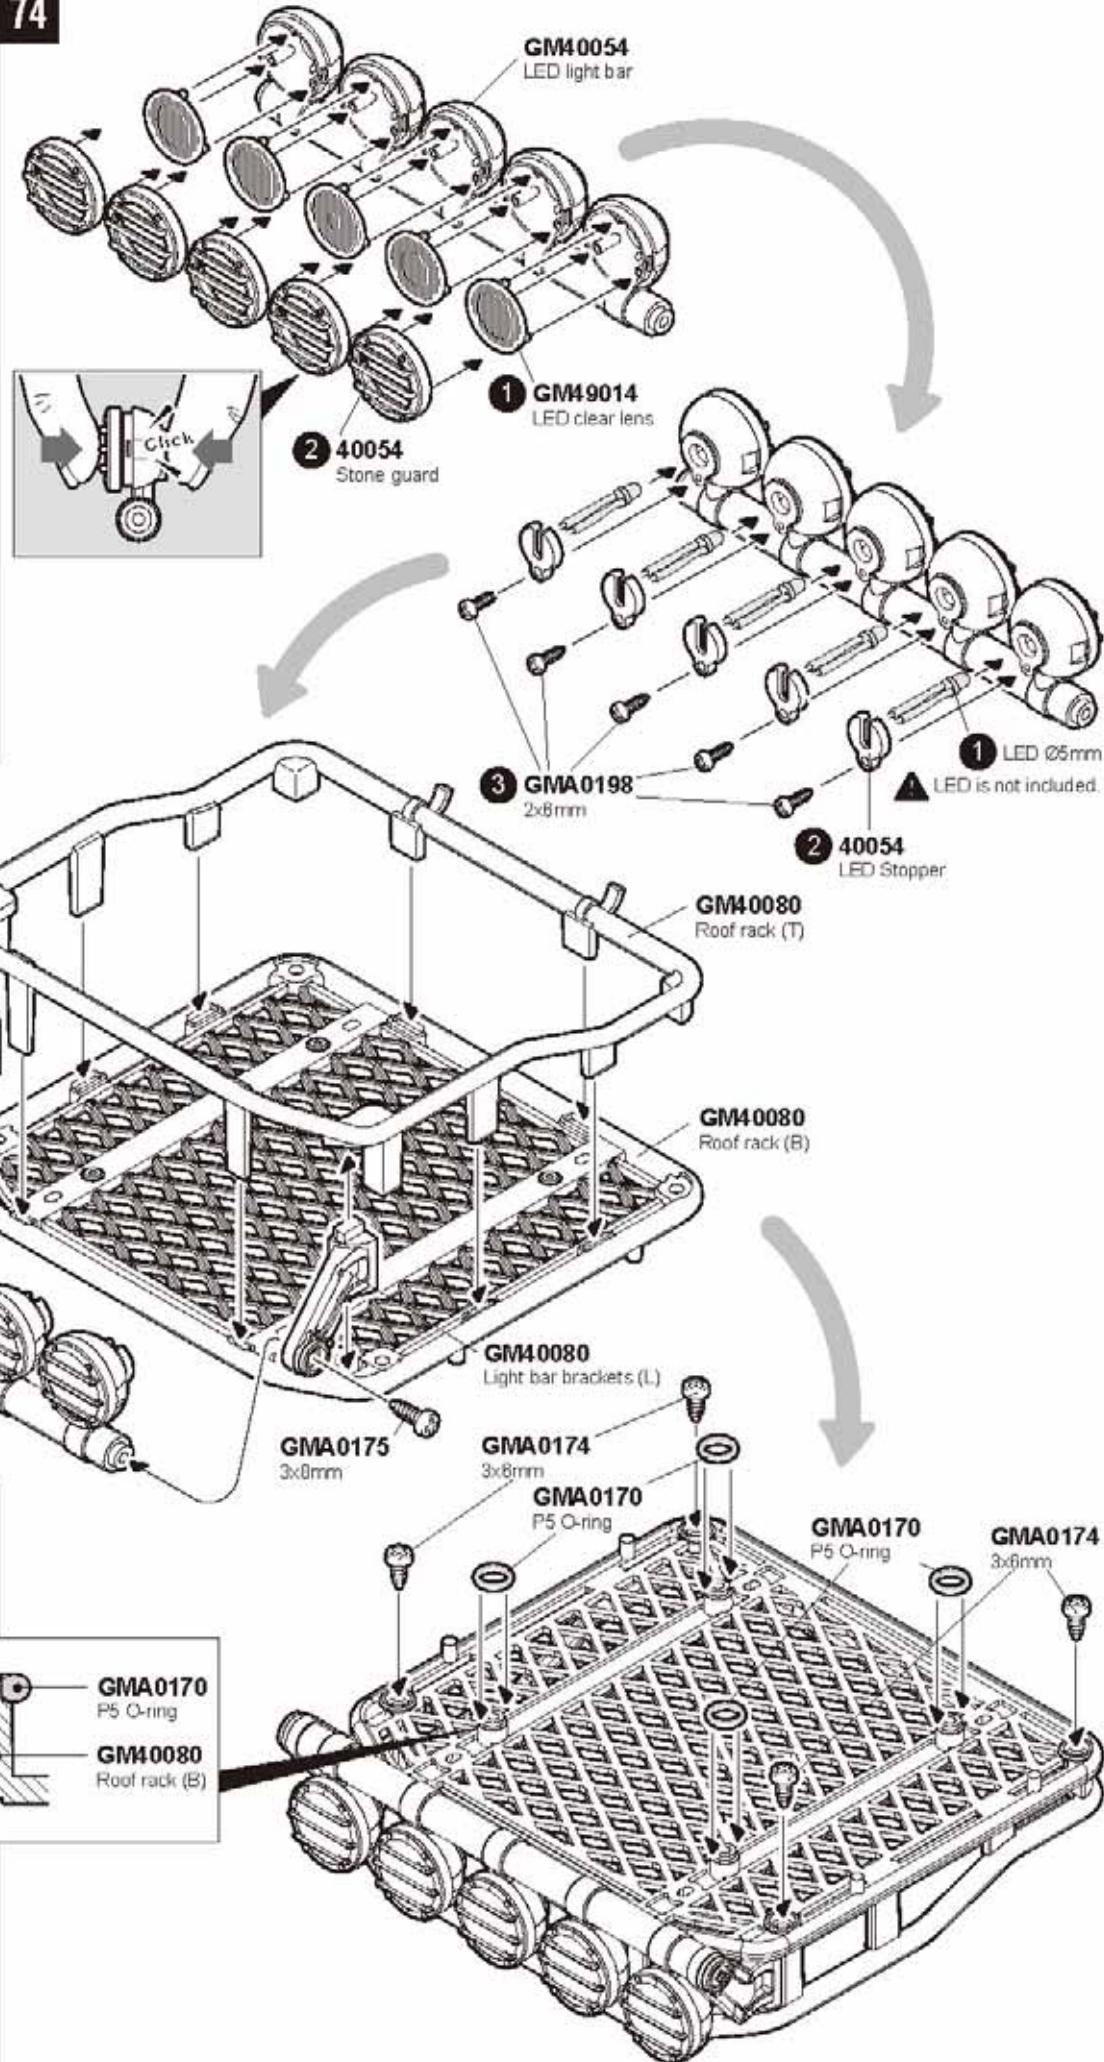

ROOF RACK

75



GMA0175

3x8mm
Round head tapping screw

x4



GMA0158

3mm Washer


x4




GM49080


3x8x2mm
Rubber washer

x4

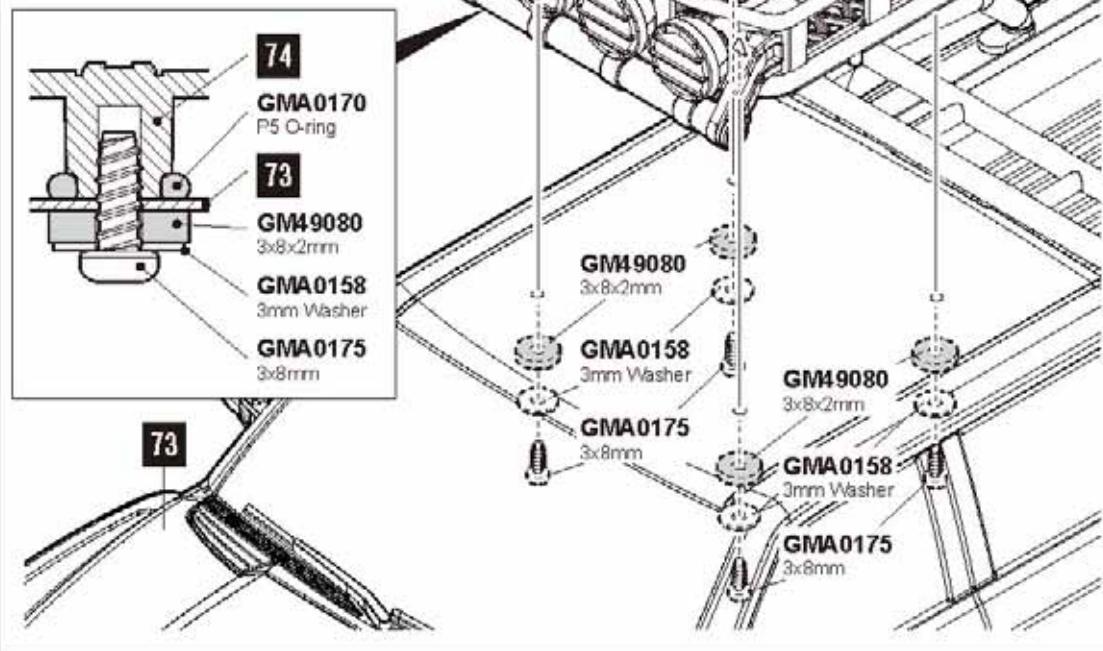


76

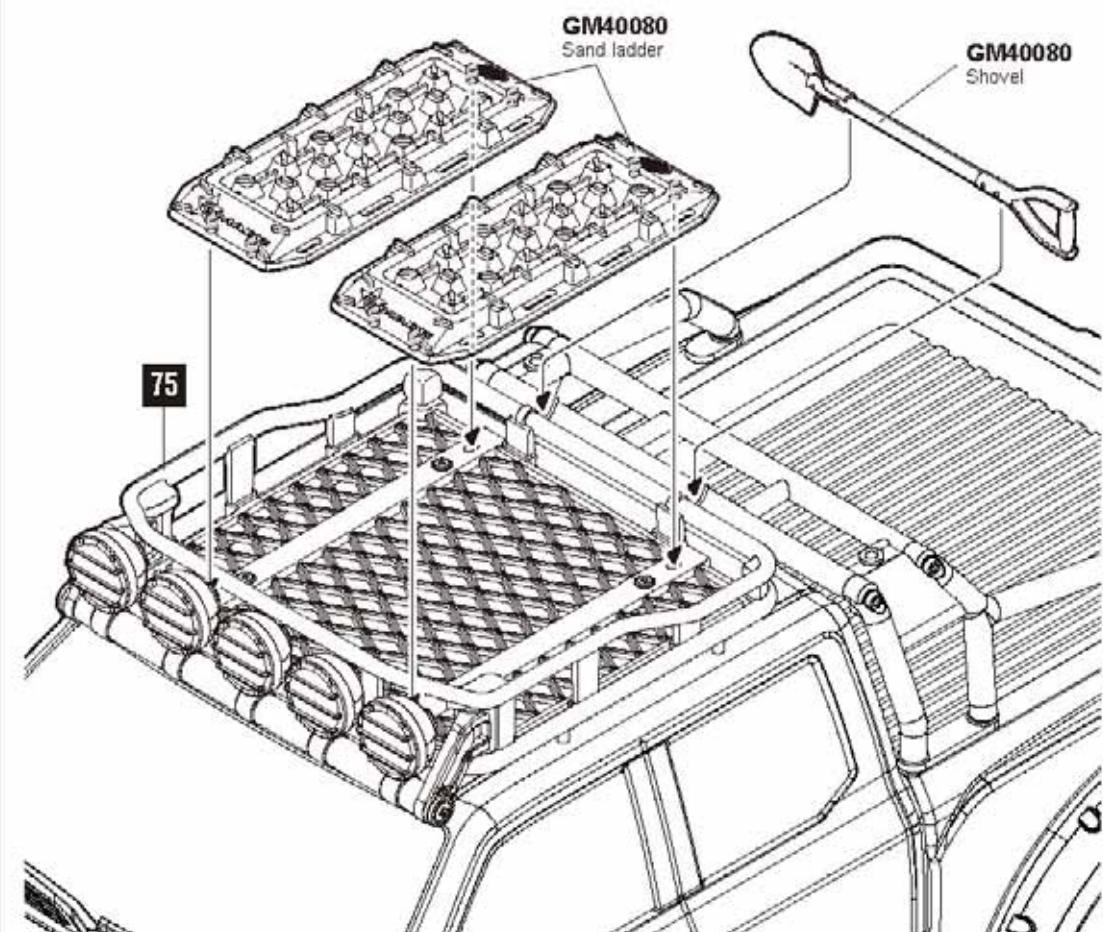

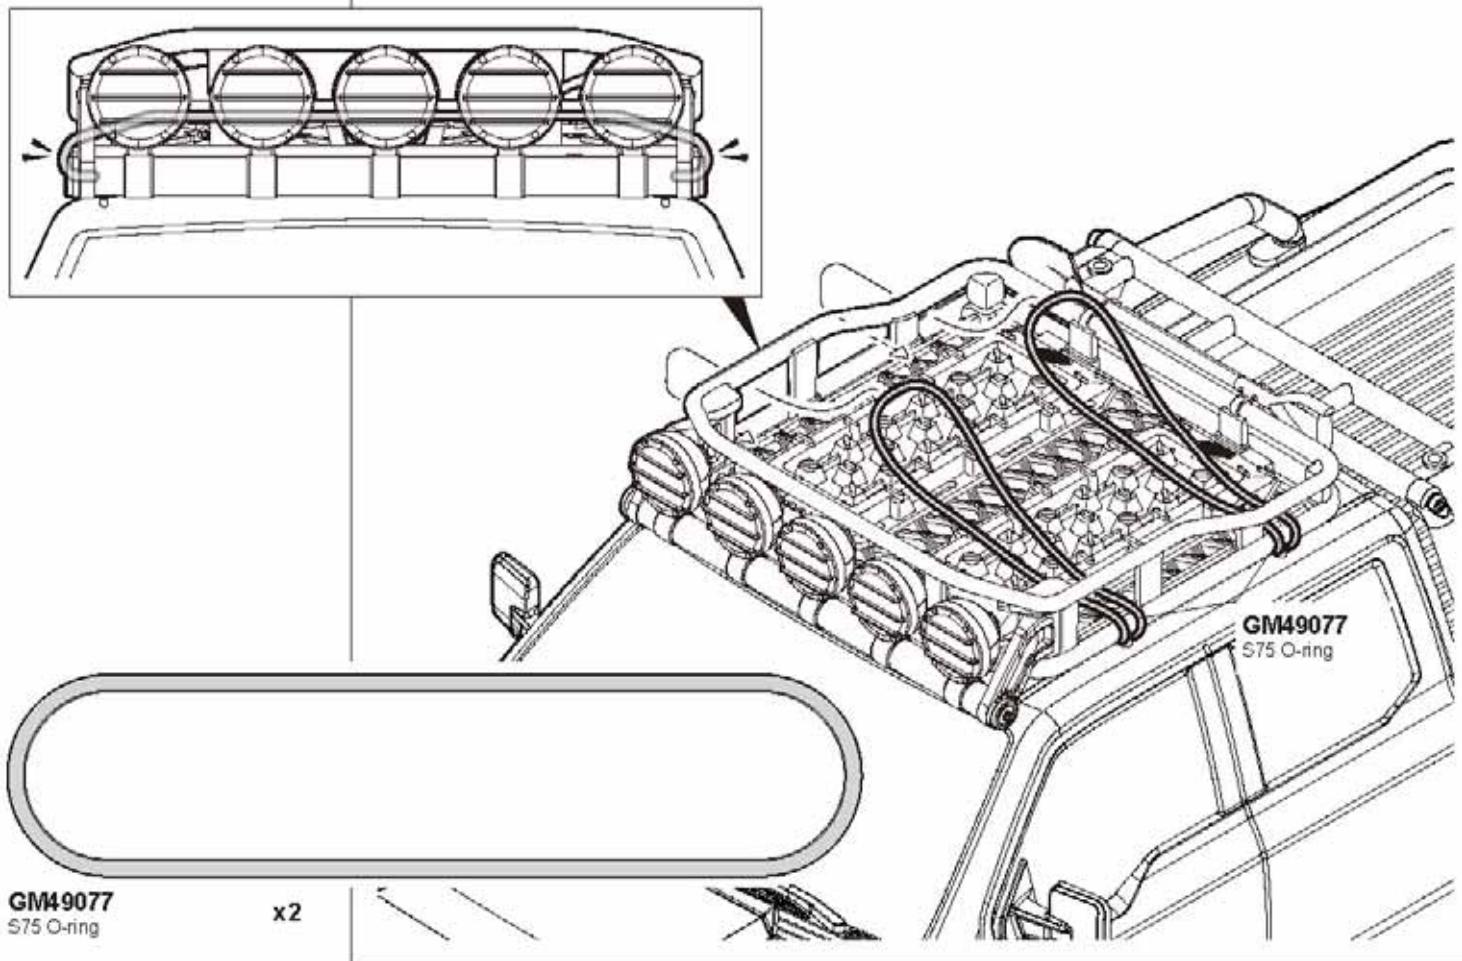ROOF RACK**77****FRONT BUMPER****78**


GMA0020
3x12mm
Round head wrench bolt x2

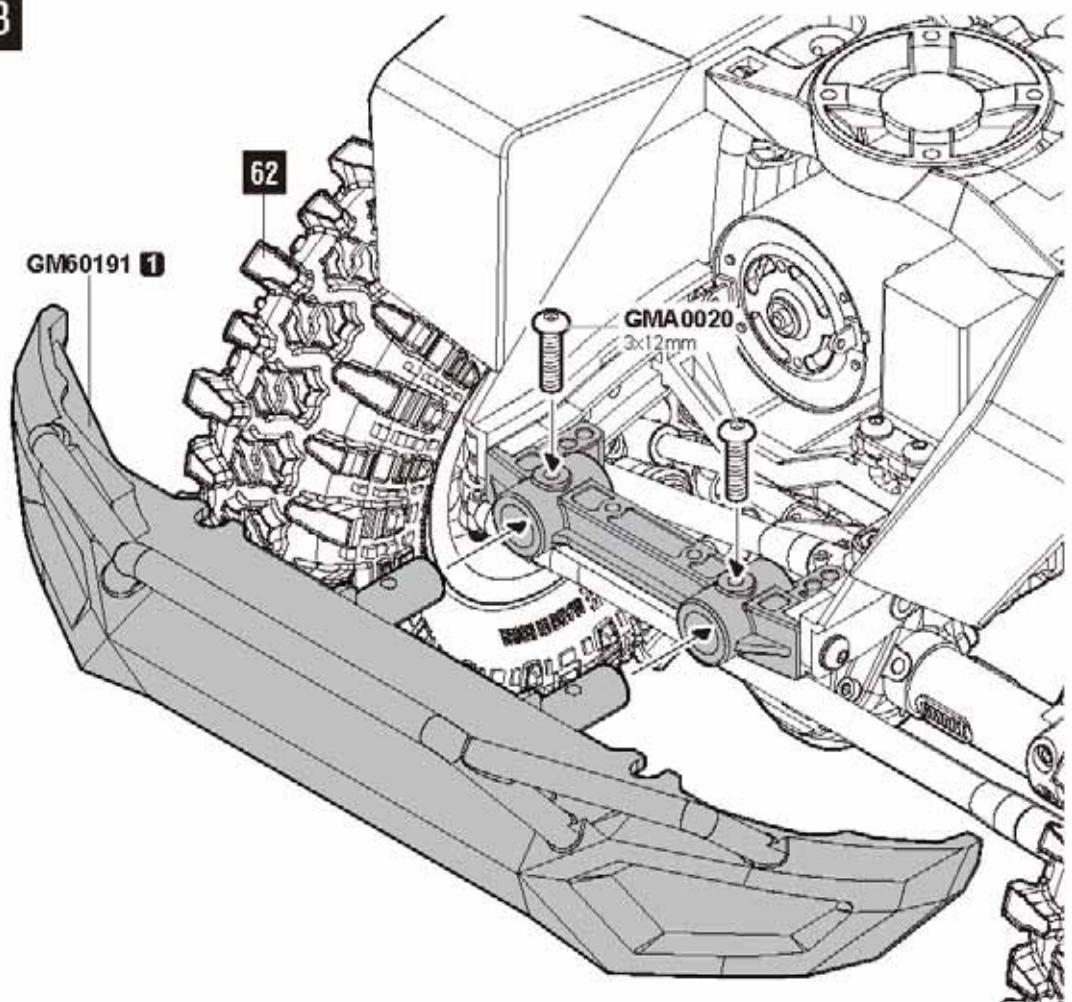





GM50116
R6 snap pin



x4

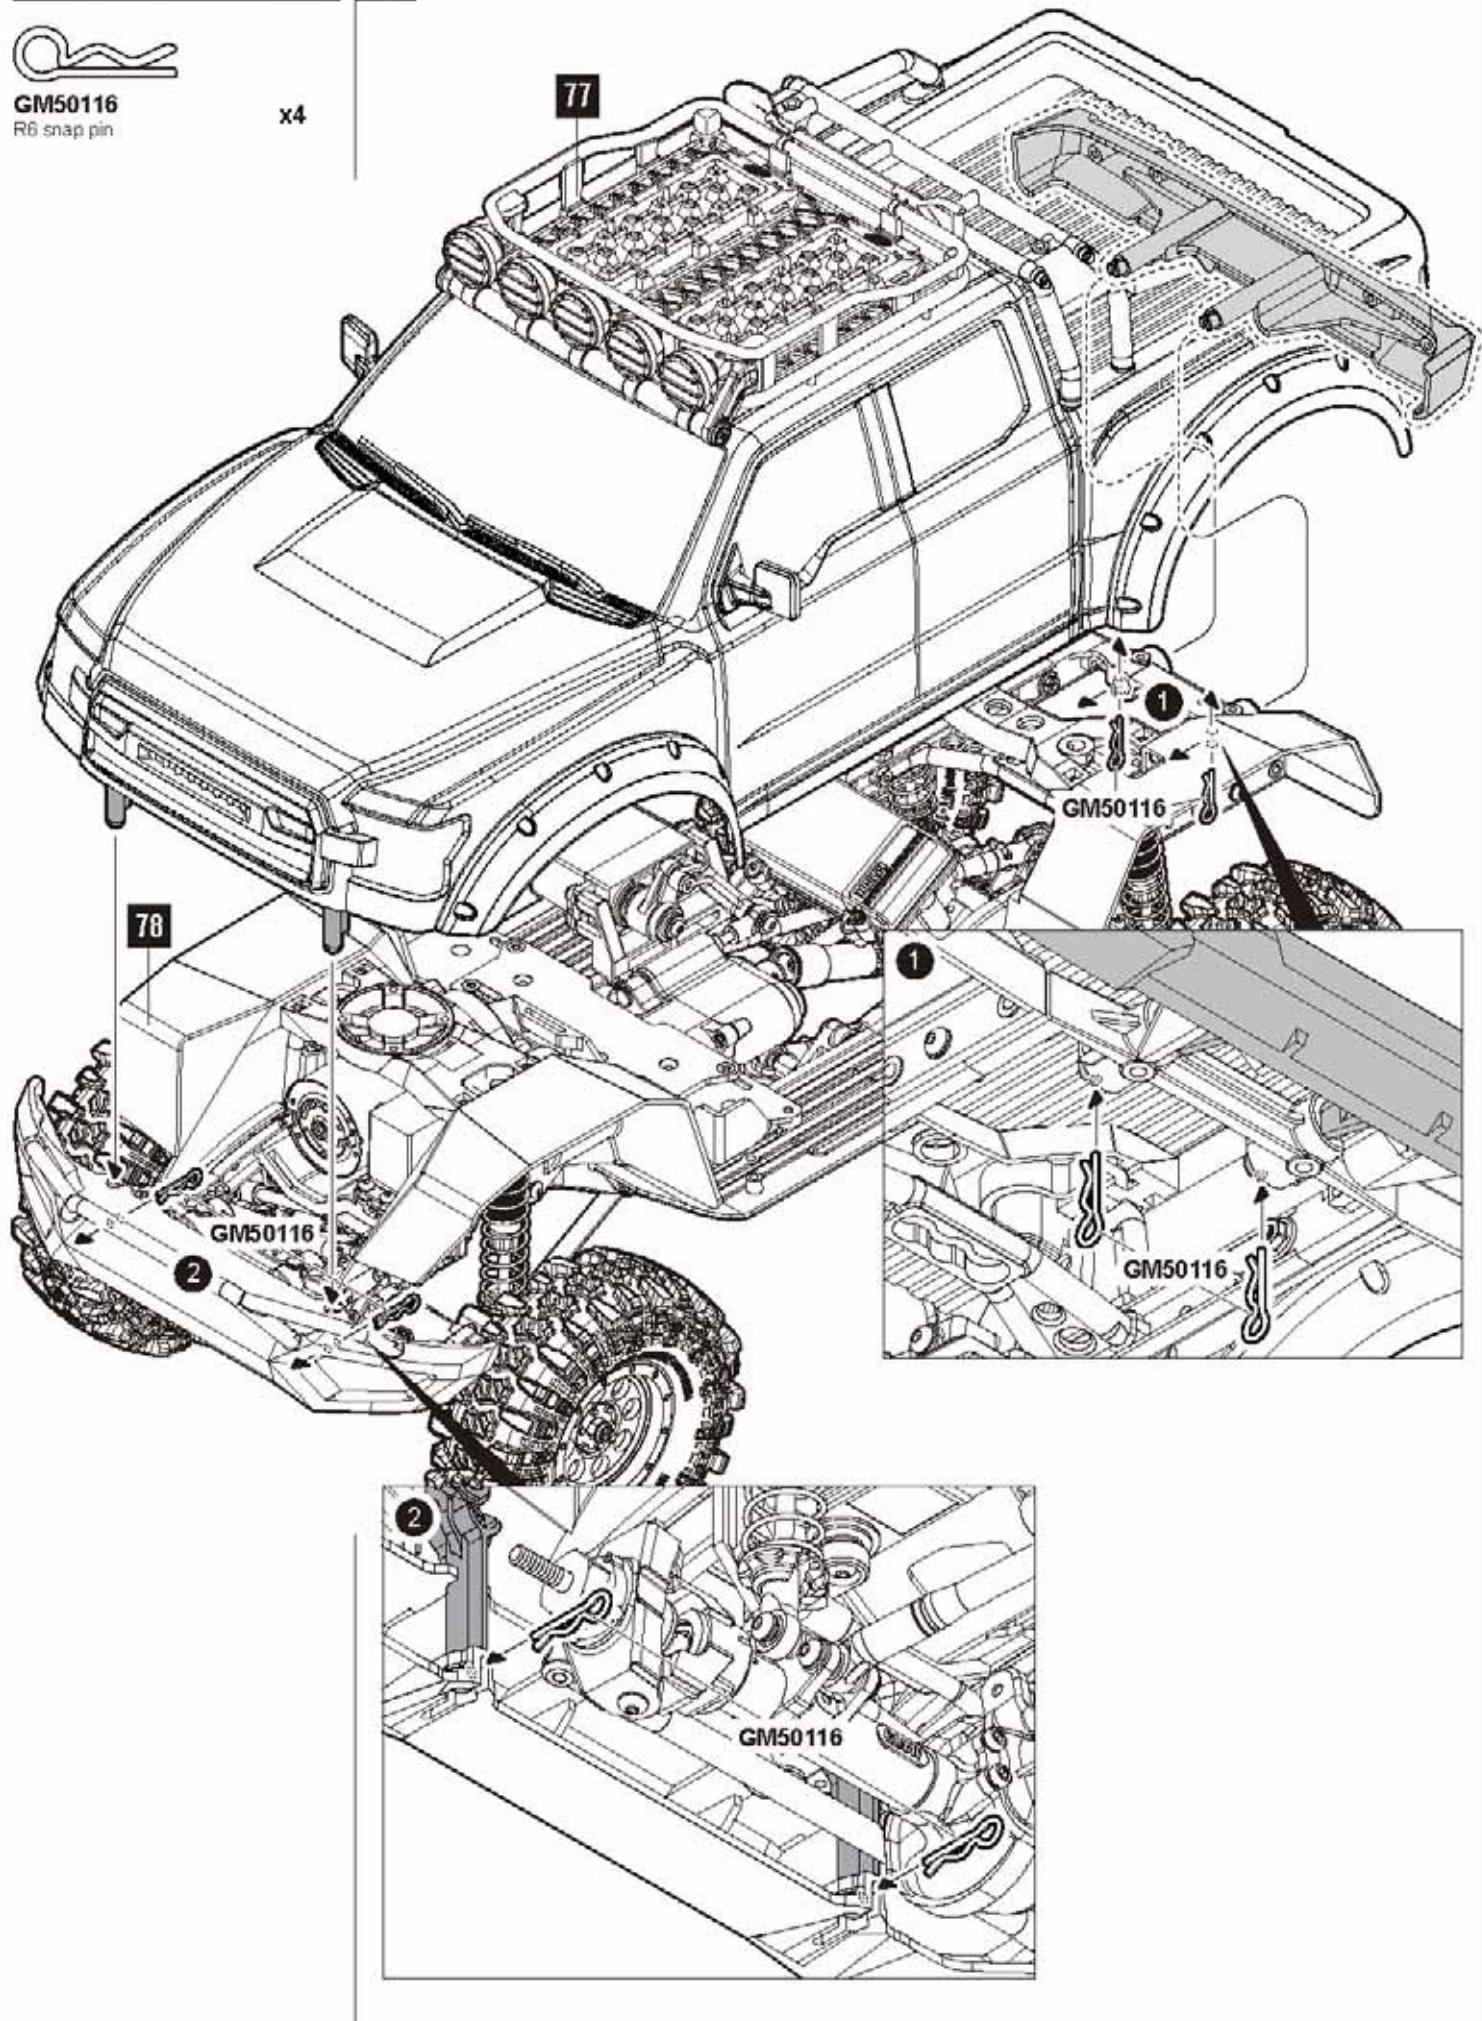

MARKING

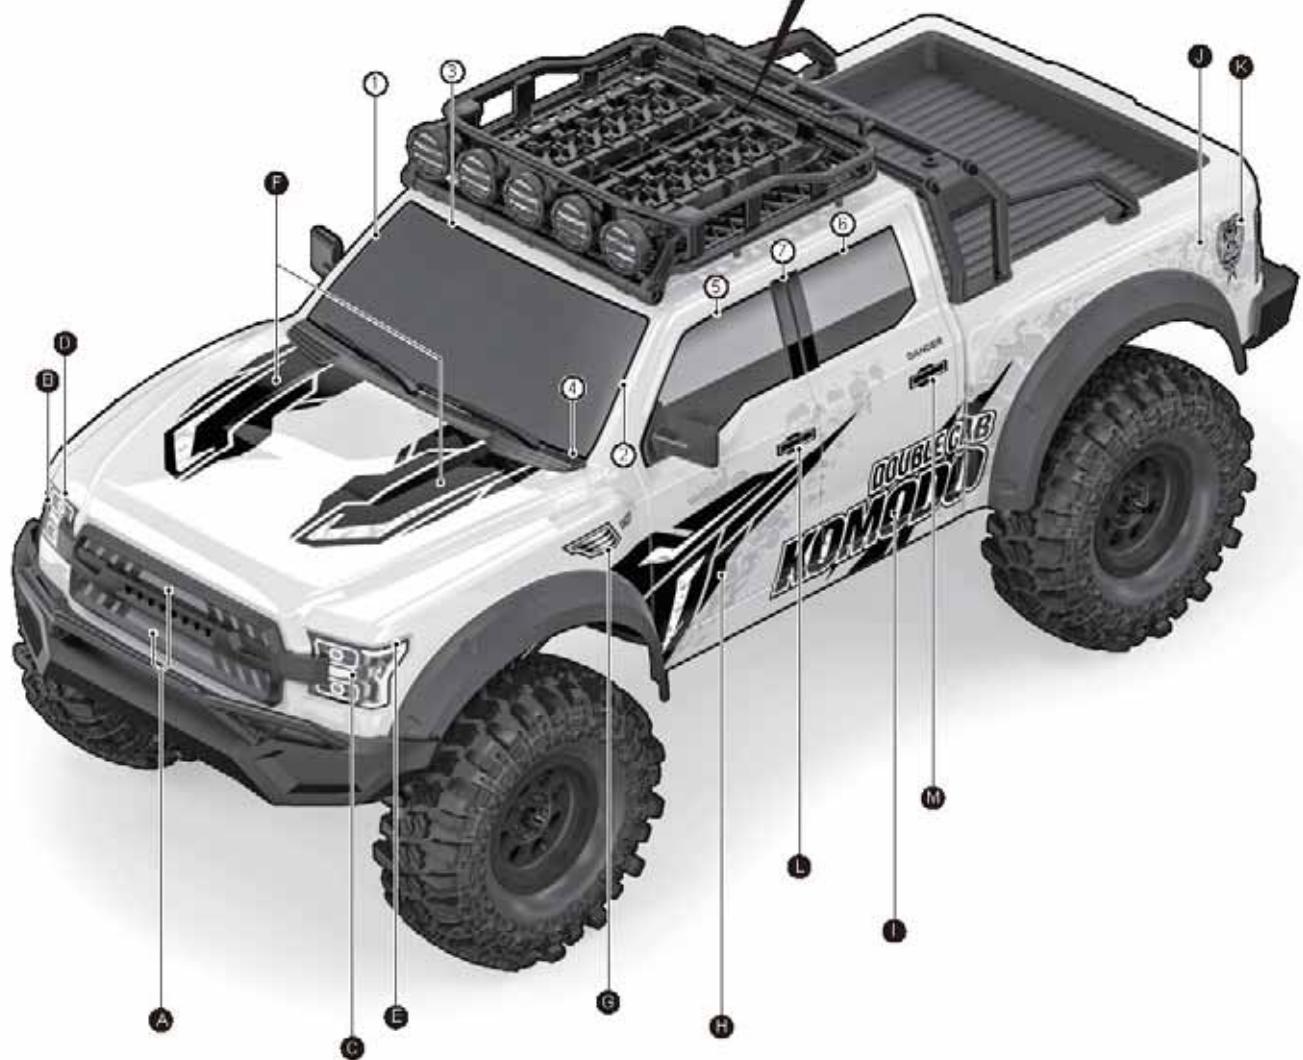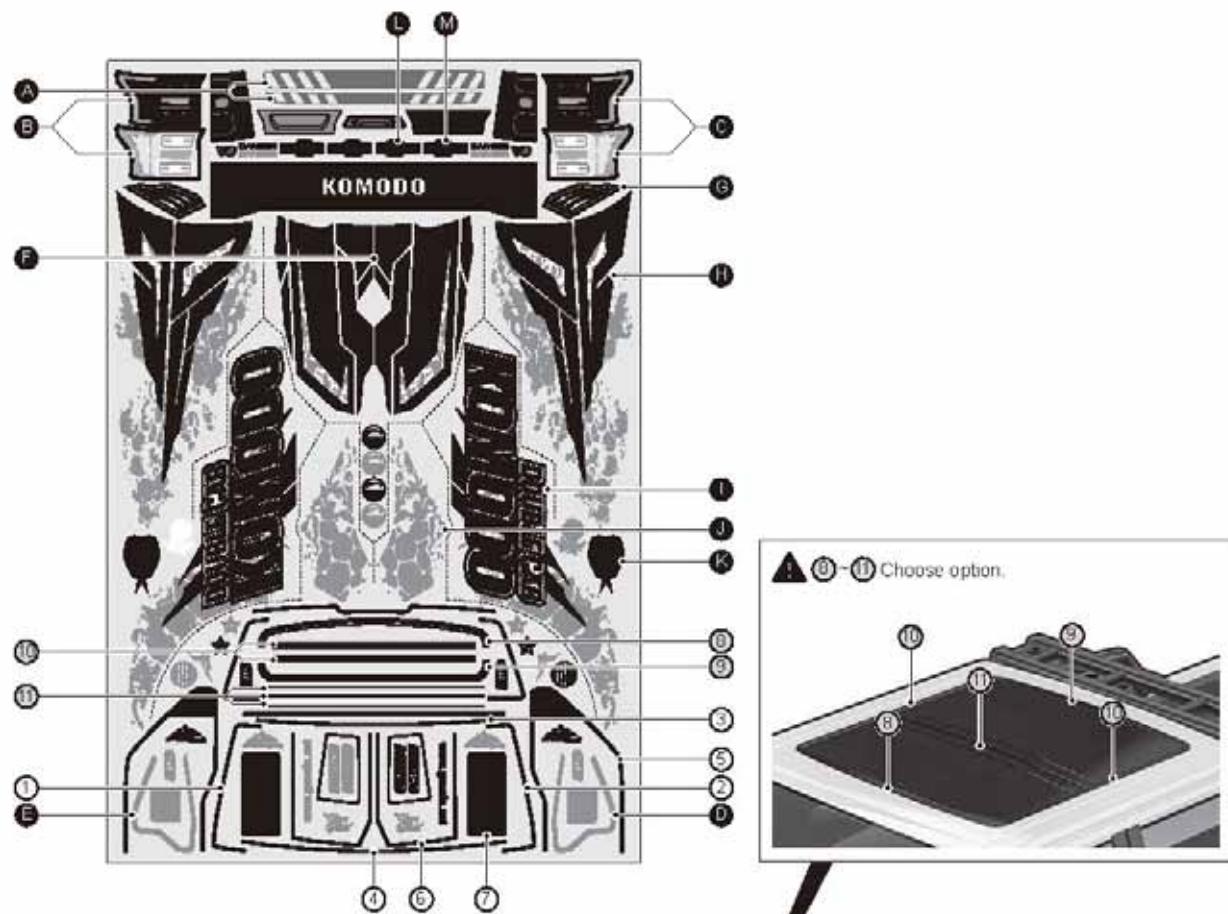


MARKING

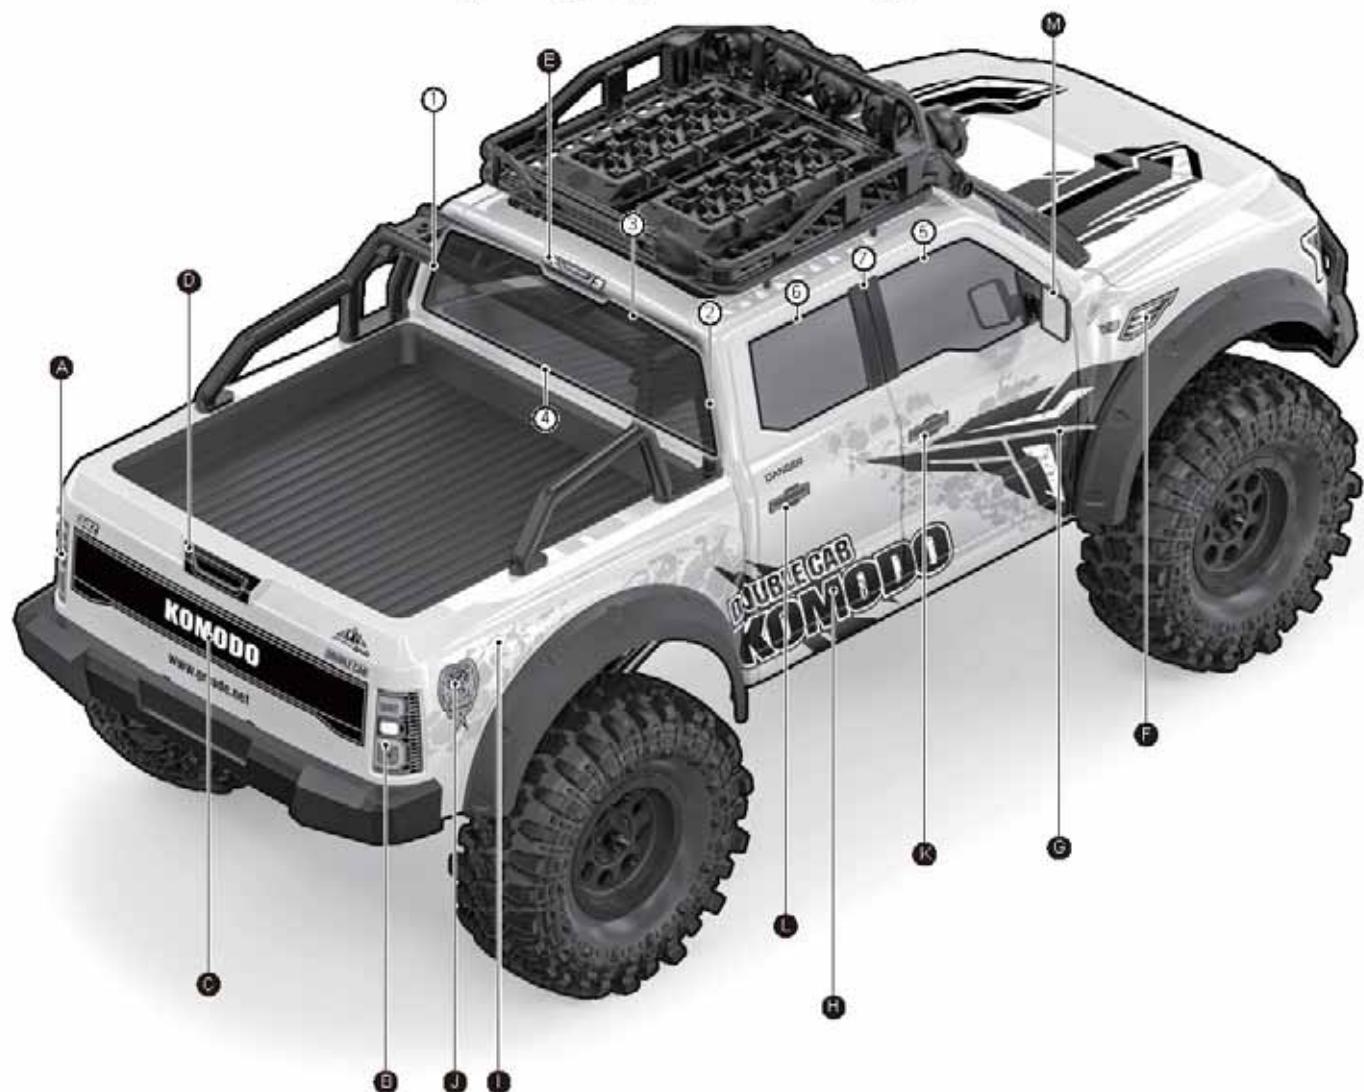
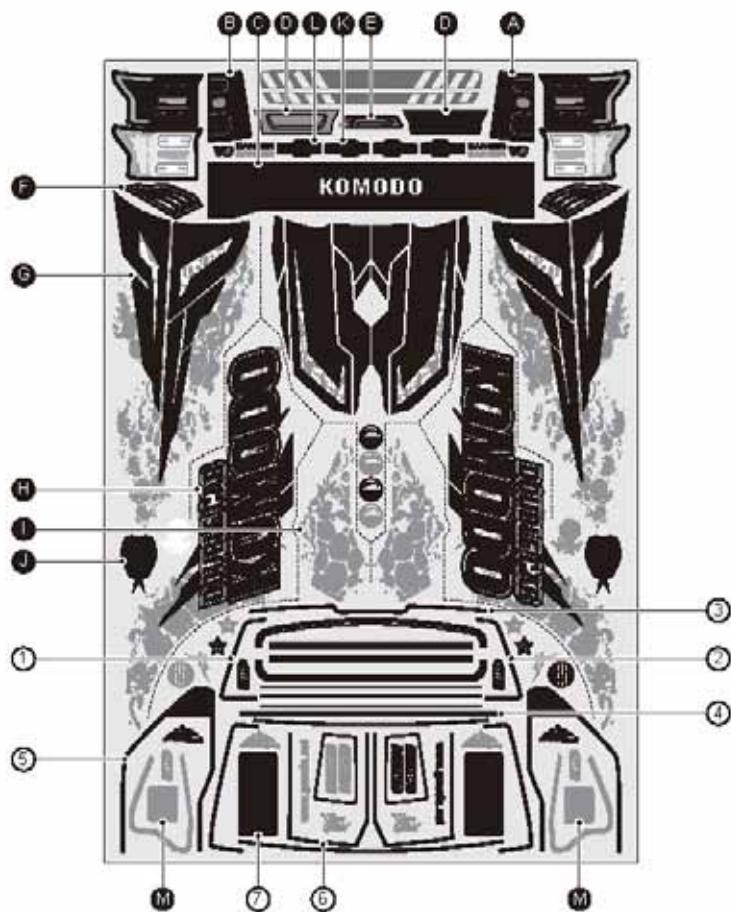


BATTERY LOCATION

FOR SHORTY BATTERY

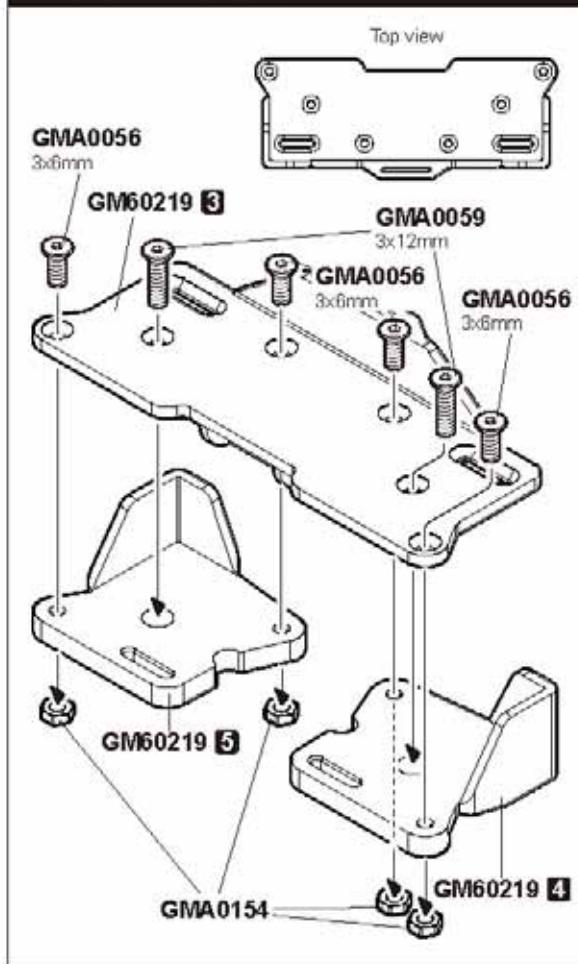

FOR STANDARD BATTERY

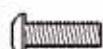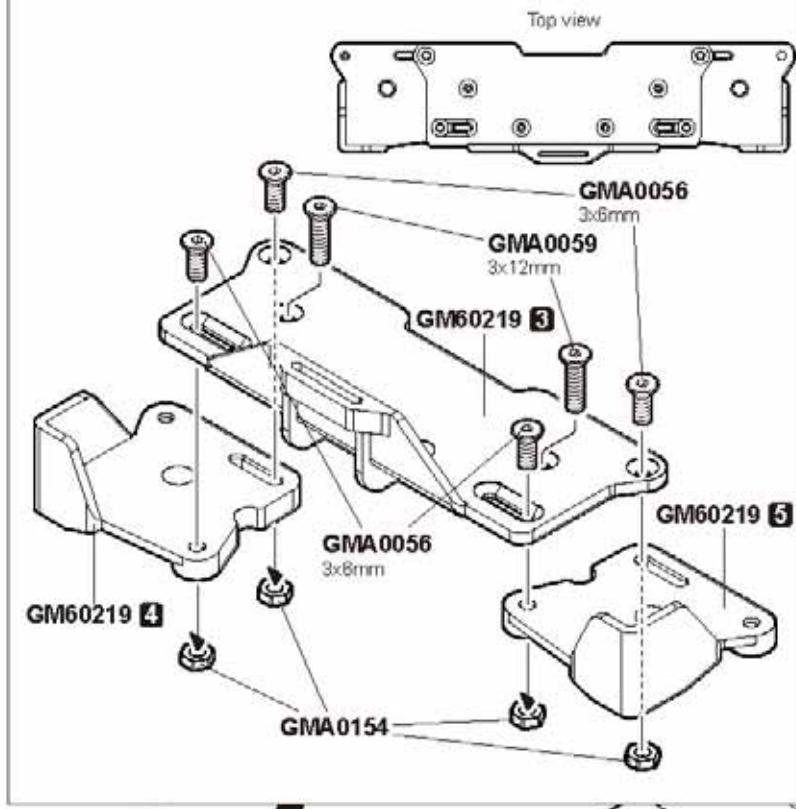

GMA0019

3x10mm
Round head wrench bolt

x2



GMA0154

M3 Nut


x4



GMA0056

3x6mm Flat head wrench bolt

x4

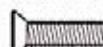


GMA0059

3x12mm Flat head wrench bolt


x2

▲ ESC is not included.

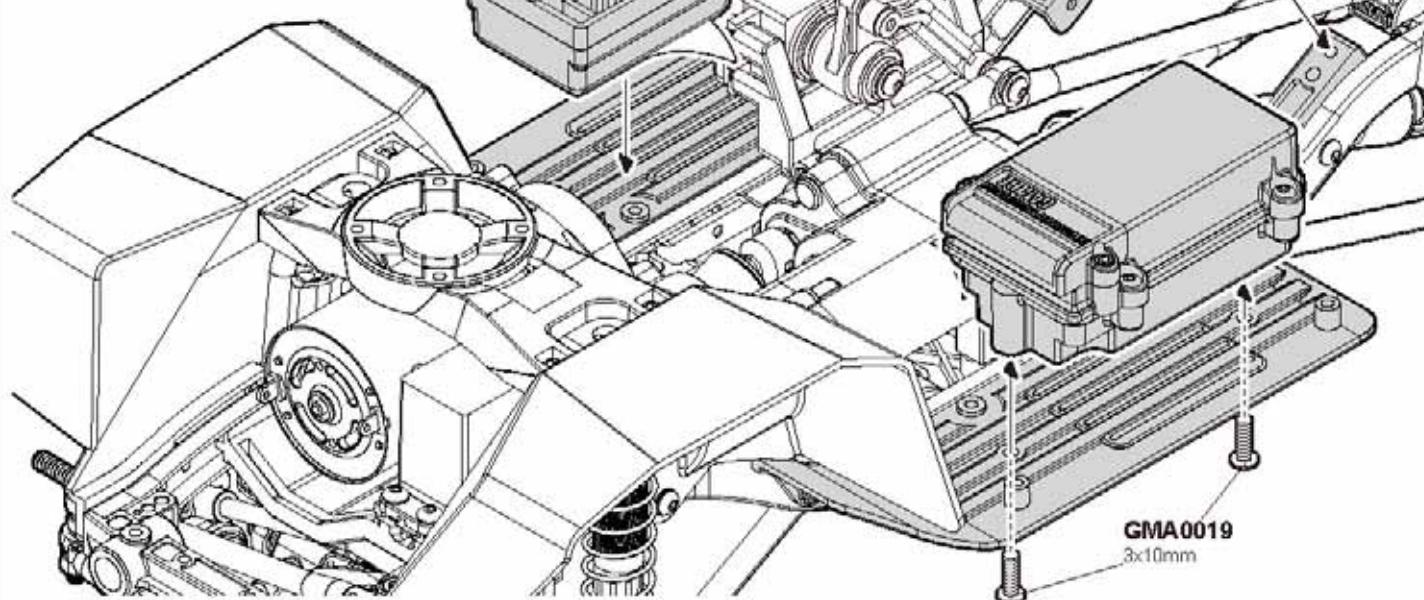


OVERDRIVE GEAR RATIO


**No overdrive (Option)
30T / 30T (GM30172)**

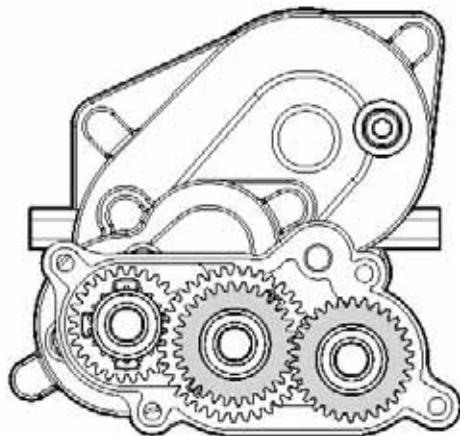

**Overdrive 1 (Stock)
32T / 28T**

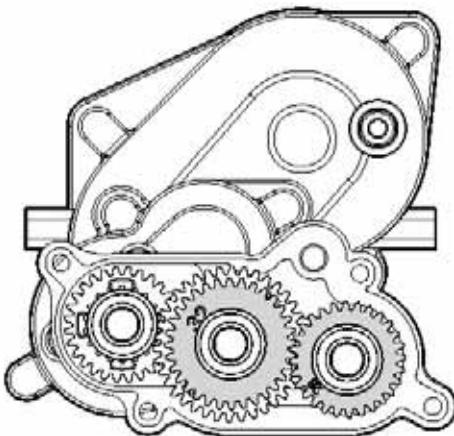

**Overdrive 2 (Option)
33T / 27T (GM30168)**

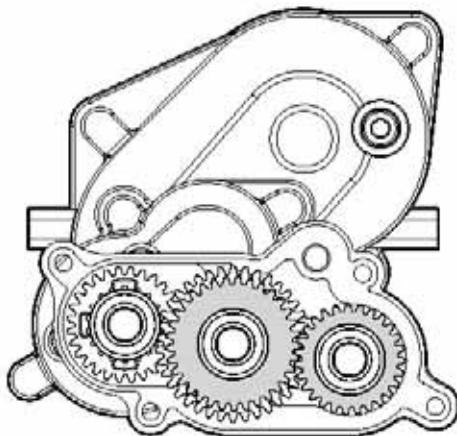


Overall gear ratio			
Pinion	Drive	LO	HI
9T	Front	66.85	31.67
	Rear	66.85	31.67
10T	Front	60.17	28.50
	Rear	60.17	28.50
11T	Front	54.70	25.91
	Rear	54.70	25.91
12T	Front	50.14	23.75
	Rear	50.14	23.75
13T	Front	46.28	21.92
	Rear	46.28	21.92
14T	Front	42.98	20.36
	Rear	42.98	20.36
15T	Front	40.11	19.00
	Rear	40.11	19.00
Overdrive percentage: 0%			


Overall gear ratio			
Pinion	Drive	LO	HI
9T	Front	58.50	27.71
	Rear	66.85	31.67
10T	Front	52.65	24.94
	Rear	60.17	28.50
11T	Front	47.86	22.67
	Rear	54.70	25.91
12T	Front	43.87	20.78
	Rear	50.14	23.75
13T	Front	40.50	19.18
	Rear	46.28	21.92
14T	Front	37.60	17.81
	Rear	42.98	20.36
15T	Front	35.10	16.63
	Rear	40.11	19.00
Overdrive percentage: 14.29%			

Overall gear ratio			
Pinion	Drive	LO	HI
9T	Front	54.70	25.91
	Rear	66.85	31.67
10T	Front	49.23	23.32
	Rear	60.17	28.50
11T	Front	44.75	21.20
	Rear	54.70	25.91
12T	Front	41.02	19.43
	Rear	50.14	23.75
13T	Front	37.87	17.94
	Rear	46.28	21.92
14T	Front	35.16	16.66
	Rear	42.98	20.36
15T	Front	32.82	15.55
	Rear	40.11	19.00
Overdrive percentage: 22.22%			

ROOF RACK TEMPLATE

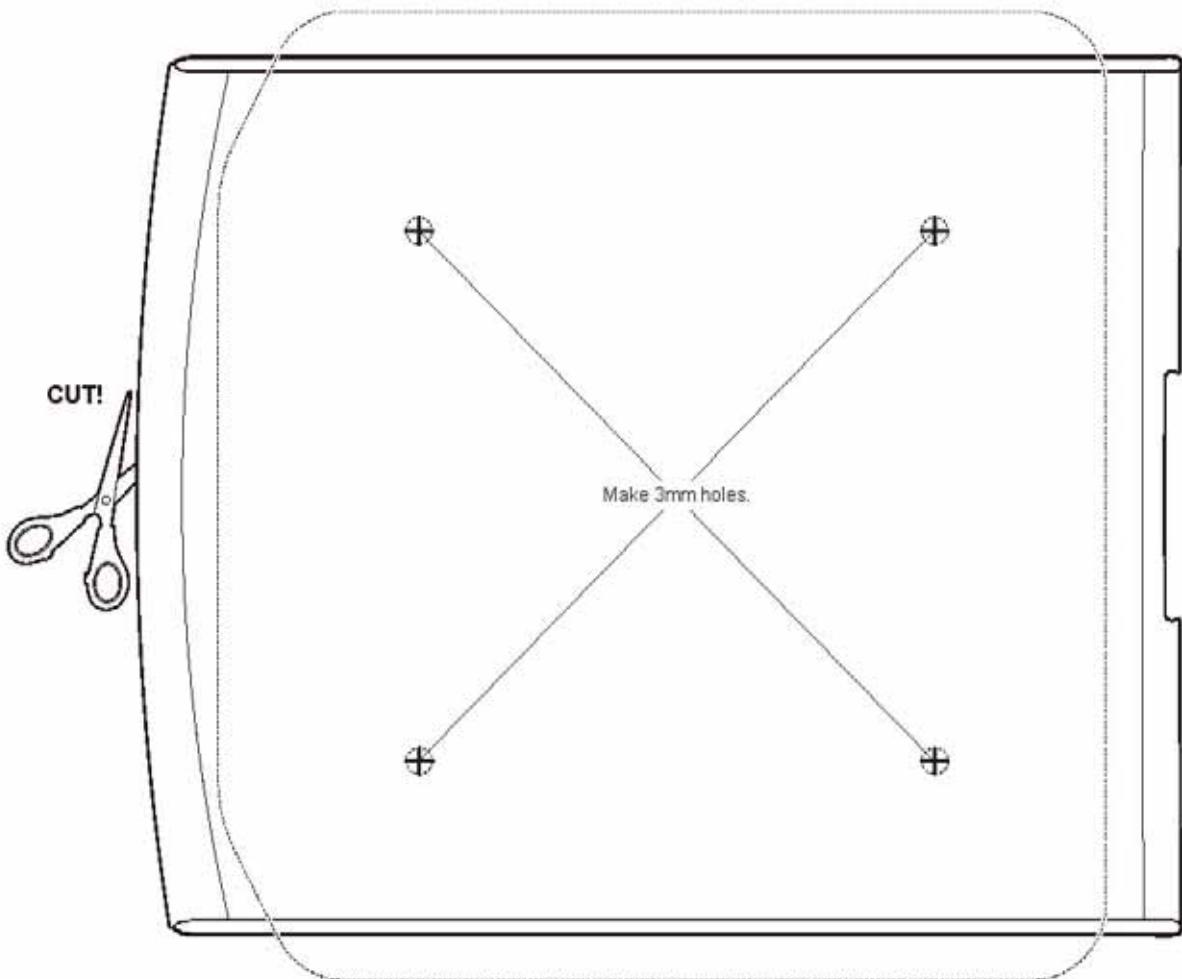

SUNROOF TEMPLATE

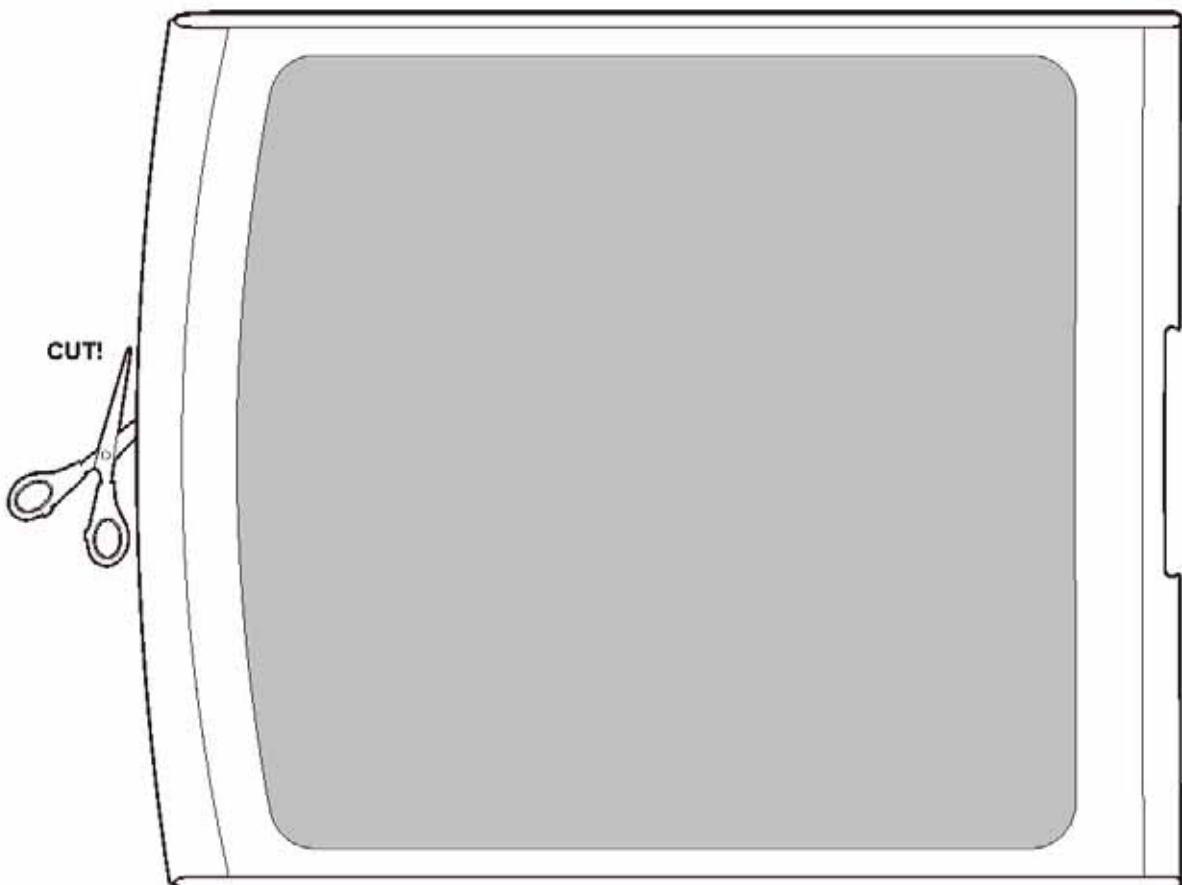

MEMO

MEMO

MEMO

SPARE PARTS LIST

PART#	PRODUCT NAME	PART#	PRODUCT NAME
GM0020075	Shock shaft 3.5x46.4mm	GM60220	GS02F transmission housing parts tree
GM0020078	RSD shock delrin pistons	GM60221	GS02F inner fender braces & transmission hardware parts tree
GM40054	LED light bar	GM60222	Lower link M4x6.8x78mm (2)
GM40080	Scale accessory roof rack	GM60226	Servo saver spring 9x9.5mm
GM49006	R5 snap pin (12)	GM60234	KOMODO double cab clear body
GM49014	LED clear lens	GM70284	1.9 MT 1903 off-road tire
GM49044	Komodo exterior detail parts tree	GM70574	1.9 NR03 wheel
GM49077	S75 O-ring	GMA0011	2.5x6mm round head wrench bolt
GM49080	3x8x2mm Rubber washer (10)	GMA0017	3x6mm round head wrench bolt
GM50116	R6 snap pin (12)	GMA0018	3x8mm round head wrench bolt
GM51603	Pin 2x10.3mm (4)	GMA0019	3x10mm round head wrench bolt
GM60001	16.5mm servo saver parts tree	GMA0021	3x15mm round head wrench bolt
GM60022	M4 5.8mm rod end set	GMA0022	3x20mm round head wrench bolt
GM60023	5.8mm ball parts tree	GMA0023	3x25mm round head wrench bolt
GM60033	Pin 1.5x7.2mm (4)	GMA0024	3x30mm round head wrench bolt
GM60061	GA44 front axle housing parts tree	GMA0056	3x6mm flat head wrench bolt
GM60062	GA44 rear axle housing parts tree	GMA0057	3x8mm flat head wrench bolt
GM60063	GA44 axle parts tree	GMA0058	3x10mm flat head wrench bolt
GM60064	GA44 axle hardware set	GMA0059	3x12mm flat head wrench bolt
GM60065	Pin 2x11.4mm (4)	GMA0060	3x15mm flat head wrench bolt
GM60067	11T bevel gear	GMA0064	3x35mm flat head wrench bolt
GM80068	33T bevel gear	GMA0082	2x6mm wrench bolt
GM80069	48P 18T gear	GMA0093	2.5x8mm wrench bolt
GM80071	48P 38T 1st gear (LO)	GMA0094	2.5x10mm Wrench bolt
GM80072	32P 13T pinion gear	GMA0095	2.5x12mm wrench bolt
GM80076	GS02 side plate parts tree	GMA0102	3x8mm wrench bolt
GM80077	GS02 shock hoop & body post parts tree	GMA0104	3x12mm wrench bolt
GM80078	GS02 battery tray & cross member parts tree	GMA0106	3x18mm wrench bolt
GM80079	SD shock parts tree	GMA0107	3x20mm wrench bolt
GM80080A	32P 45T spur gear (2)	GMA0108	3x25mm wrench bolt
GM80081	GS02 frame side rails	GMA0109	3x30mm wrench bolt
GM80084	Universal shaft parts tree	GMA0126	3x3mm socket set screw
GM80087	Slipper disk 20x1.5mm (2)	GMA0127	3x4mm socket set screw
GM80088	Slipper pad (2)	GMA0131	3x10mm socket set screw
GM80089	Upper link M4x6.8x55mm (2)	GMA0144	4x15mm socket set screw
GM80091	Upper link M4x6.8x98mm (2)	GMA0145	4x20mm socket set screw
GM80092	Lower link M4x6.8x100mm (2)	GMA0153	M2.5 Nut
GM80093	5.8mm ball stud M3x5mm (5)	GMA0154	M3 nut
GM80094	SD 90mm shock body (2)	GMA0156	M3 nylon lock nut
GM80097	Shock spring 15.2x61mm (2)	GMA0157	M4 nylon lock nut
GM80099	Panhard rod 86mm	GMA0158	3mm Washer
GM80100	GA44 steering rod set	GMA0160	2mm E-ring
GM80101	Universal joint set	GMA0161	2.5mm E-ring
GM80102	CVA drive coupler (2)	GMA0162	4mm E-ring
GM80103	3x10mm Screw pin (4)	GMA0163	Ball bearing 5x8x2.5mm
GM80104	Foam seal (2)	GMA0165	Ball bearing 5x11x4mm
GM80109	GA44 CVA kit	GMA0167	Ball bearing 10x15x4mm
GM80110	CVA pin retaining ring (2)	GMA0169	P3 O-ring
GM80111	Input universal joint set	GMA0170	P5 O-ring
GM80112	Straight drive shaft 107mm (2)	GMA0172	3x18mm round head wrench bolt
GM80117	Velcro strap 16x160mm (2)	GMA0174	3x6mm Round head tapping screw
GM80119	Universal joint drive coupler (2)	GMA0175	3x8mm Round head tapping screw
GM80191	KOMODO double cab bumper & roll bar parts tree	GMA0190	M2.6 Nut
GM80210	48P 28T 2nd gear (HI)	GMA0191	M3 Flange nut
GM80211	Hi/Lo sliding clutch	GMA0198	2x6mm nickel round head tapping screw
GM80212	48P 32T gear	GMA0203	2.6x5mm Round head screw
GM80213	Transmission output front shaft 55.3mm	GMA0205	Ball bearing 8x12x3.5mm
GM80214	Transmission output rear shaft 63.1mm	GMA0210	4mm conical spring washer
GM80215	Transmission shaft 117.9mm	GMA0212	7x1 O-ring
GM80216	Slipper shaft 37.8mm	GMA0213	S56 O-ring
GM80217	Transmission fork shaft 49.2mm	GMA0267	2.6mm Washer
GM80218	GS02F front & rear inner fenders	GMA0277	P4 O-ring
GM80219	GS02F skid plate & battery tray parts tree		

