

GOM KIT

ROCK BUGGY

INSTRUCTION
MANUAL



GMADE[®]
www.gmade.net



주의 사항



제품의 조립, 유지·보수, 안전한 작동은 사용자에게 책임이 있습니다.

반드시 해당 제품을 작동하는데 필요한 모든 안전사항을 준수하시기 바랍니다.

이 제품은 어린이용 장난감이 아닙니다. 사용 가능 연령을 꼭 확인하시기 바랍니다.

이 제품은 만 14세 이상의 사용자에게 적합한 제품입니다. 어린아이의 손에 닿지 않도록 주의하시기 바랍니다.

또한, 만 18세 미만의 사용자는 제품의 주의사항을 충분히 숙지한 성인의 지도하에 제품을 조립·작동하여 주시기 바랍니다.

1. 제품을 조립하기 전에 설명서 전체를 읽고 숙지하도록 하십시오.

- 제품을 조립하기 전에 반드시 매뉴얼 전체를 숙지한 후 제품을 조립하도록 하십시오.
- 나이프나 가위, 리더 등 날카로운 도구를 사용할 경우 부상의 위험이 있습니다. 도구의 사용에 주의하시기 바랍니다.
- 본 제품은 작고 날카로운 부품이 많습니다. 사용 부주의로 인한 상해나, 부품을 삼켜 질식하는 등, 사고의 위험이 있으므로 조립시 어린아이의 손이 닿지 않도록 주의하십시오.
- 본 제품은 전자장비 및 배터리가 포함되어 있지 않은 제품입니다. 전자장비 및 배터리 등 구동에 필요한 장비는 별도로 구매하여 주시기 바랍니다.
- 전자장비 및 배터리의 경우 해당 제품의 제조사에서 지시하는 사용 방법 및 주의 사항에 따라 주시기 바랍니다.
- 본 제품에 들어있지 않은 별도의 제품이나 도구(페인트 또는 접착제, 공구등)를 사용 할 경우 해당 제품의 사용 방법 및 주의 사항에 따라 주시기 바랍니다.
- 별도로 구매한 전자장비 및 배터리, 페인트, 접착제 등의 오작동 및 사용 미숙으로 인한 문제 발생시 본 회사에서 책임지지 않습니다.

2. 작동 전 제품의 상태를 점검하여 주십시오.

- 제품 조립 후 블트와 너트가 잘 조여있는지 확인해주세요.
- 제품의 오작동을 피하기 위해 송신기와 수신기에는 새 배터리 또는 완전하게 충전된 배터리를 사용해주세요.
- 소모된 배터리는 송,수신 기능을 저하시키고, 심할 경우 조종불능이 되어 심각한 사고를 일으킬 수 있습니다.
- 전선이 손상된 배터리를 사용하지 마십시오.
- 배터리의 전선이 마모되었거나, 찢힌 부분이 있을 경우, 회로에 핵선을 일으킬 수 있습니다. 심각할 경우 화재를 유발할 수 있습니다.
- 규격에 맞는 알카라인 건전지 혹은 충전지를 사용해주세요.
- 부적합한 건전지 또는 충전지의 사용은 차의 전자장비에 손상을 줄 수 있습니다.
- 모든 모터의 작동 방향이 조작한 방향으로 작동하는지 확인해 주십시오. 만약 다르다면 방향부터 조정해주세요.
- 본 제품에는 회전하는 부분과 날카로운 금속 부품이 많습니다. 상해를 입지 않도록 주의하십시오.
- 사용하기에 앞서 항상 작동 범위 체크를 수행해주세요. 무선 조종 시스템의 문제 또는 제품에 적합하지 않은 설정은 작동 불능을 일으킬 수 있습니다.

간단한 범위 테스트 방법

- 친구가 제품을 잡고 있게 하거나, 휠이 거치대나 다른 물체와 닿지 않게 고정하거나 놓아두십시오.
- 멀리 떨어지면서 송신기의 조작대로 서보가 움직이는지 체크해주세요.
- 비 정상적인 작동을 발견하면 범위 체크를 마무리 하십시오.

3. 제품을 작동시키기 위해 적합한 장소를 선정해십시오.

- 저녁이나 시야가 보이지 않는 상황에서 작동시키지 마십시오.
- 다음과 같은 장소에서 작동하지 마십시오.
 - 근처의 다른 지역에서 무선 조종 활동이 발생하고 있는 곳.
 - 일반 도로나 고속 도로
 - 고압선, 방송 통신용 안테나
 - 사람이나 등을 근처
 - 집안이나 좁고 막힌 장소
 - 병원이나, 주거 지역, 공원 등 제품 소음이 다른 이에게 방해를 줄 수 있는 지역
- 물이 흐르거나 고인장소에서 주행 시 전자 부품이 물에 젖지 않도록 주의 하십시오.
- 제품을 레이스 트랙이나 확 트이고 안전한 공간에서 작동하시는 것을 권장합니다. 적합하지 않은 장소에서 작동 시 심각한 교통사고, 인적 상해, 대물 손실을 일으킬 수 있습니다.

4. 순서에 맞게 제품을 작동하십시오.

- 순서에 맞게 송신기의 전원을 켜고 끄도록 하십시오.
- 시작시엔 송신기의 전원을 먼저 켜고 배터리를 연결 한 후 변속기의 전원을 켜도록 하십시오 .
- 종료시엔 변속기의 전원을 끄고 배터리를 제거 한 후 송신기의 전원을 끄도록 하십시오.
- 전선을 거꾸로 연결하거나, 배터리를 분해하지 마십시오. 제품 손상이나 누전을 일으킬 수 있습니다.
- 제품의 오작동을 피하기 위해 주행 전에 스티어링과 스로틀이 정상 작동하는지 확인해주세요.
- 작동 후 모터, 변속기, 배터리가 뜨거울 수가 있습니다. 화상에 주의해주세요.

5. 제품의 사용 후 깨끗하게 정비하고 안전한 장소에 보관하십시오.

- 사용 후 모든 블트, 너트 등은 풀림이 없는 정상적인 상태인지 체크해주세요.
- 제품을 사용하지 않을 때는 배터리를 제거 해주세요. 과 방전, 누전 등으로 배터리와 변속기에 손상을 줄 수 있습니다.
- 제품에 과도한 먼지나 이물질이 없도록 깨끗하게 유지해주세요, 이를 통해 차체 수명을 연장시킬 수 있습니다.
- 모든 공구를 사용할 때 항상 주의하십시오, 상해를 막기 위해 세심한 주의가 요구됩니다.
- 제품을 뜨거운 곳이나 습한 곳에 보관하지 마십시오. 직사광선도 피해주세요.
- 제품의 손상을 막기 위해서 (주)지메이드코리아에서 출시하는 옵션파트나 부품 외의 것으로 개조하지 마십시오.

CAUTIONS

A In order to avoid personal injury or property damage, you have to act in a responsible manner and follow these directions.
RC models can operate at over 40Km/h but can not stop immediately

Safety Precautions

- Check the surrounding area before you operate RC model.
- Choose a good place to operate your RC model
- Do not operate your RC model on the street or highway. It can cause a serious damage or a serious accident.
- Do not operate your RC model in confined or crowded areas, in order to avoid accident.
- Never operate your RC model near people or animals, and never use people or animals as an obstacle.
- A collision between your RC model and stationary objects can cause damage to either
- Do not operate your RC model in public places like hospital and residential areas. It can cause great noise
- Never operate your RC model indoor. There is a higher possibility of fire or damage

Safety Precautions (Before assembling)

- Before you start assembling this model, read the instructions carefully and make sure you understand them thoroughly.
- If a child assembles this model, an adult must also read the instructions carefully and understand them thoroughly.
- Always be careful when using tools like knives. Extra care should be taken to prevent injuries.
- If you use paint or cement (not included in the RC model), read the instructions supplied with them.
- Keep the parts out of reach of children, small parts can cause choking and vinyl bags can suffocate.


Safety Precautions (Before you operate RC model, check the following.)

- Check to ensure nuts bolts are tightened appropriately.
- Check that no one else is using your radio frequency.
- Use new batteries to avoid losing control of the transmitter and receiver.
- You will need a 2 channel radio system which includes a servo, a receiver, an ON/OFF switch, and an electronic speed control.
- Be sure to use a radio frequency for ground model – Do not use airplane frequencies.
- Always check the brakes and throttle before you operate your RC model, in order to avoid losing control of the model.
- To prevent unexpected movements of your RC model, do not connect the batteries to receiver before turning on the transmitter.
- Always turn on the transmitter first, and then connect the batteries to the receiver.
 1. Switch on the transmitter.
 2. Check that the speed control, the transmitter control, and trims are set to the neutral position.
 3. Connect the RC model to the receiver's batteries.
 4. Switch on the model and the receiver.
- When you using rechargeable batteries, make sure you read and follow the instructions carefully.
- Inappropriate handling or usage of rechargeable batteries can cause serious injuries or accidents.


Cautions While Operating

- When the RC model is operating, do not touch the moving parts like the drive shaft and wheels.
- The moving parts can cause serious injuries.
- Always turn the model or receiver off and disconnect the batteries before turning off the transmitter, in order to avoid unexpected movements of your RC model.
 1. Turn off the model or receiver.
 2. Disconnect the batteries.
 3. Turn off the transmitter.
- Do not touch the vehicle's speed control resistor while operating of the RC model. The resistor may be very hot, especially after running at lower speeds.
- To prevent damage to the RC model, remove the batteries from the model and transmitter when you don't intend to run the RC model for some time.
- After operating your RC model, batteries become hot, so please be careful when handling.
- In order to prolong the life of your RC model, please keep it free from dirt and grease.
- Before you start assembling this model, read the instruction carefully and make sure you understand them fully.
- If a child assembles this model, an adult must also read the instructions carefully and understand them thoroughly.

EQUIPMENT NEEDED

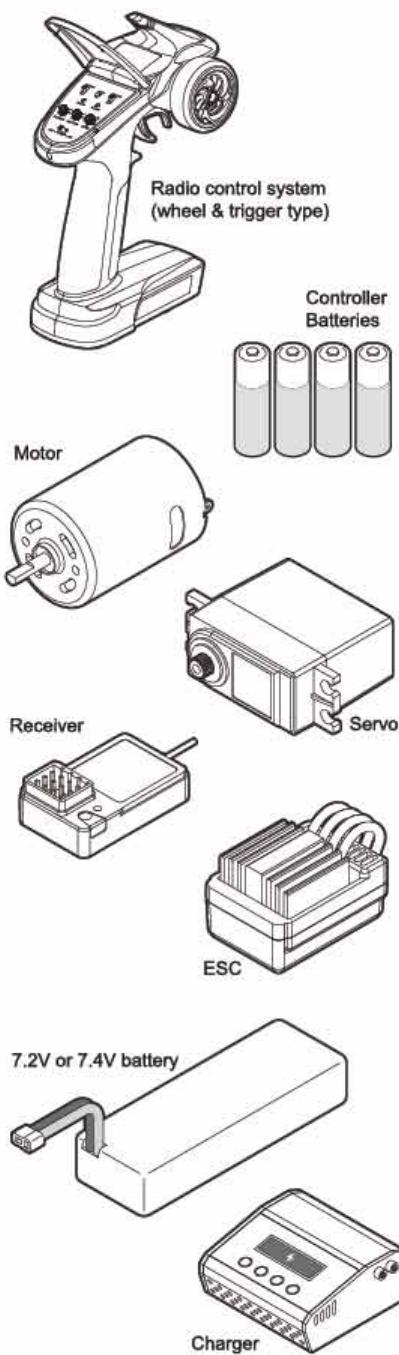

TOOLS NEEDED

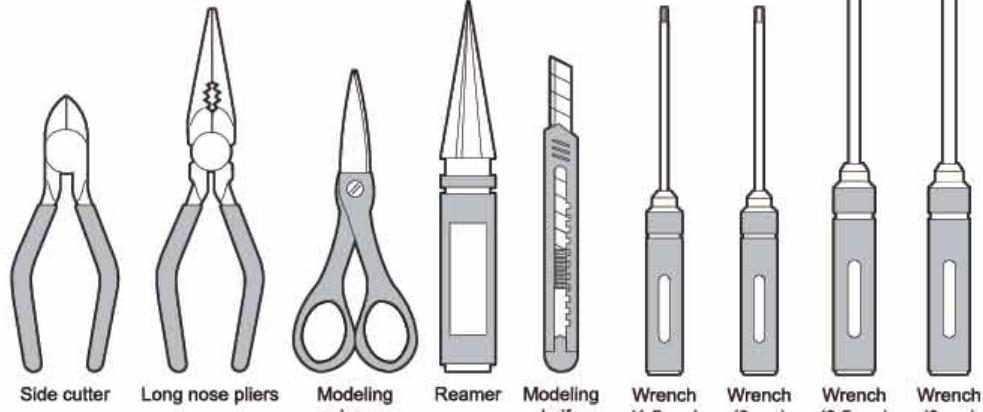

TOOLS INCLUDED




PARTS REFERENCE

GM60008


GR01 motor plate & gear set




Motor plate A **x1**

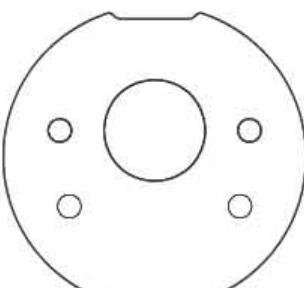


Motor plate B **x1**

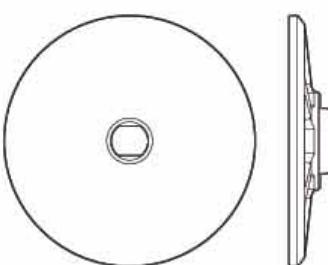


Slipper plate **x1**

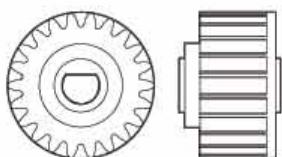


32P 22T transfer case gear **x1**

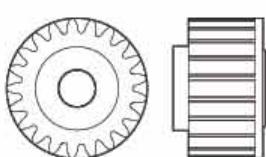



32P 21T 2nd gear (HI) **x1**

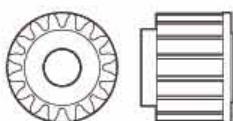


32P 16T 1st gear (LO) **x1**

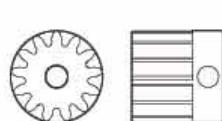


32P 13T pinion gear **x1**

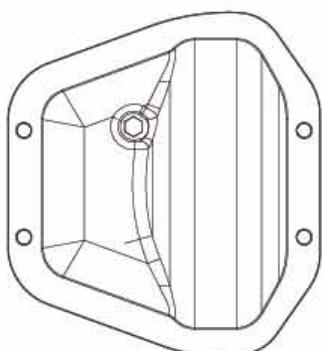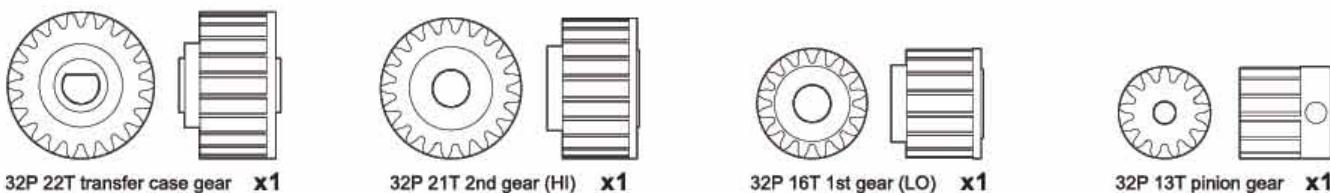


Differential cover **x2**

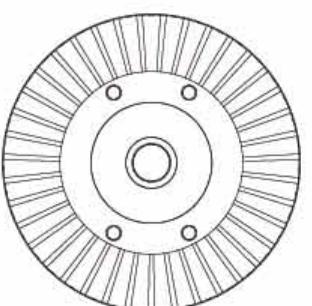


39T Bevel gear **x2**

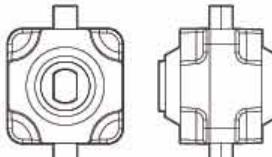


Diff locker **x2**

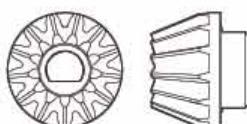


13T Bevel gear **x2**

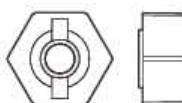

12mm Wheel hub **x4**

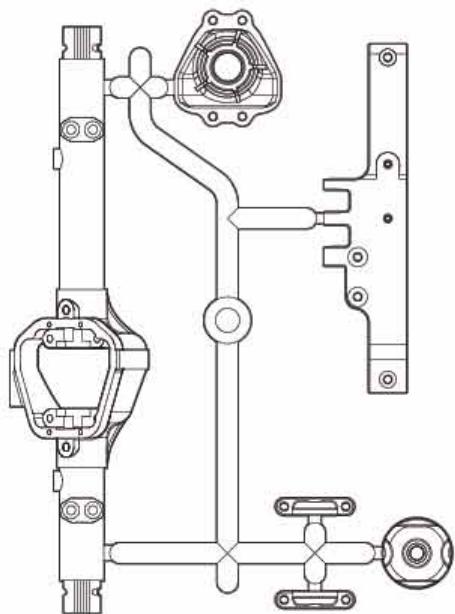

GM60010
GA60 axle housing part tree **x2**

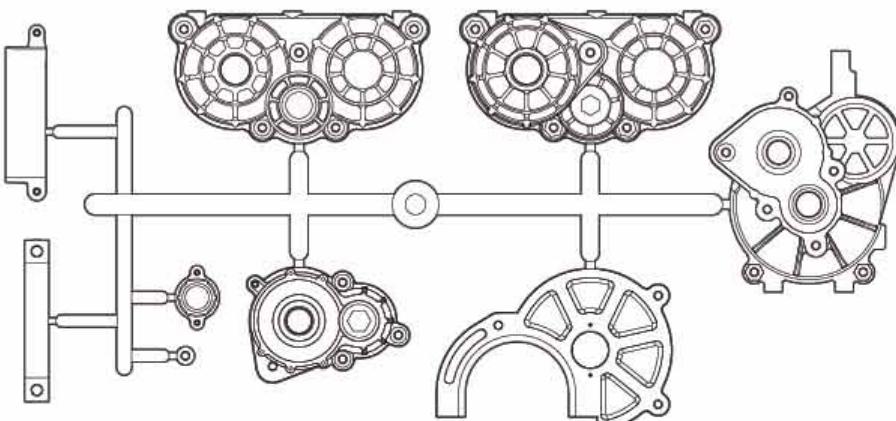


GM60011
GR01 transmission & transfer case housing parts tree **x1**



PARTS REFERENCE

GM60012


GR01 transmission & transfer case gear set

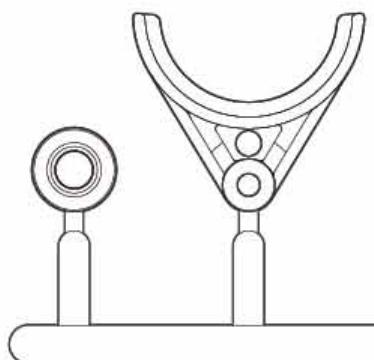


x1

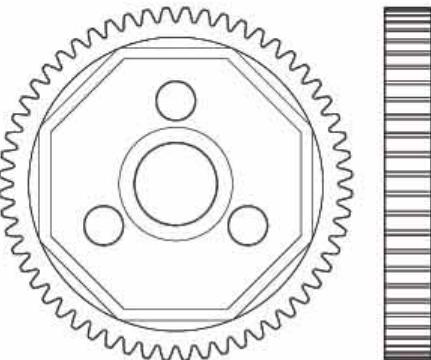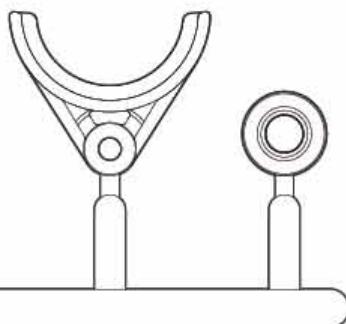


32P 56T Spur gear x1

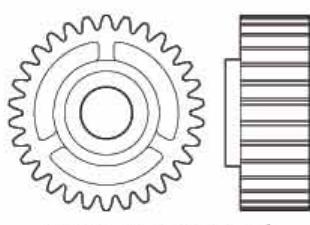


32P 30T 2nd gear (HI) x1

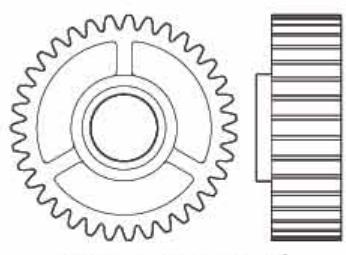


32P 35T 1st gear (LO) x1

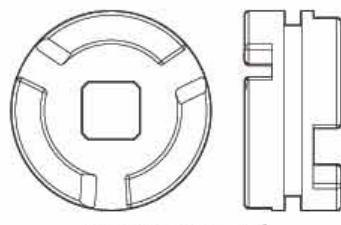


Dig sliding clutch x1

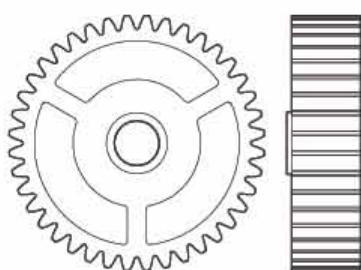


32P 40T transfer case gear x1

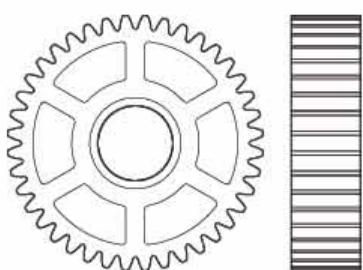


32P 40T transfer case dig gear x1

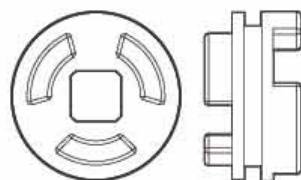


HI/LO sliding clutch x1

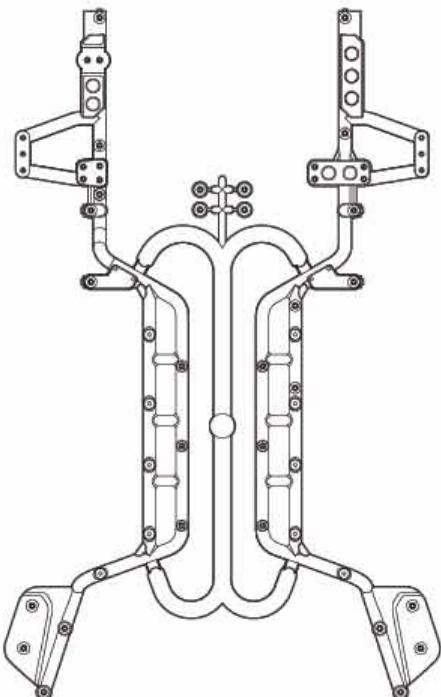

GM60013
GR01 cage lower rails x1

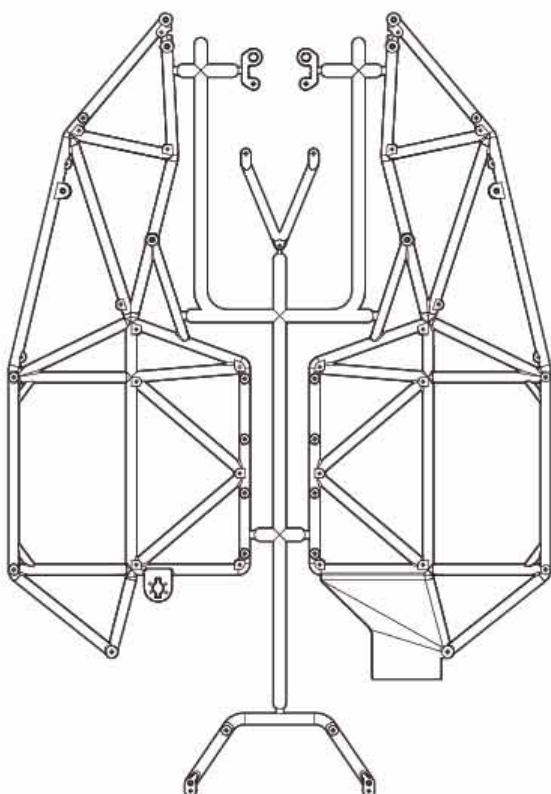


GM60014
Cage side parts tree x1

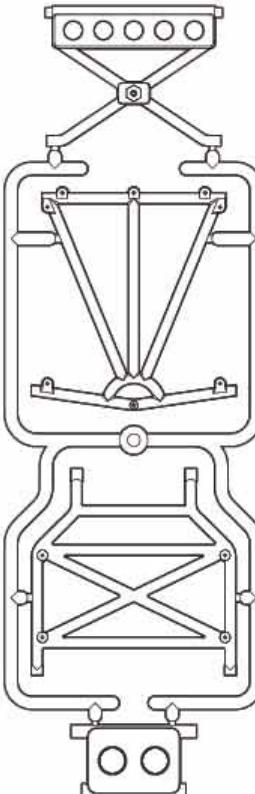


GM60015
Cage top & rear parts tree x1


PARTS REFERENCE

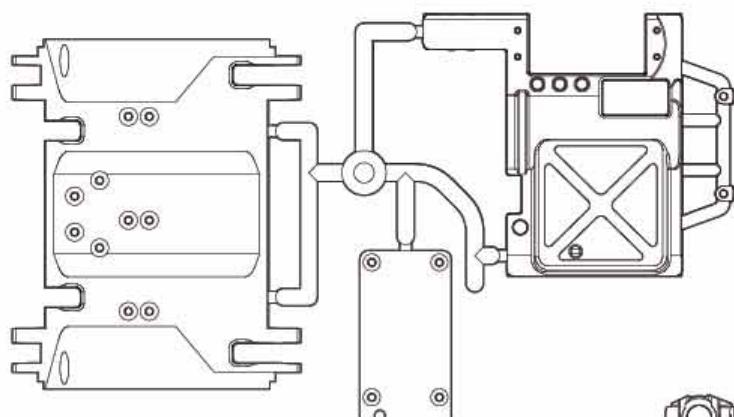


GM60016
GR01 skid plate parts tree

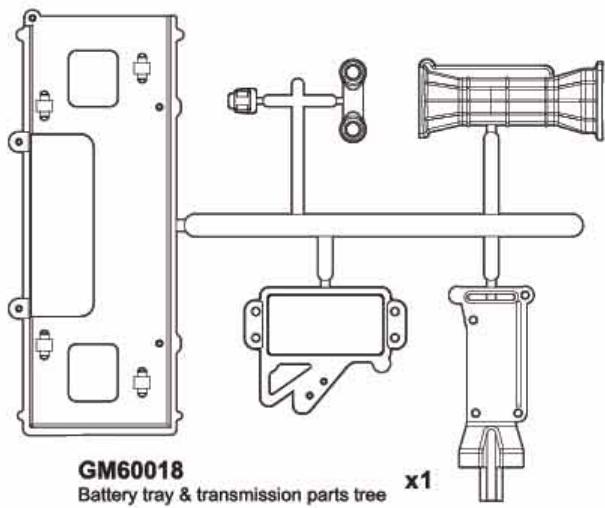


GM60018
Battery tray & transmission parts tree

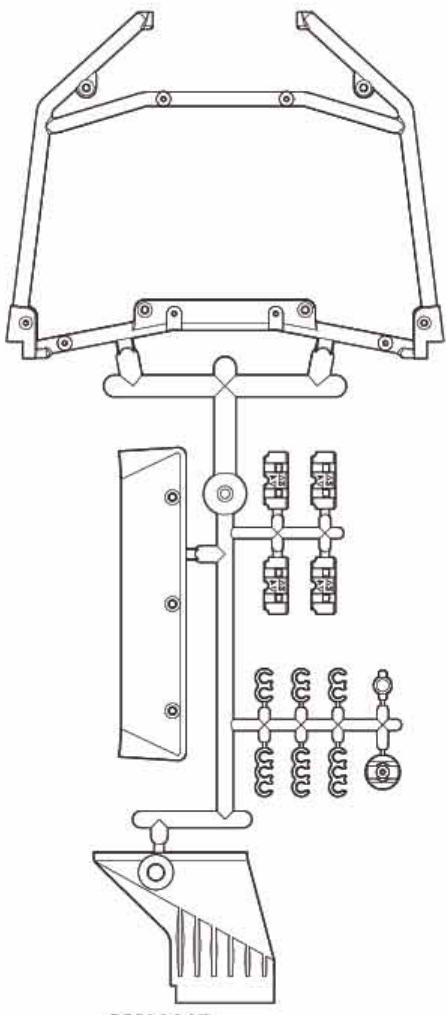


GM60017
Front cage parts tree

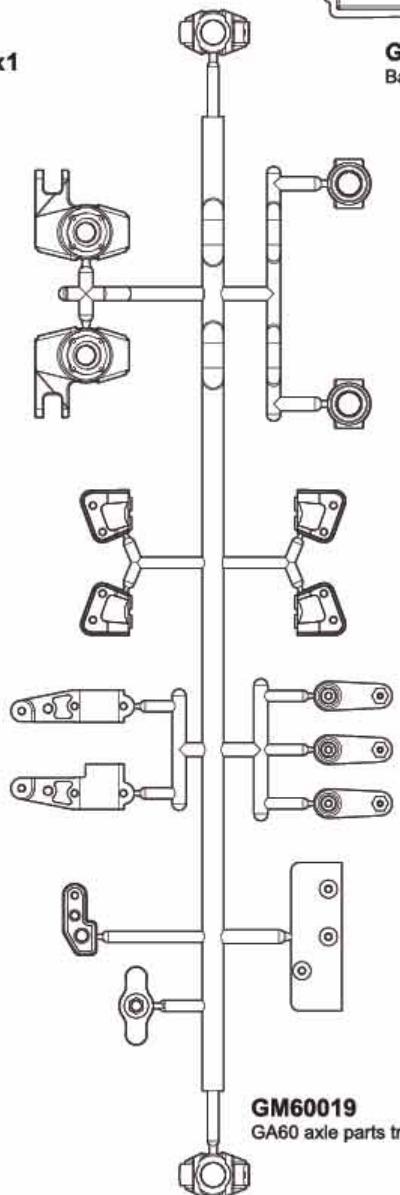


GM60019
GA60 axle parts tree

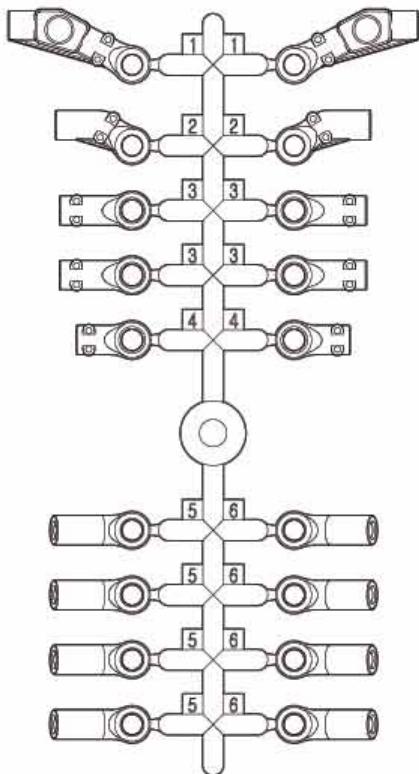


GM60022
M4 5.8mm rod end set

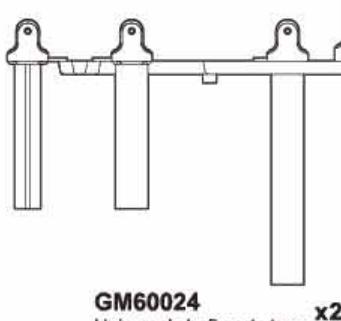

GM60024
Universal shaft parts tree












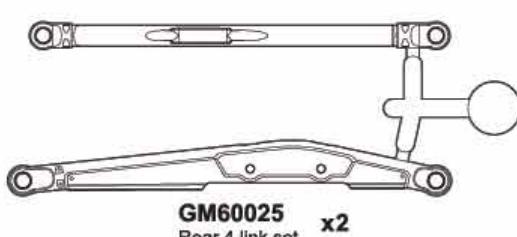


GM60025
Rear 4 link set











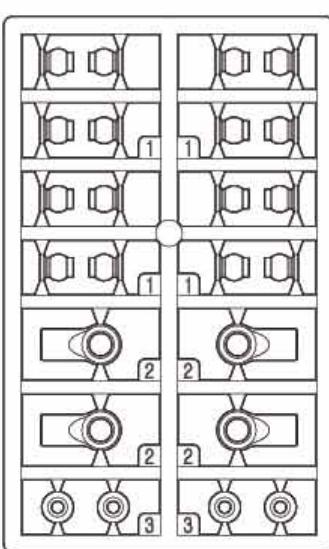


GM60023
5.8mm ball parts tree




PARTS REFERENCE

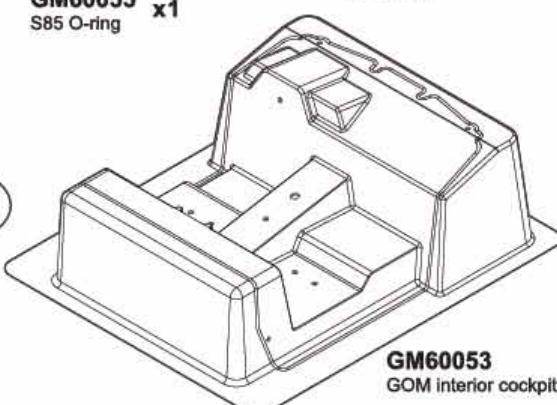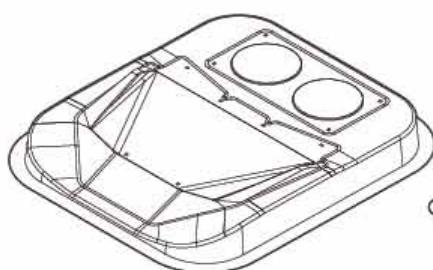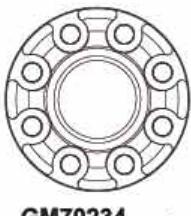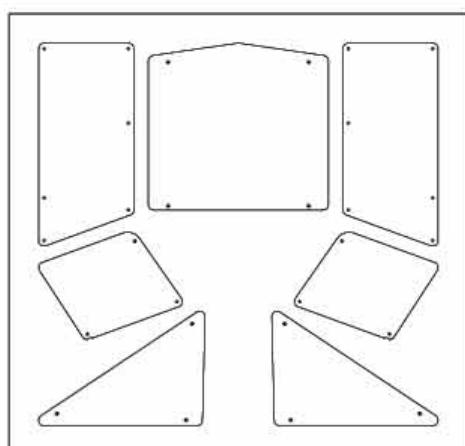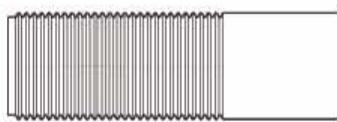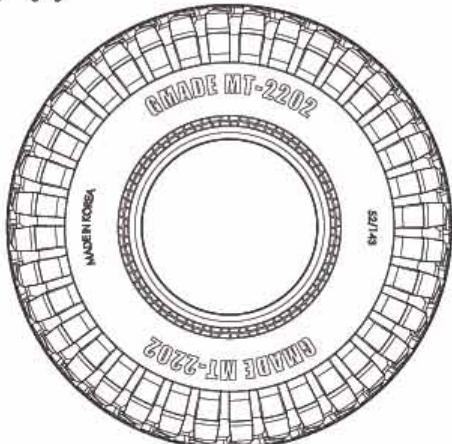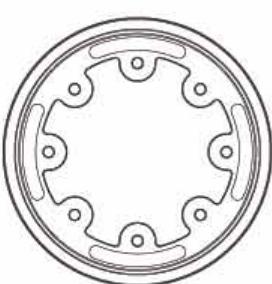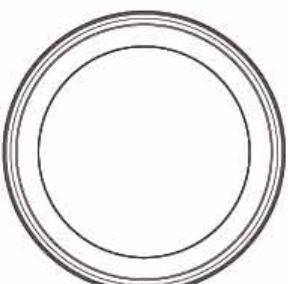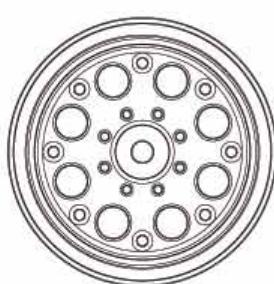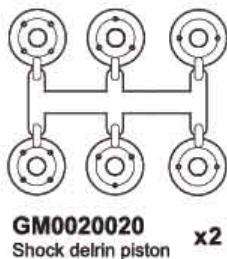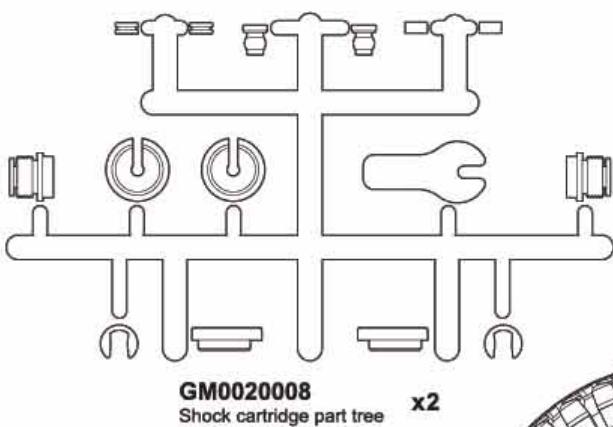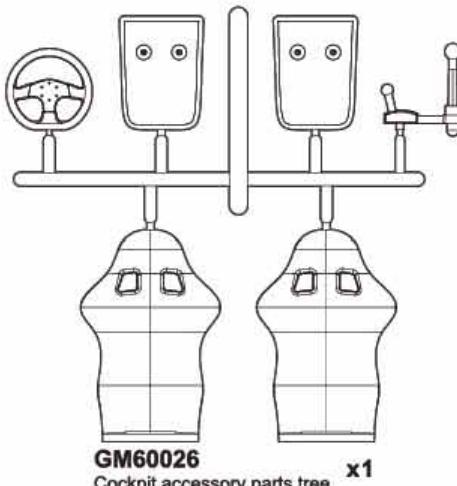

PARTS REFERENCE

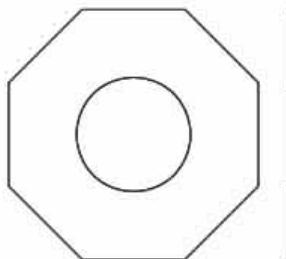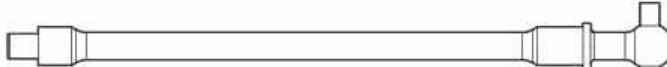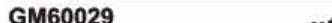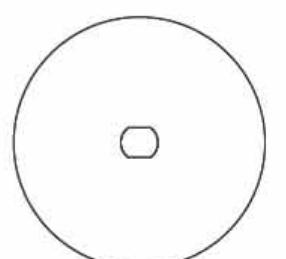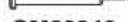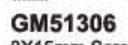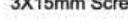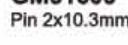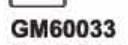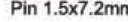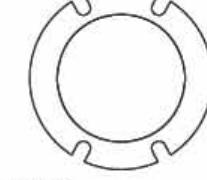	GM60029 Drive shaft 128mm  x1	 GM60037 Slipper pad  x2
	GM60029 Drive shaft 88mm  x1	
	GM60041 Straight drive shaft 158mm  x1	
	GM60041 Straight drive shaft 118mm  x1	 GM60036 Slipper disk 33x1mm  x2
	GM60040 Steering rod M4x6.8x117mm  x1	
	GM60040 Steering rod M4x6.8x155mm  x1	
	GM60031 Lower link M4x6.8x105mm  x2	 GM60046 Universal drive coupler  x4
	GM60027 Bent upper link M4x6.8x99mm  x2	 GM60046 Universal joint  x4
	GM60032 Panhard rod 133mm  x1	 GM60046 Universal cross pin  x4
	GM60050 Transmission output shaft 128mm  x1	 GM51306 3X15mm Screw pin  x4
	GM60038 Slipper shaft 74mm  x1	 GM51603 Pin 2x10.3mm  x4
	GM0020007 XD 103mm shock shaft  x4	 GM60033 Pin 1.5x7.2mm  x2
	GM60044 Transmission fork shaft 78mm  x1	 GM60030 Input shaft 26mm  x2
	GM60043 Transfer output rear shaft 40mm  x1	 GM60042 Transfer fork shaft 58mm  x1
	GM60047 Wheel axle shaft 38mm  x2	 GM60043 Transfer output front shaft 27mm  x1
	GM60028 Differential gasket 17x24x1mm  x2	


PARTS REFERENCE

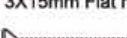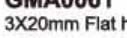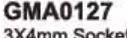	GMA0012	x36		GMA0104	x11		GM0020017	Aeration screw	x4
	2.5X8mm Round head wrench bolt			3X12mm Wrench bolt					
	GMA0014	x14		GMA0105	x14		GM0020096	Rubber bumper stop	x4
	2.5X12mm Round head wrench bolt			3X15mm Wrench bolt					
	GMA0017	x2		GMA0106	x3		GMA0153	M2.5 Nut	x32
	3X6mm Round head wrench bolt			3X18mm Wrench bolt					
	GMA0018	x10		GMA0107	x6		GMA0154	M3 Nut	x14
	3X8mm Round head wrench bolt			3X20mm Wrench bolt					
	GMA0019	x16		GMA0109	x2		GMA0156	M3 Nylon lock nut	x31
	3X10mm Round head wrench bolt			3X30mm Wrench bolt					
	GMA0020	x8		GMA0173	x2		GMA0157	M4 nylon lock nut	x5
	3X12mm Round head wrench bolt			3X45mm Wrench bolt					
	GMA0021	x11		GMA0117	x2		GMA0158	3mm Washer	x12
	3X15mm Round head wrench bolt			4X15mm Wrench bolt					
	GMA0172	x27		GMA0057	x7		GMA0159	4mm Washer	x3
	3X18mm Round head wrench bolt			3X8mm Flat head wrench bolt					
	GMA0022	x5		GMA0058	x2		GMA0163	Ball bearing 5x8x2.5mm	x1
	3X20mm Round head wrench bolt			3X10mm Flat head wrench bolt					
	GMA0023	x3		GMA0059	x9		GMA0165	Ball bearing 5x11x4mm	x21
	3X25mm Round head wrench bolt			3X12mm Flat head wrench bolt					
	GMA0083	x19		GMA0060	x4		GMA0166	Ball bearing 6x12x4mm	x5
	2X8mm Wrench bolt			3X15mm Flat head wrench bolt					
	GMA0092	x2		GMA0061	x2		GMA0167	Ball bearing 10x15x4mm	x8
	2.5X6mm Wrench bolt			3X20mm Flat head wrench bolt					
	GMA0093	x71		GMA0127	x2		GMA0168	3x1 O-ring	x4
	2.5X8mm Wrench bolt			3X4mm Socket set screw					
	GMA0094	x1		GMA0131	x8		GMA0169	P3 O-ring	x10
	2.5X10mm Wrench bolt			3X10mm Socket set screw					
	GMA0095	x2		GMA0133	x2		GMA0170	P5 O-ring	x1
	2.5X12mm Wrench bolt			3X15mm Socket set screw					
	GMA0096	x4		GMA0134	x2		GMA0171	S9 O-ring	x8
	2.5X15mm Wrench bolt			3X20mm Socket set screw					
	GMA0102	x6		GMA0144	x2		GMA0160	2mm E-ring	x12
	3X8mm Wrench bolt			4X15mm Socket set screw					
	GMA0103	x10		GMA0145	x10		GMA0161	2.5mm E-ring	x10
	3X10mm Wrench bolt			4X20mm Socket set screw					
							GMA0162	4mm E-ring	x5
							GM49006	R5 snap pin	x1

AXLE

1

⚠ MAKE X 2

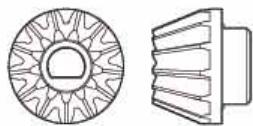

GM60009
13T Bevel gear **x2**


GM60030
Input shaft 26mm **x2**

GMA0161
2.5mm E-ring **x2**

GMA0167
Ball bearing 10x15x4mm **x2**


GMA0165
Ball bearing 5x11x4mm **x2**

GMA0103
3X10mm Wrench bolt **x8**

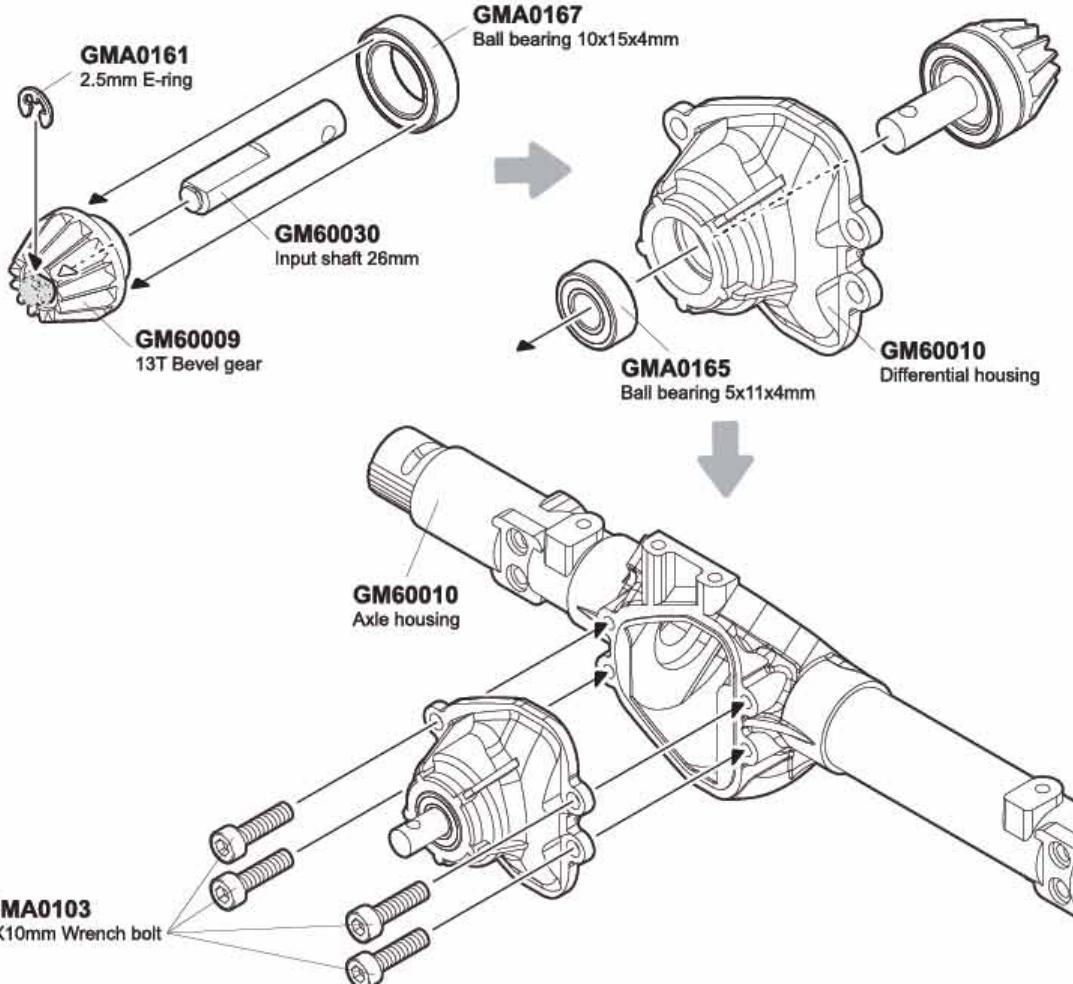

2


⚠ MAKE X 2

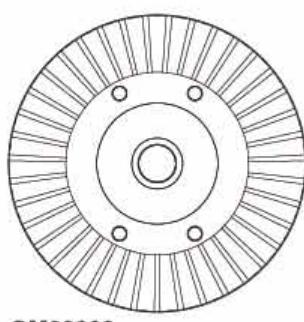

GM60009
39T Bevel gear **x2**




GM60028
Differential gasket 17x24x1mm

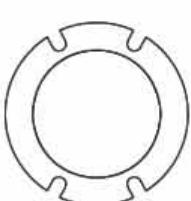

GM60028
Differential gasket 17x24x1mm **x2**


GMA0167
Ball bearing 10x15x4mm **x4**

GMA0083
2X8mm Wrench bolt **x8**

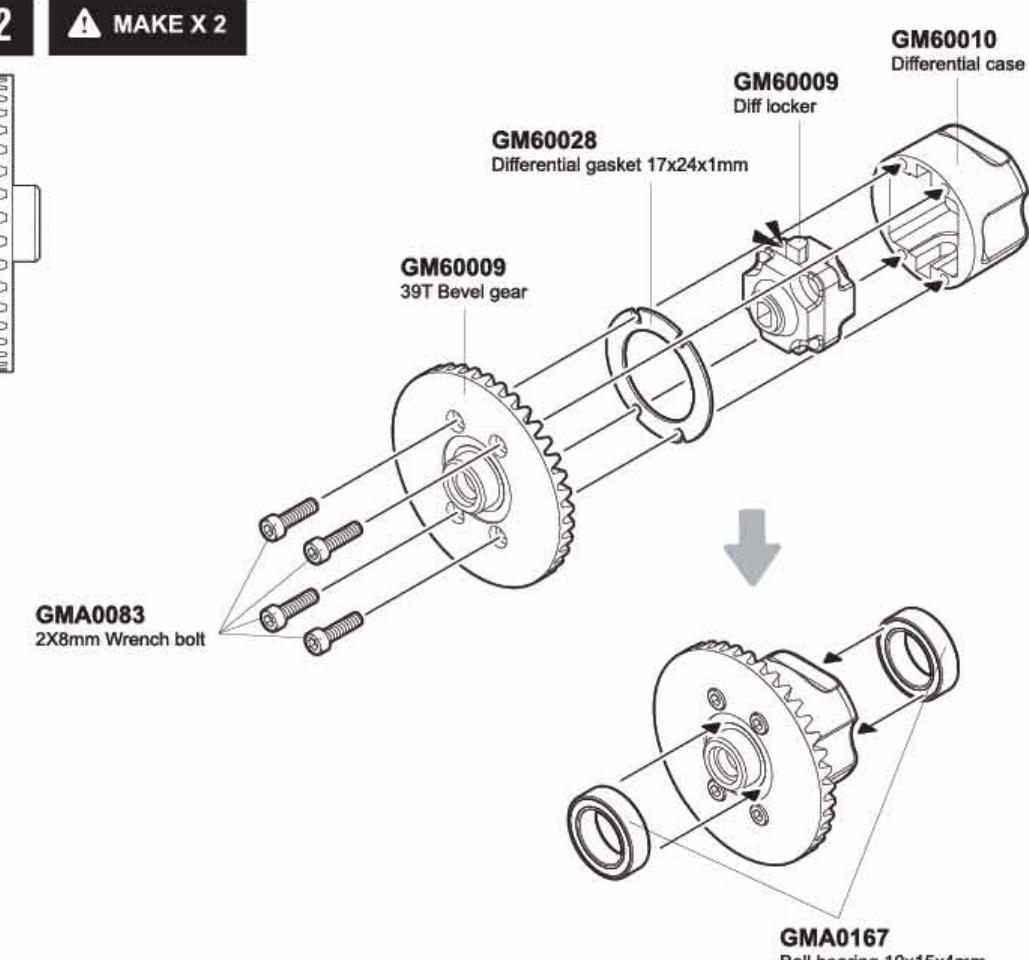

AXLE**3**

⚠ MAKE X 2

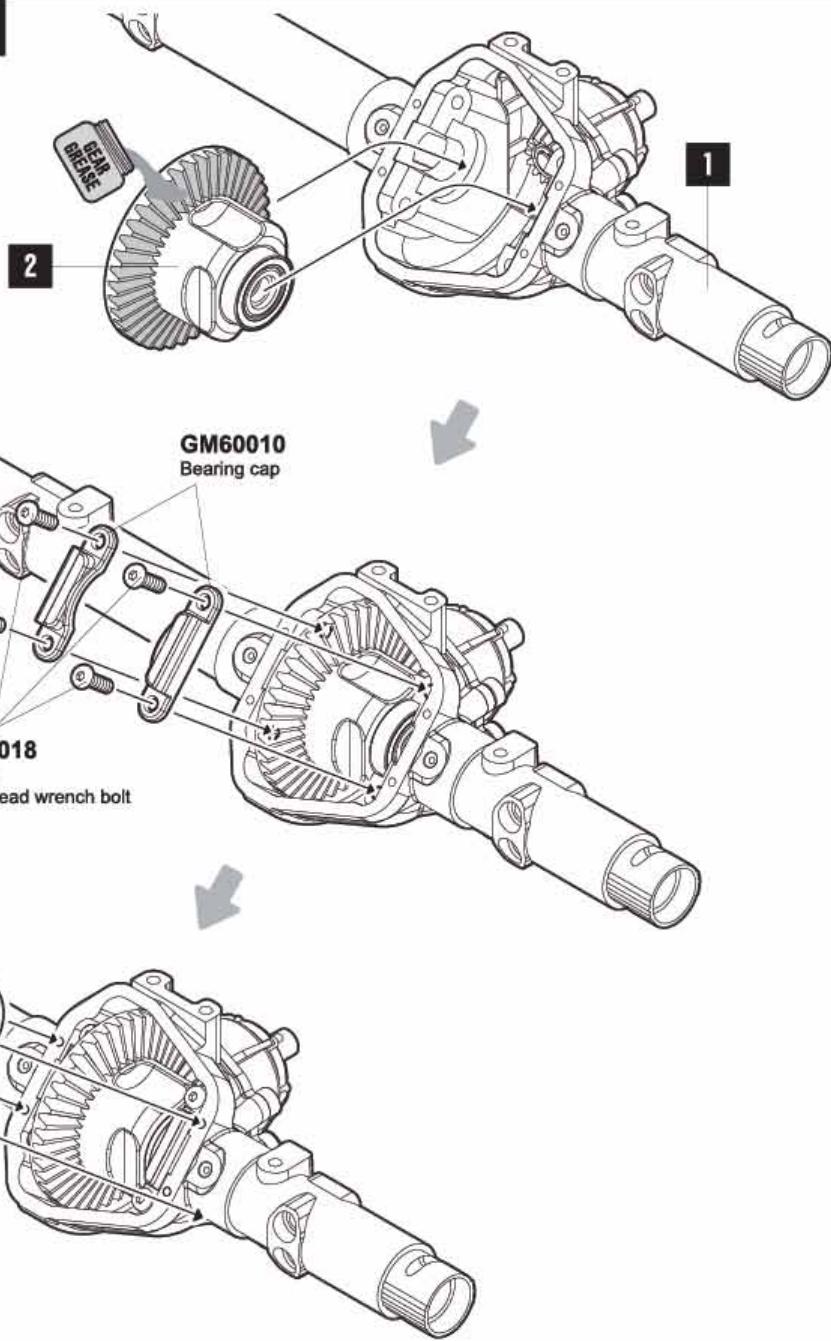
GMA0083
2X8mm Wrench bolt
x8
GMA0018
3X8mm
Round head wrench bolt
x8**4**

⚠ MAKE X 2


GMA0102
3X8mm Wrench bolt
x4
GMA0057
3X8mm Flat head wrench bolt
x2
GMA0059
3X12mm Flat head wrench bolt
x2
GMA0102
3X8mm Wrench bolt
GMA0057
3X8mm Flat head wrench bolt
GMA0059
3X12mm Flat head wrench bolt
GMA0102
3X8mm Wrench bolt
GM60010
Axe truss**3**




FRONT AXLE

5





GMA0165
Ball bearing 5x11x4mm

x2

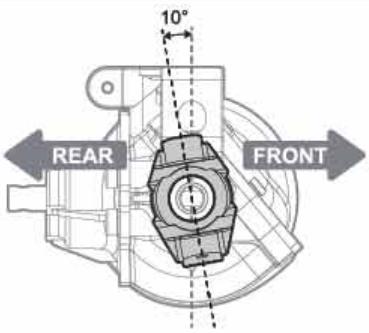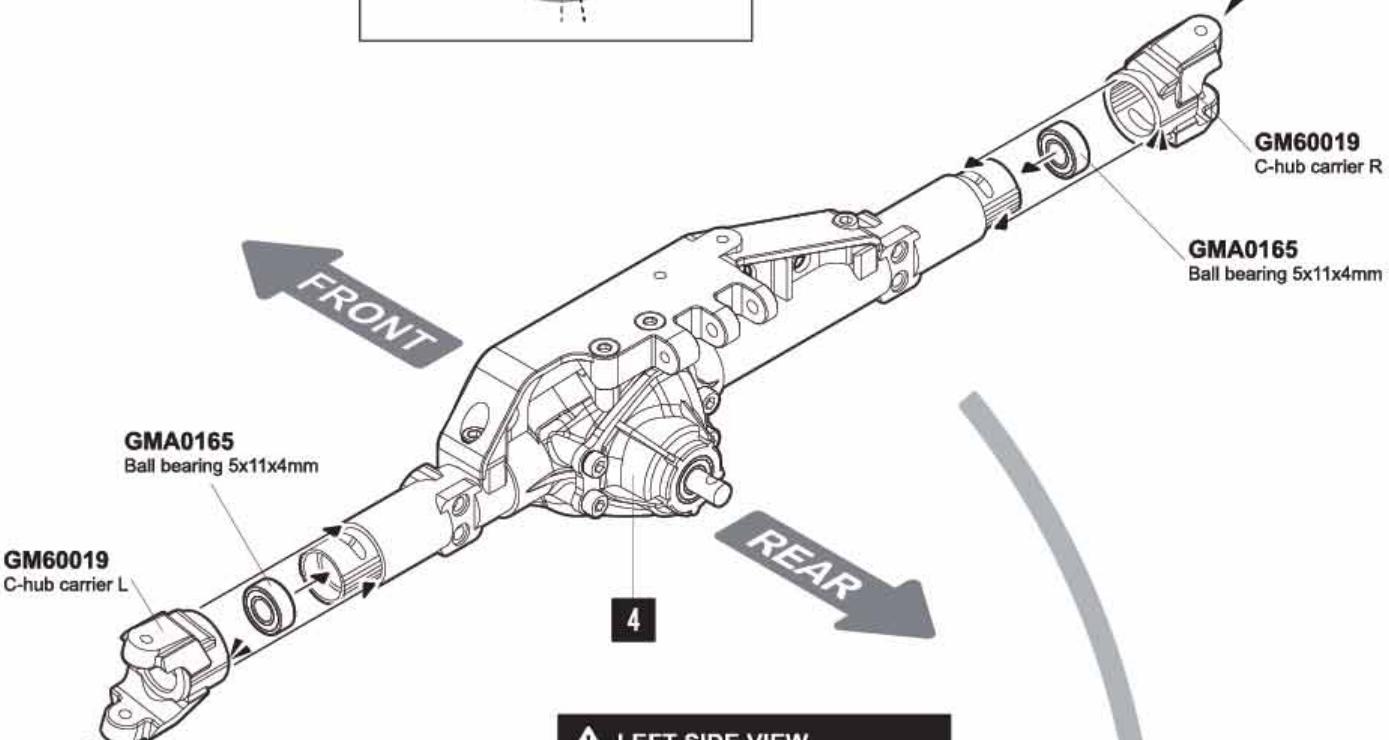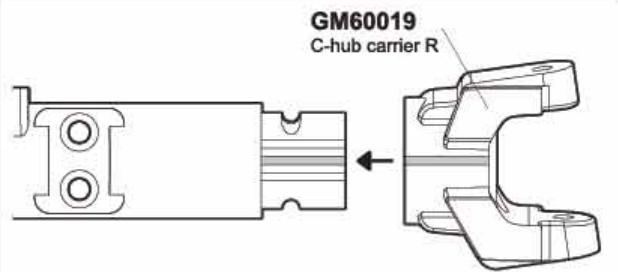
RIGHT SIDE VIEW**RIGHT C-HUB CASTER ANGLE SETUP**

4

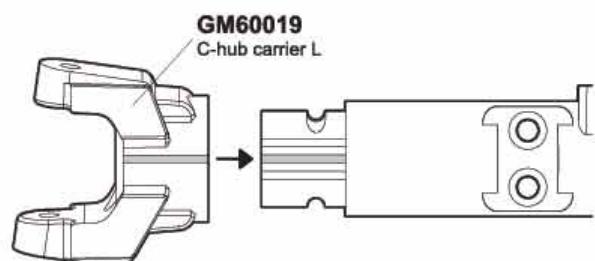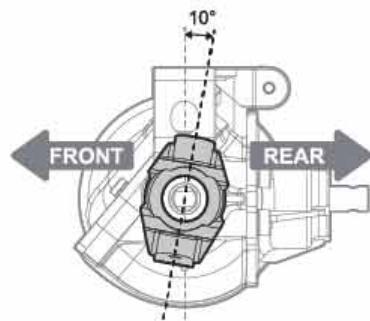
! LEFT C-HUB CASTER ANGLE SETUP**! LEFT SIDE VIEW**

GMA0131
3X10mm Socket set screw

x4

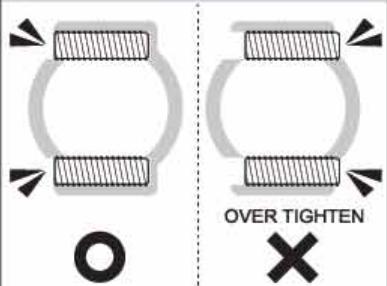
! CAUTION

GMA0131
3X10mm Socket set screw

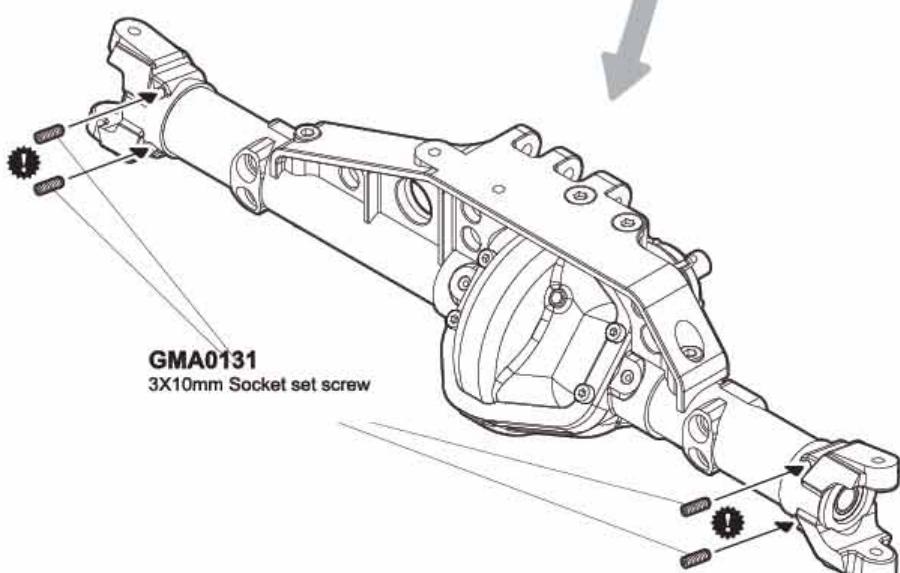


FRONT AXLE




6

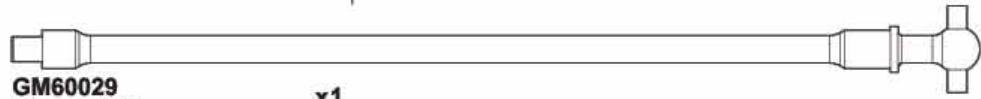

GM60029
Drive shaft 128mm
x1

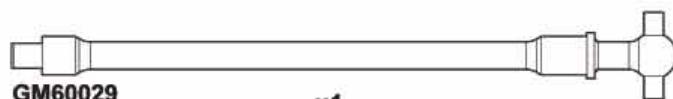


GM60029
Drive shaft 88mm
x1

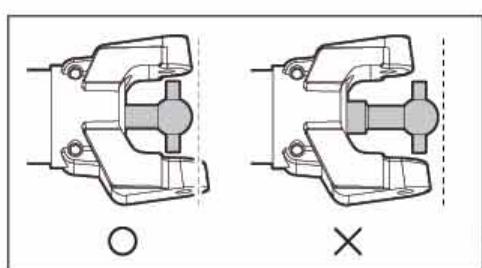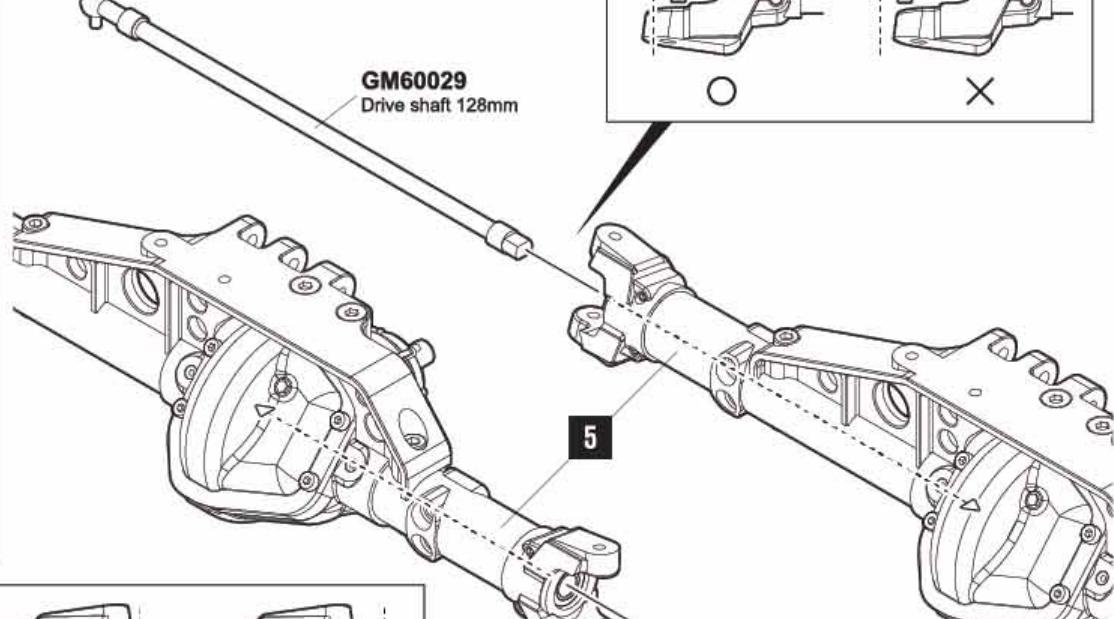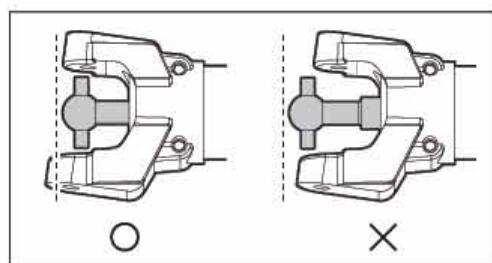

5

GM60029
Drive shaft 88mm

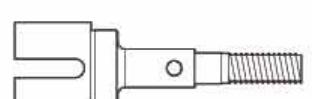

GM60047
Wheel axle shaft 38mm
x2



GM60023 **3**
x4





GMA0165
Ball bearing 5x11x4mm




GMA0167
Ball bearing 10x15x4mm
x2

7

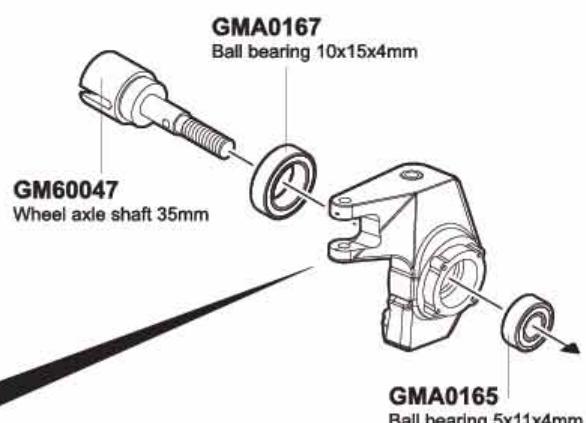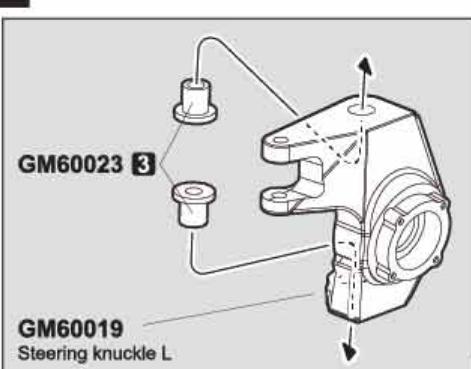


GMA0167
Ball bearing 10x15x4mm

GM60047
Wheel axle shaft 35mm

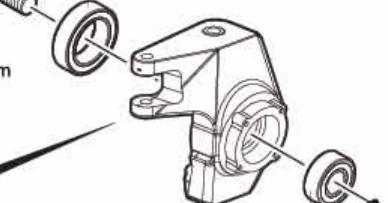

GMA0165
Ball bearing 5x11x4mm

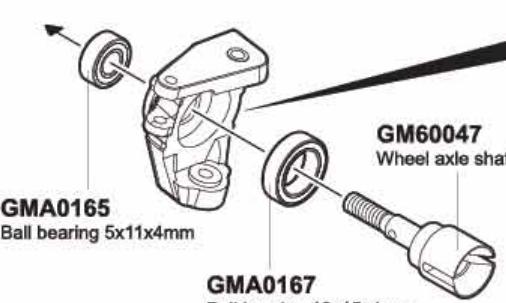


GM60019
Steering knuckle R


GM60023 **3**

FRONT AXLE

8

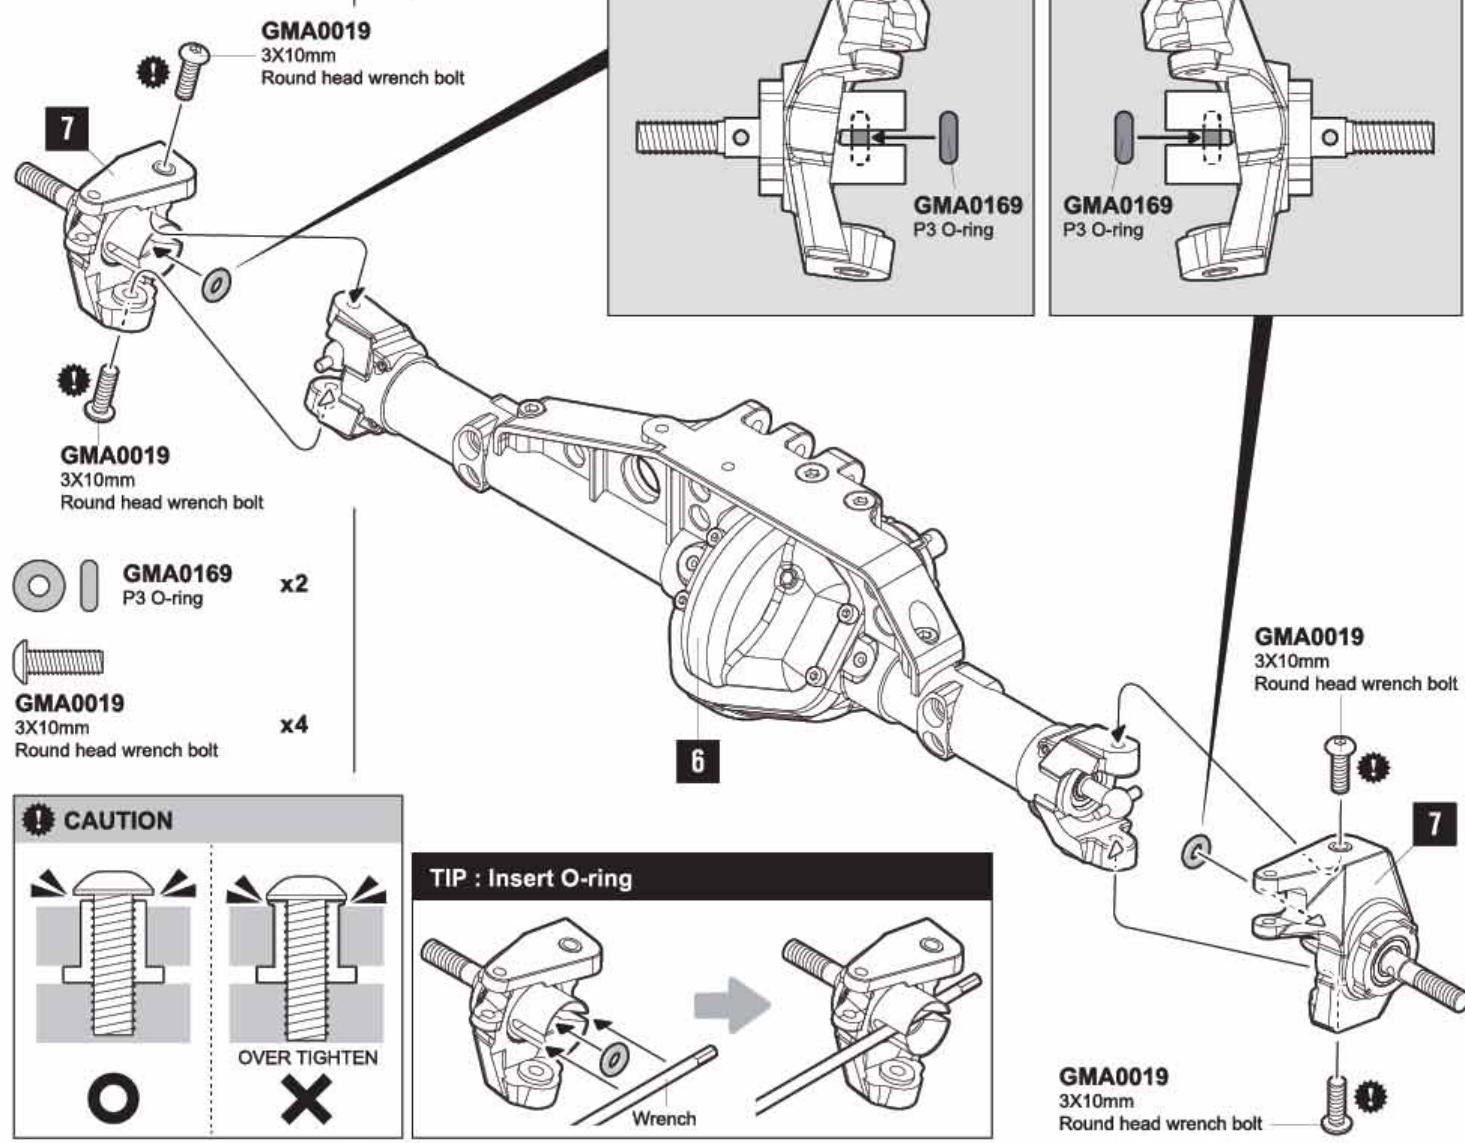

9

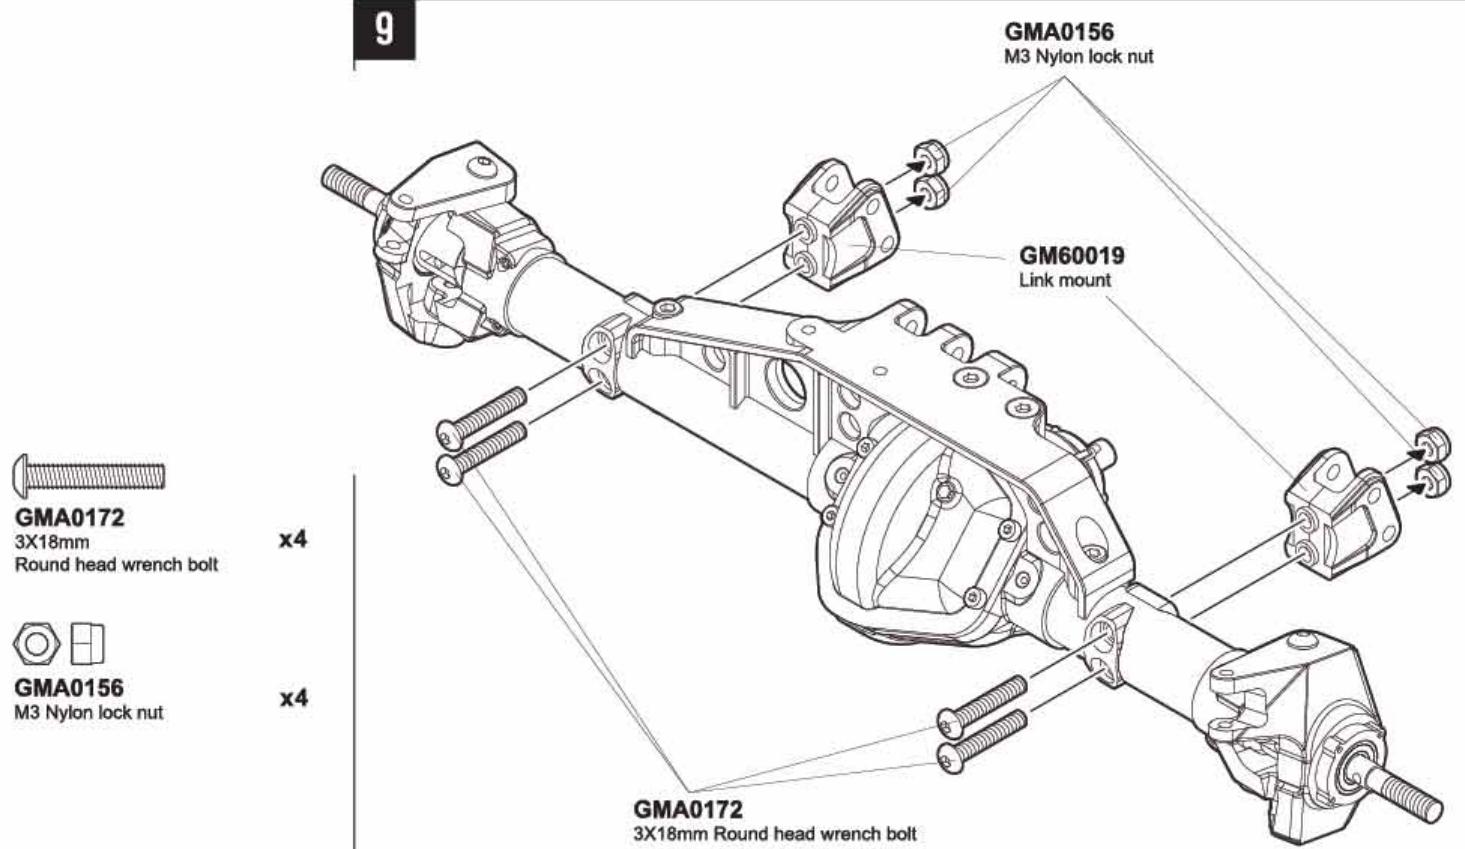


PANHARD MOUNT**10****GMA0020**3X12mm
Round head wrench bolt**x2****GMA154**

M3 Nut


x2**GMA0020**3X12mm
Round head wrench bolt**GM60019**

Panhard bar axle mount B

Panhard bar axle mount A

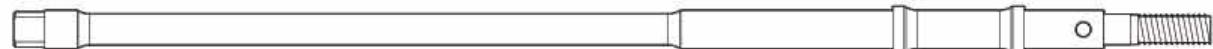11**GM60041**

Straight drive shaft 158mm

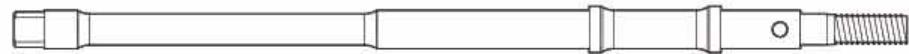x1**GM60041**

Straight drive shaft 118mm

x1**GMA0165**

Ball bearing 5x11x4mm

x2**GM60041**

Straight drive shaft 158mm


GMA0165

Ball bearing 5x11x4mm


5**GMA0165**
Ball bearing 5x11x4mm**GM60041**
Straight drive shaft 118mm

REAR AXLE

12


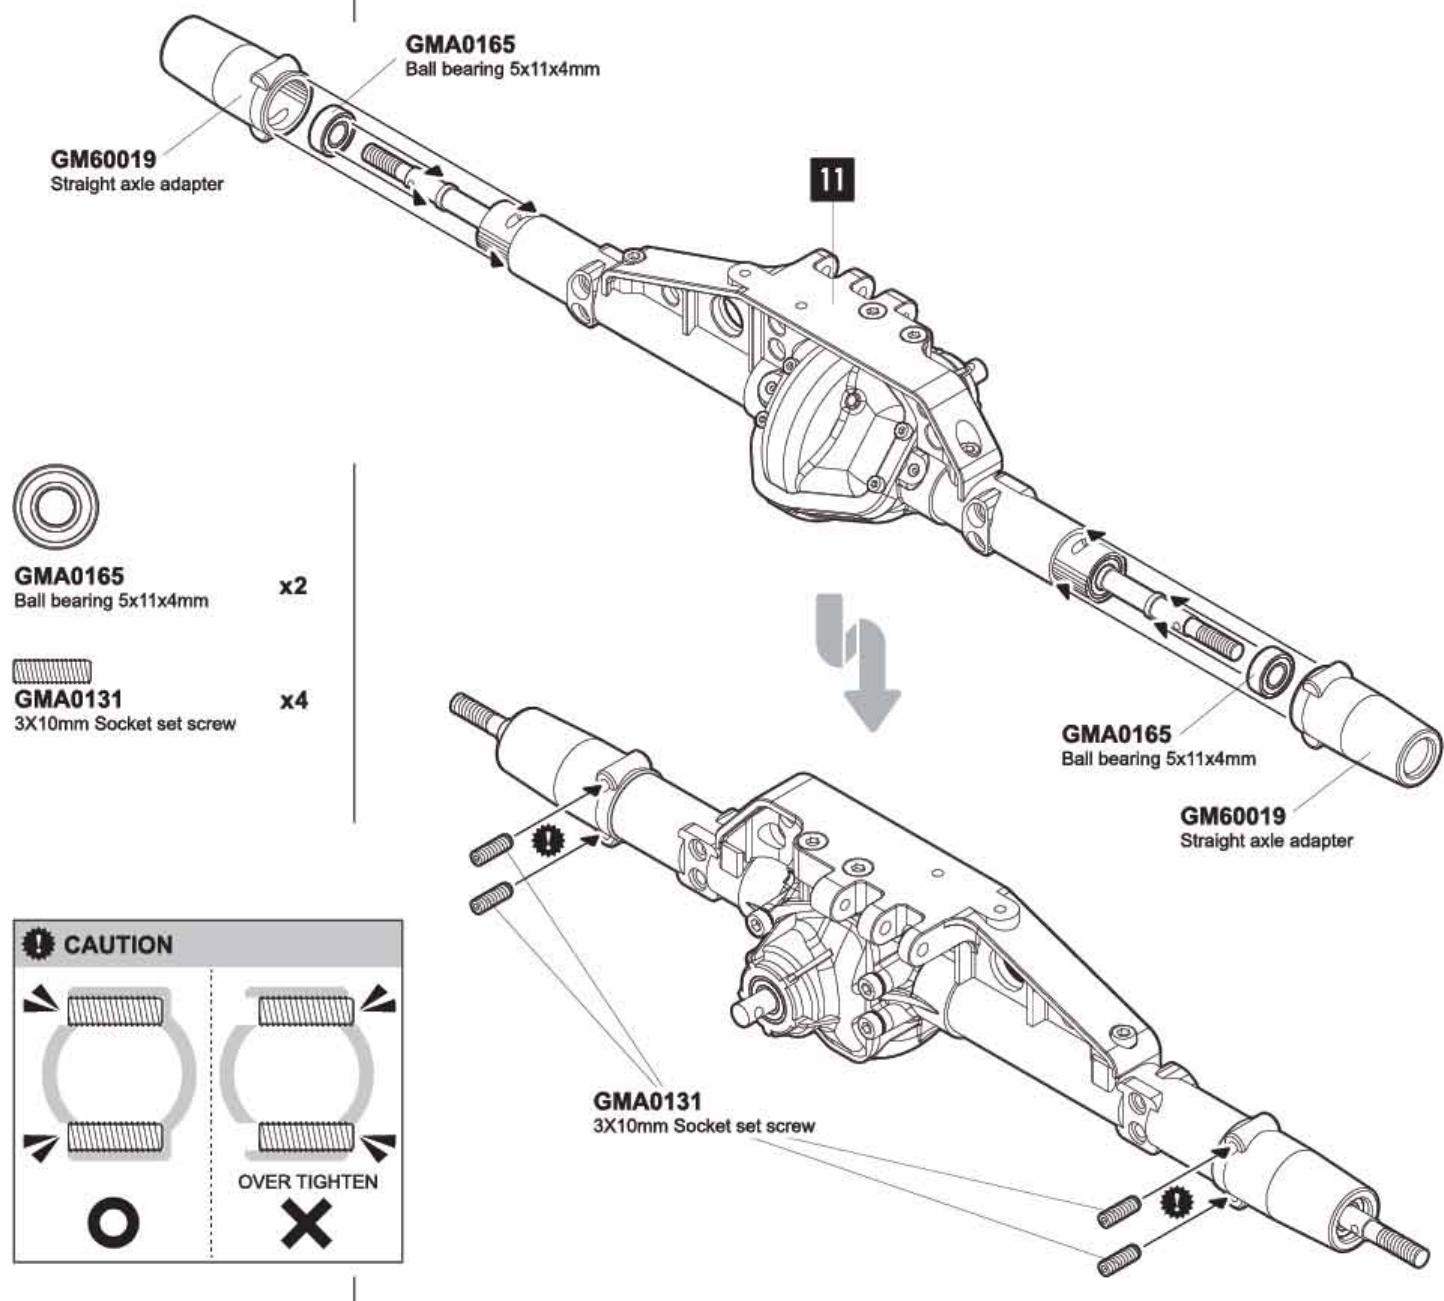


13



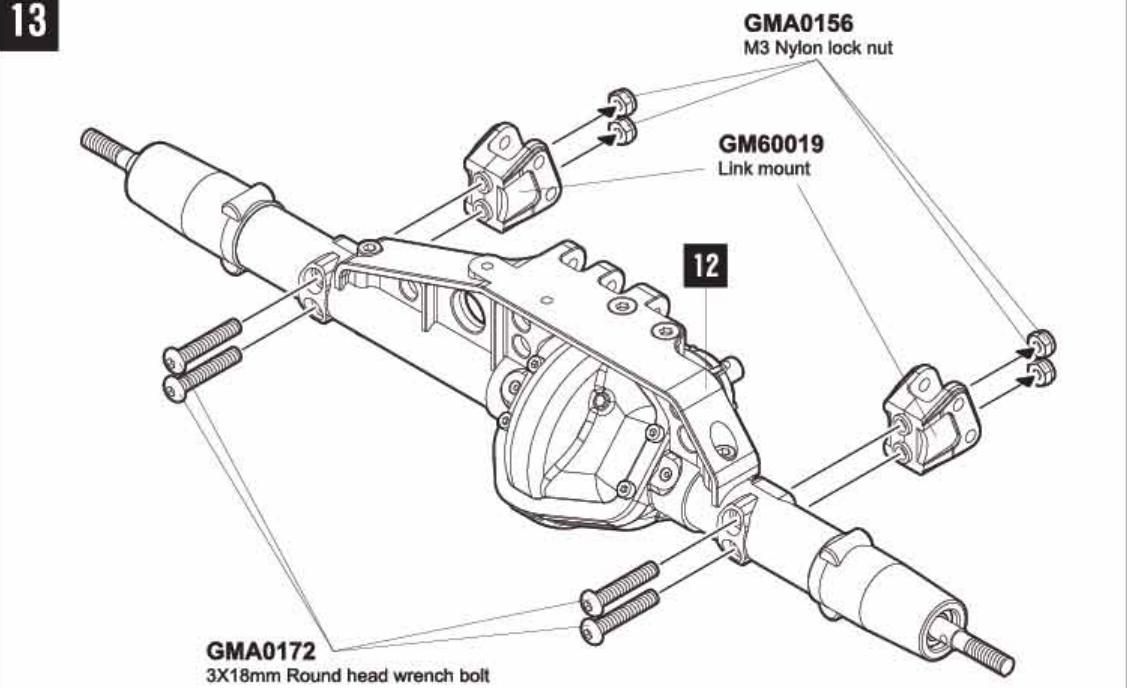


TRANSFER CASE

14


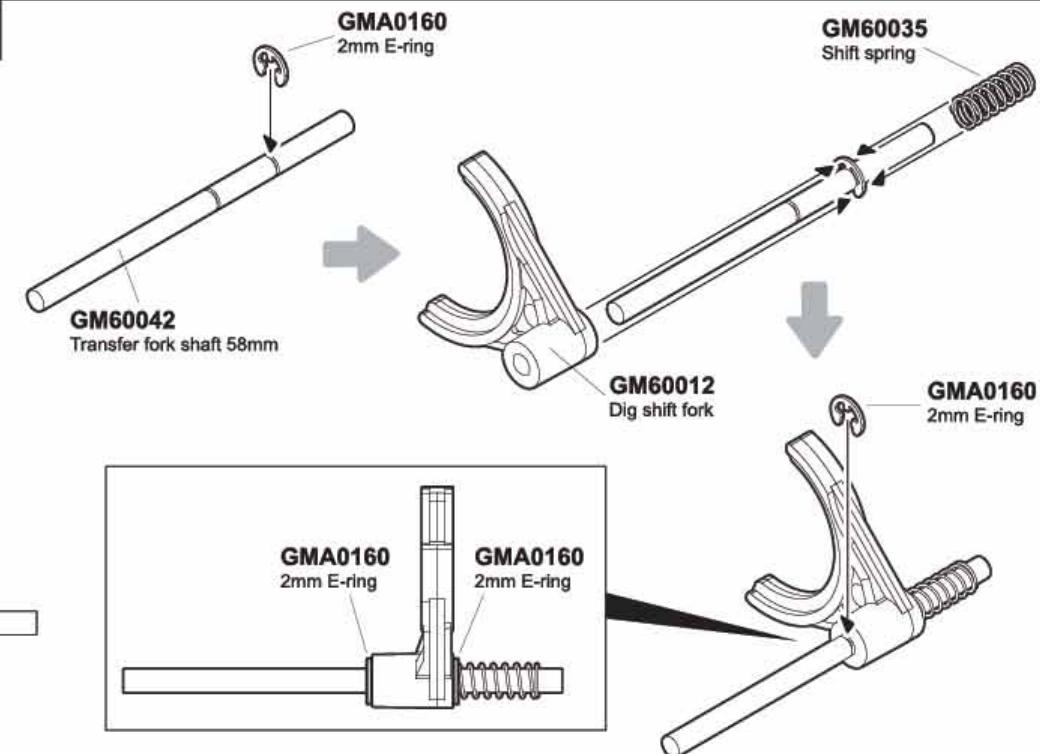
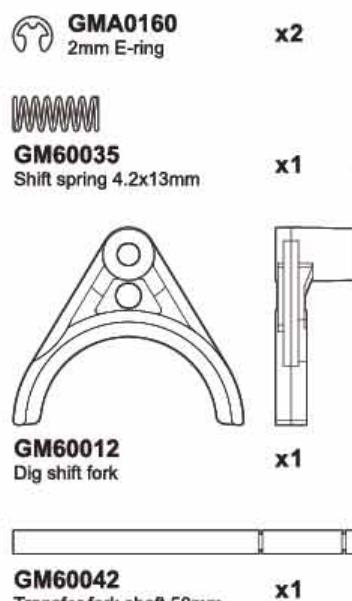


15

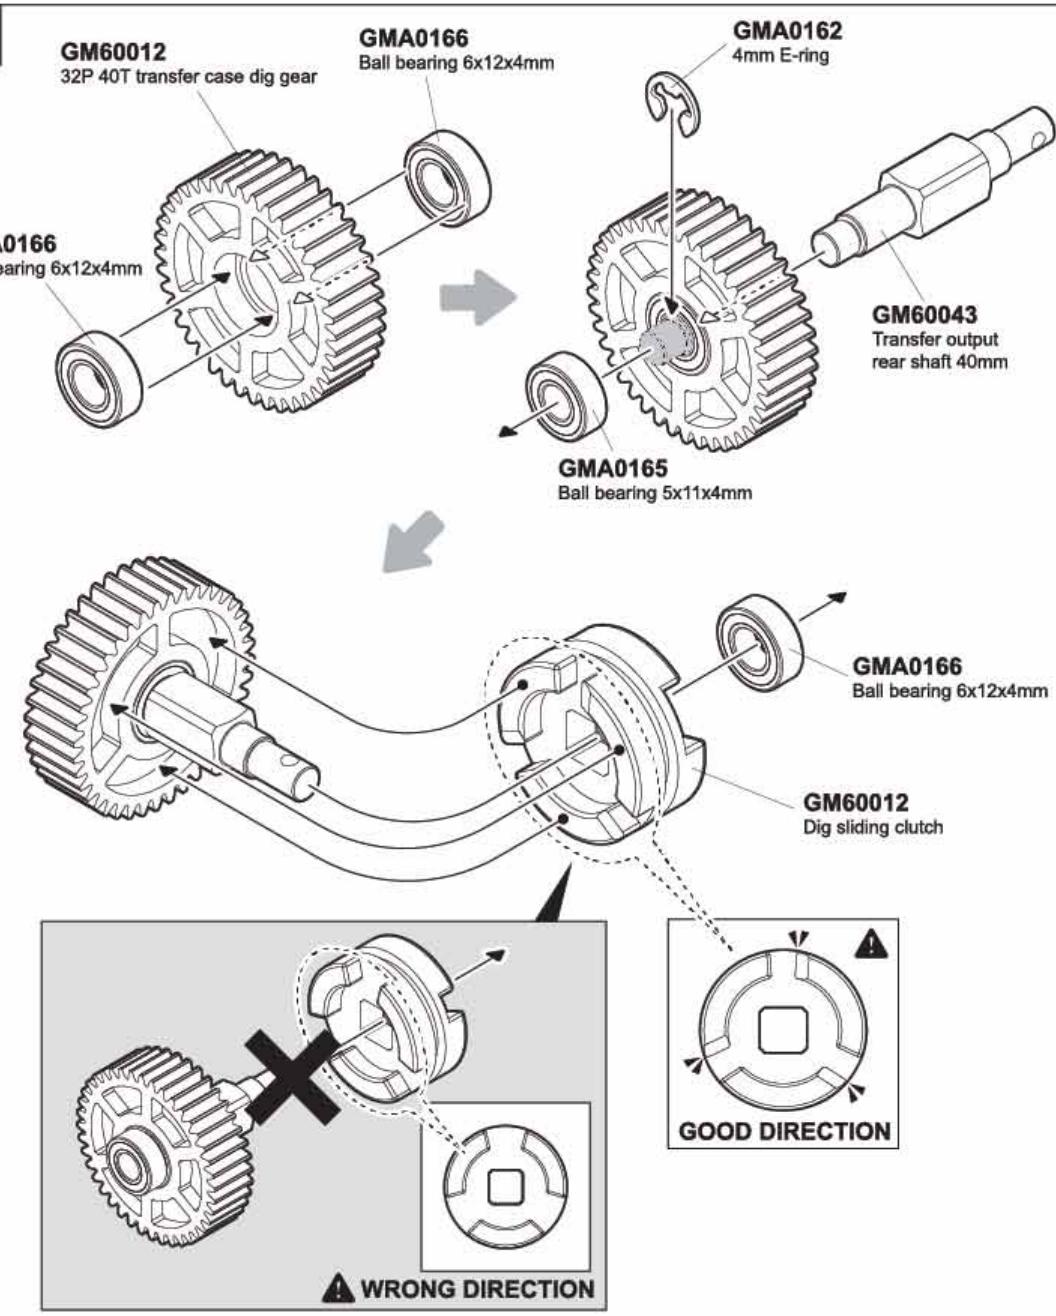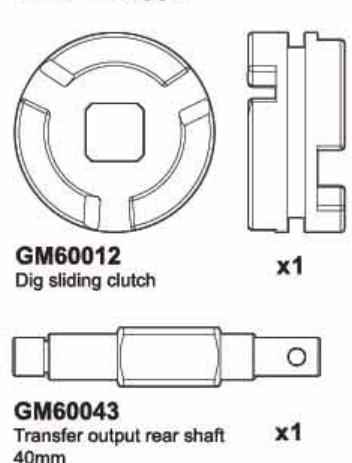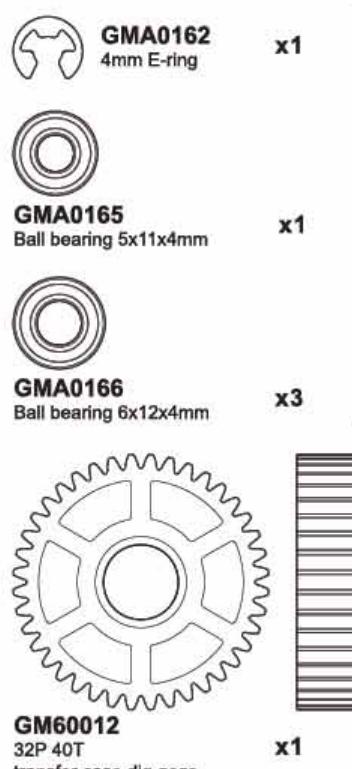

TRANSFER CASE

16




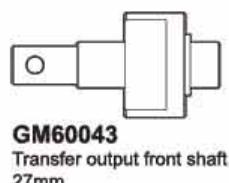
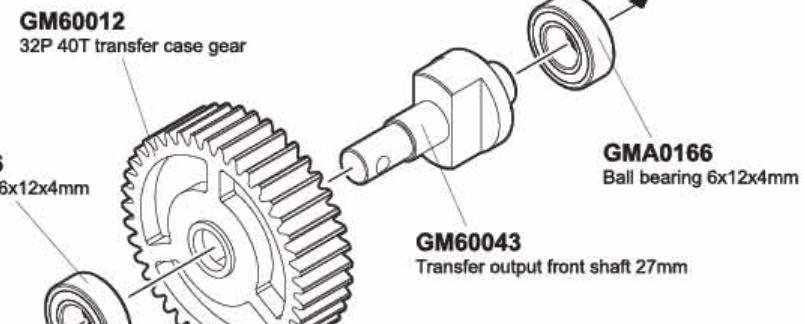
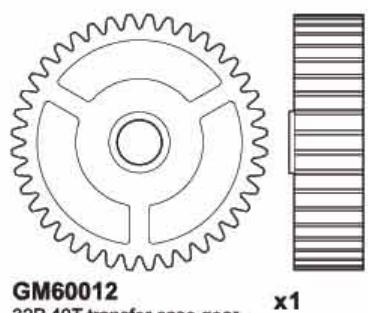


x2

17



GM60011
Transfer case rear housing

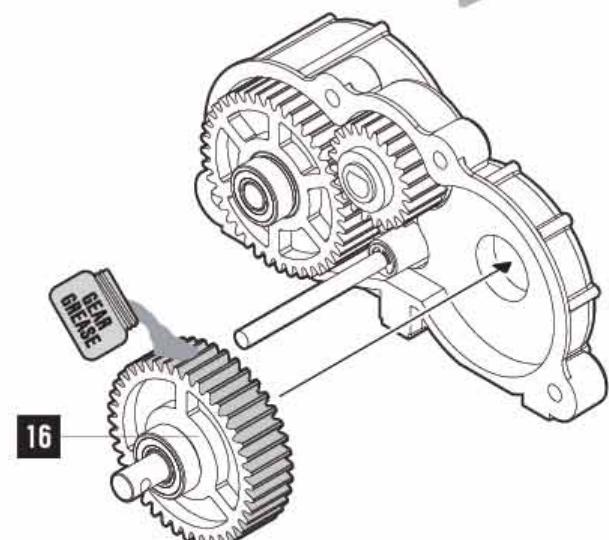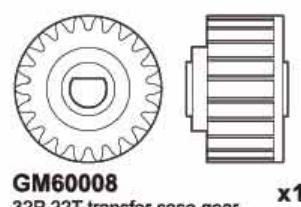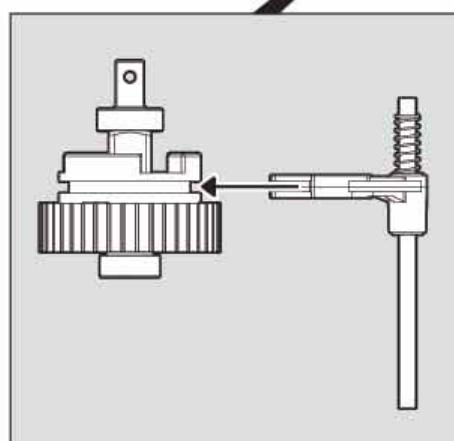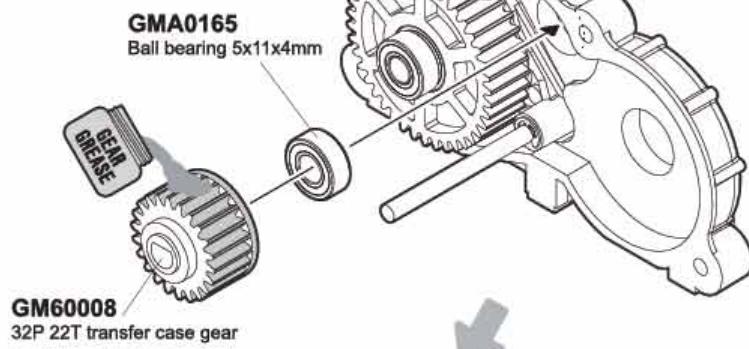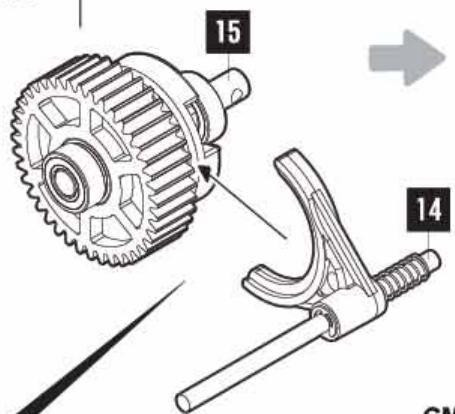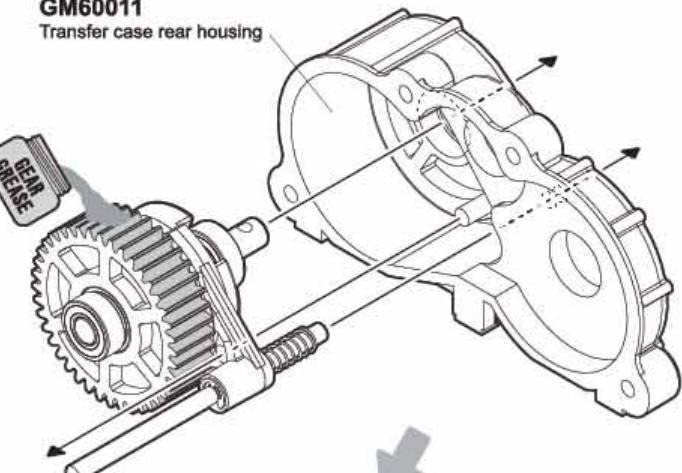

TRANSFER CASE

18




GMA0165
Ball bearing 5x11x4mm

x2



GM60012
1150 Bushing

x1

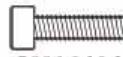


GMA0104
3X12mm Wrench bolt

x4




GMA0154
M3 Nut

x4

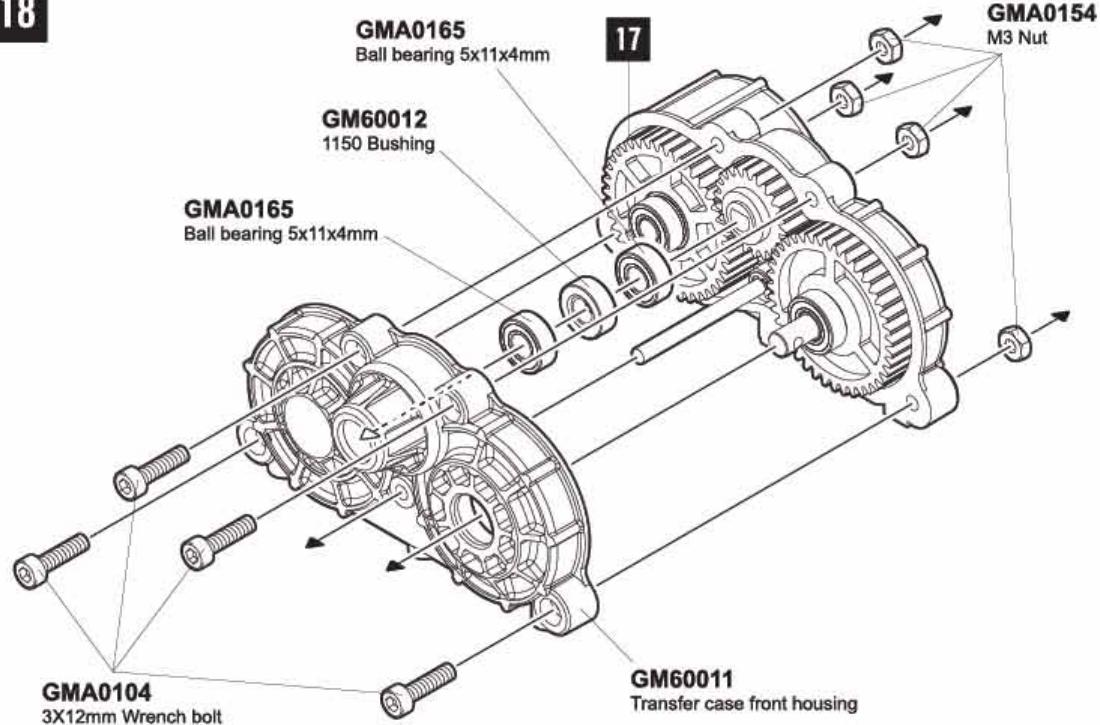TRANSMISSION
ASSEMBLY GUIDE

3CH TRANSMITTER USER
(3position AUX channel is required.)

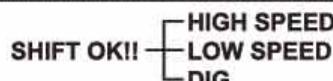

19-A → 20 → 21-A

2CH TRANSMITTER USER

LOW SPEED FIX

19-A → 20 → 21-A

SKIP 39 41 42

HIGH SPEED FIX

19-B → 20 → 21-B

19-A


GM60044
Transmission fork shaft 78mm

GMA0160
2mm E-ring

x2

GM60035
Shift spring 4.2x13mm

x1

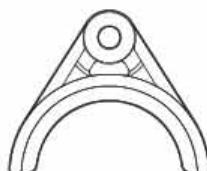

GM60012
HI/LO shift fork

x1


19-B

19-B

GMA0160
2mm E-ring

GMA0160
2mm E-ring

GMA0160
2mm E-ring

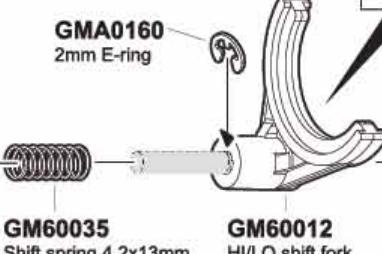


GM60012
HI/LO shift fork

GM60044
Transmission fork shaft 78mm

GMA0160
2mm E-ring

GMA0160
2mm E-ring

GMA0160
2mm E-ring

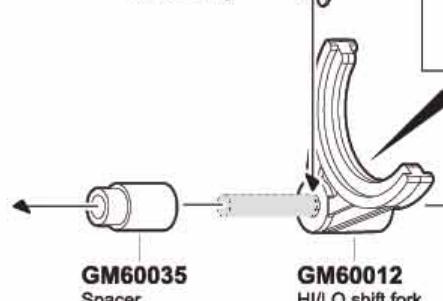

GM60012
HI/LO shift fork

GM60044
Transmission fork shaft 78mm













GM60035
Spacer

x1

TRANSMISSION

20


⚠ Please be careful with the direction.

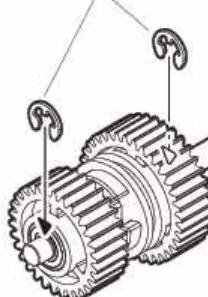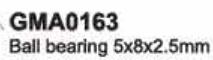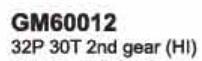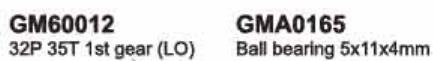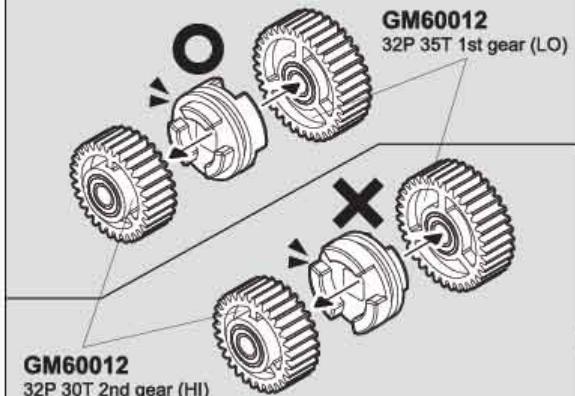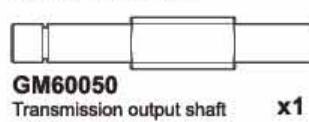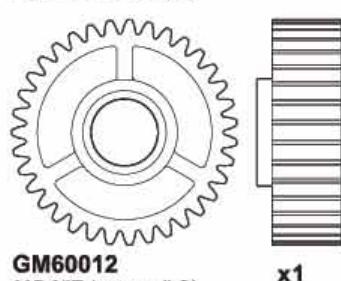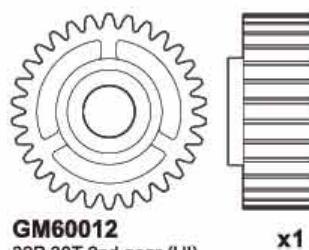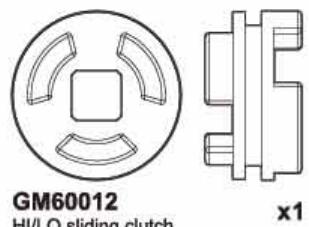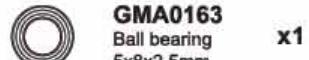

21-A

GMA0165
Ball bearing 5x11x4mm


20

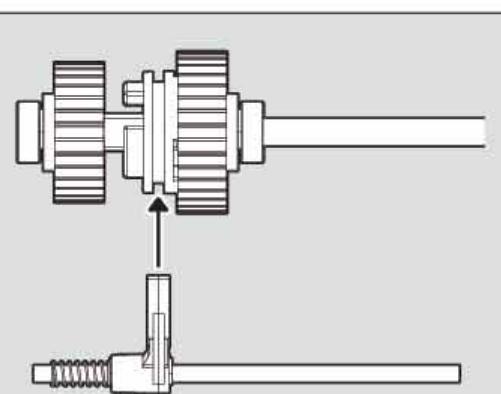

21-B


GMA0165
Ball bearing 5x11x4mm

20

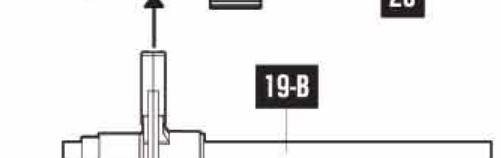

GMA0165
Ball bearing 5x11x4mm


19-A

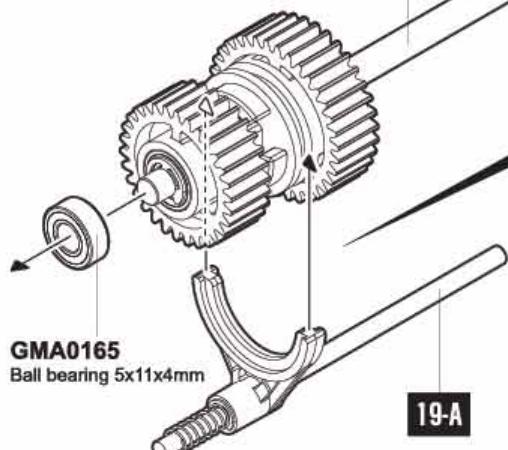


TRANSMISSION

22

	GM60033	x2
	GMA0162	x2
	GMA0165	x2
	GM60008	x1
	GM60008	x1
	GM60038	x1

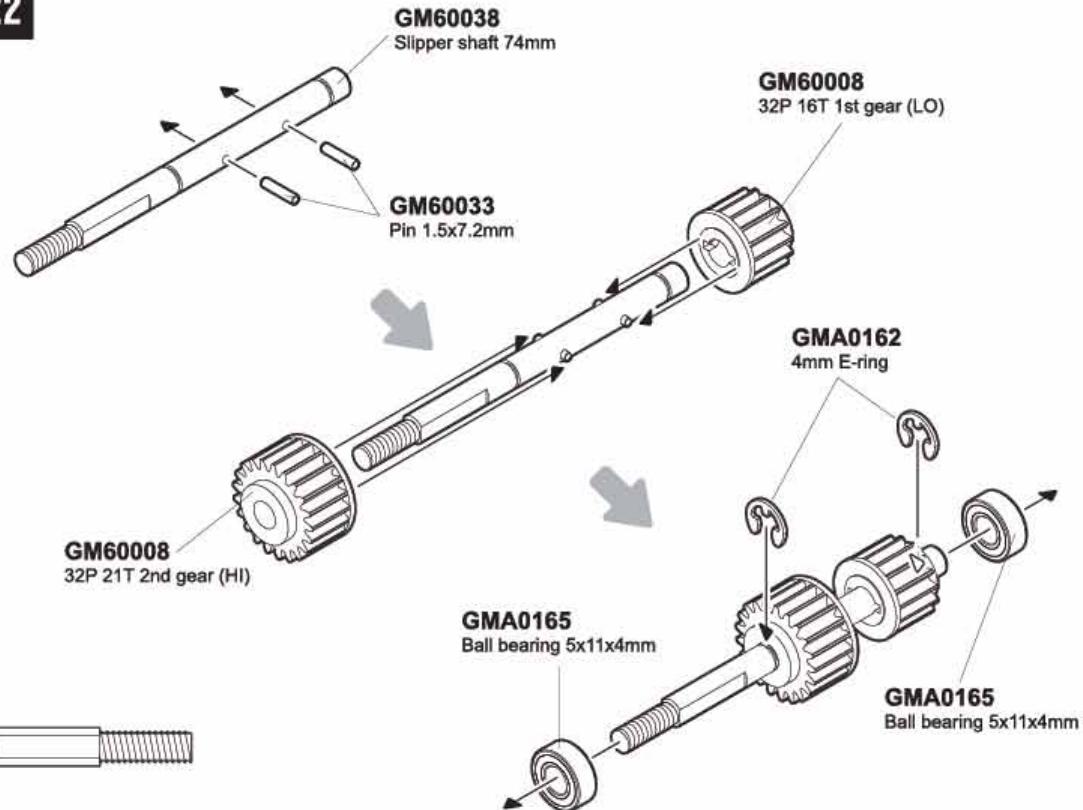

23

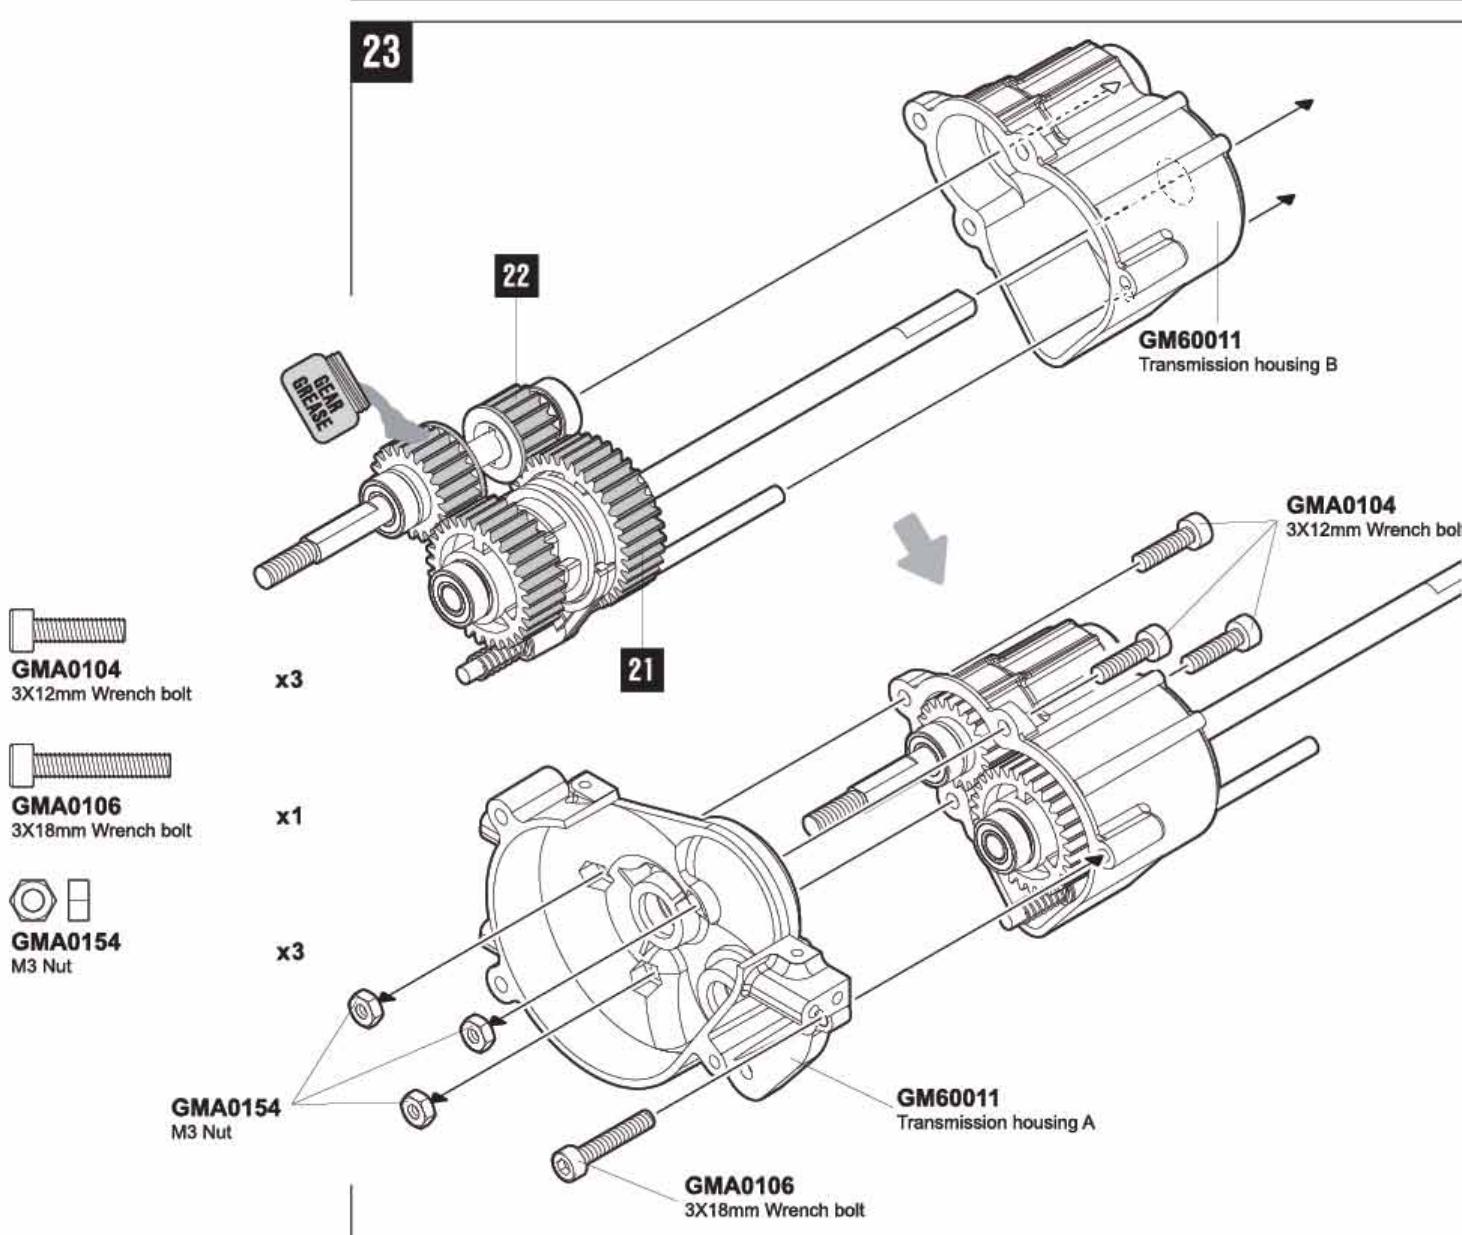


TRANSMISSION


24




GM60012
32P 56T Spur gear x1

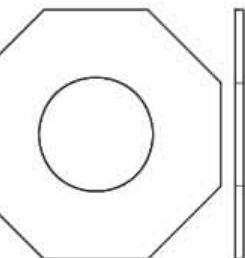

GM60037
Slipper pad x2

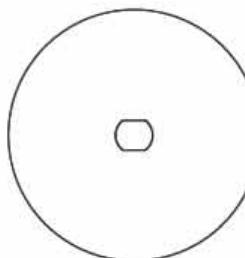

GM60036
Slipper disk 33x1mm x2

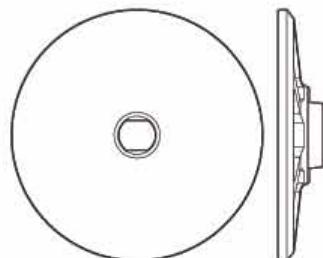



GM60008
Slipper plate x1

GMA0159
4mm Washer x1

GM60039
Slipper spring 8.5x12mm x1

GM60012
1150 Bushing x1

GMA0157
M4 nylon lock nut x1

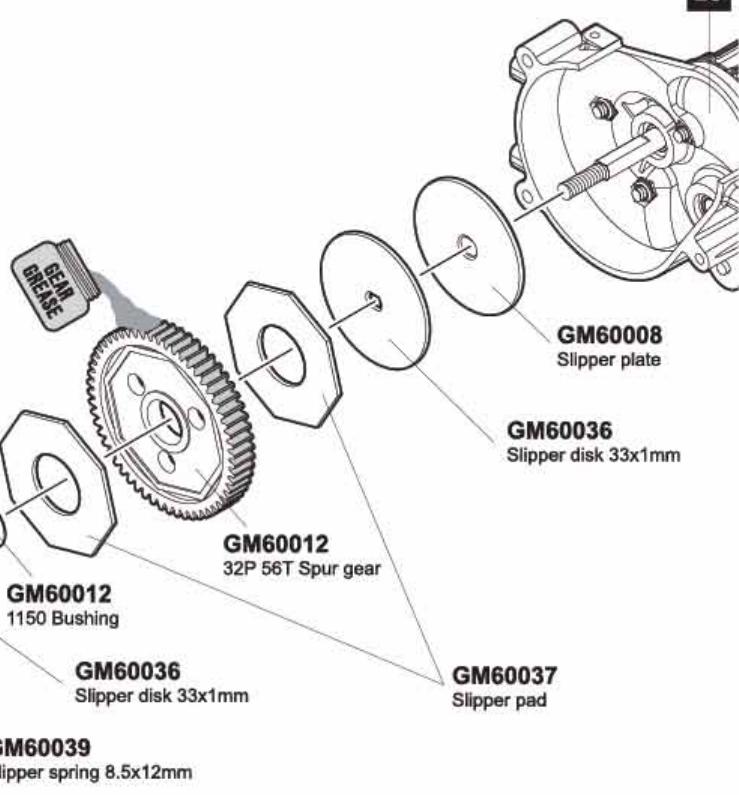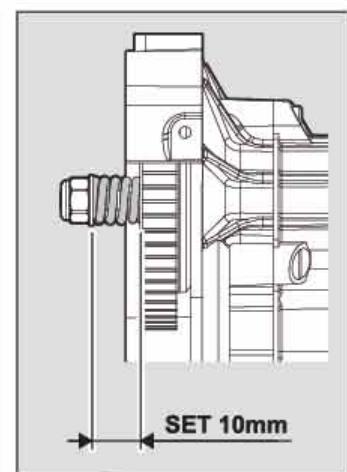

GM60012
32P 56T Spur gear

GM60036
Slipper disk 33x1mm

GM60037
Slipper pad

GMA0159
4mm Washer

GM60039
Slipper spring 8.5x12mm


25

GMA0083
2X8mm Wrench bolt x2

GMA0105
3X15mm Wrench bolt x1

GMA0106
3X18mm Wrench bolt x2

GMA0154
M3 Nut x2

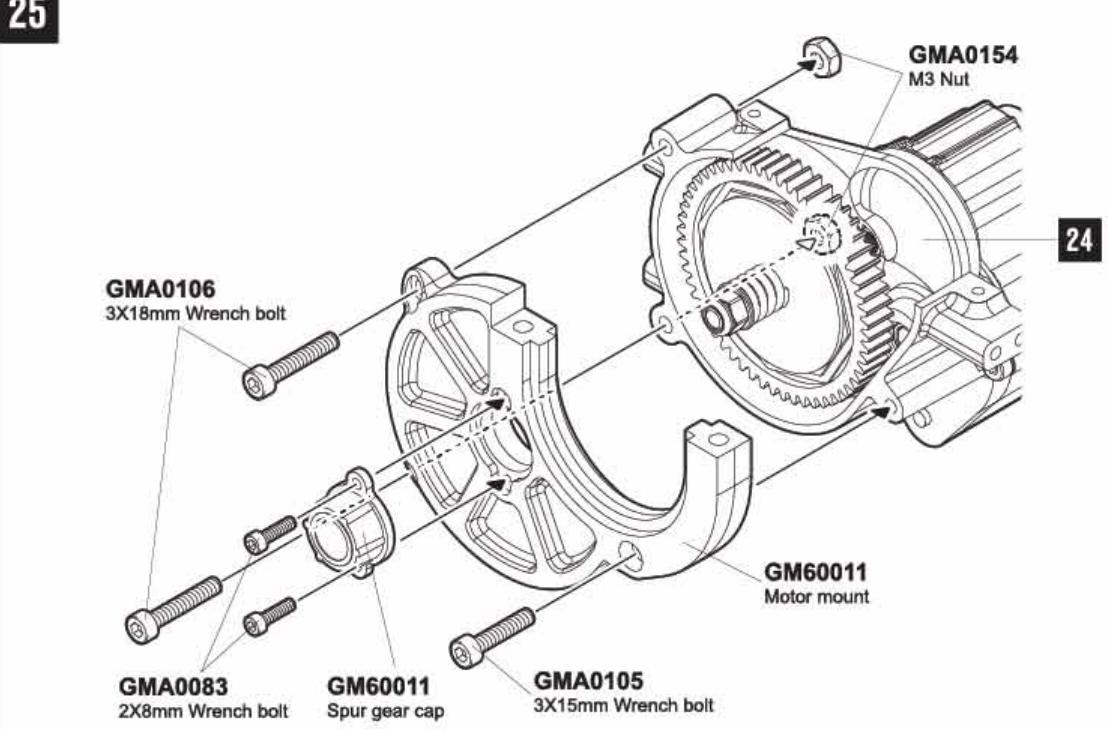

GMA0154
M3 Nut

GMA0106
3X18mm Wrench bolt

GMA0083
2X8mm Wrench bolt

GM60011
Spur gear cap

GMA0105
3X15mm Wrench bolt


GM60011
Motor mount

TRANSMISSION

26


⚠ Motor is not included.

	GMA0102 3X8mm Wrench bolt	x2
	GMA0127 3X4mm Socket set screw	x1
	GM60008 32P 13T pinion gear	x1

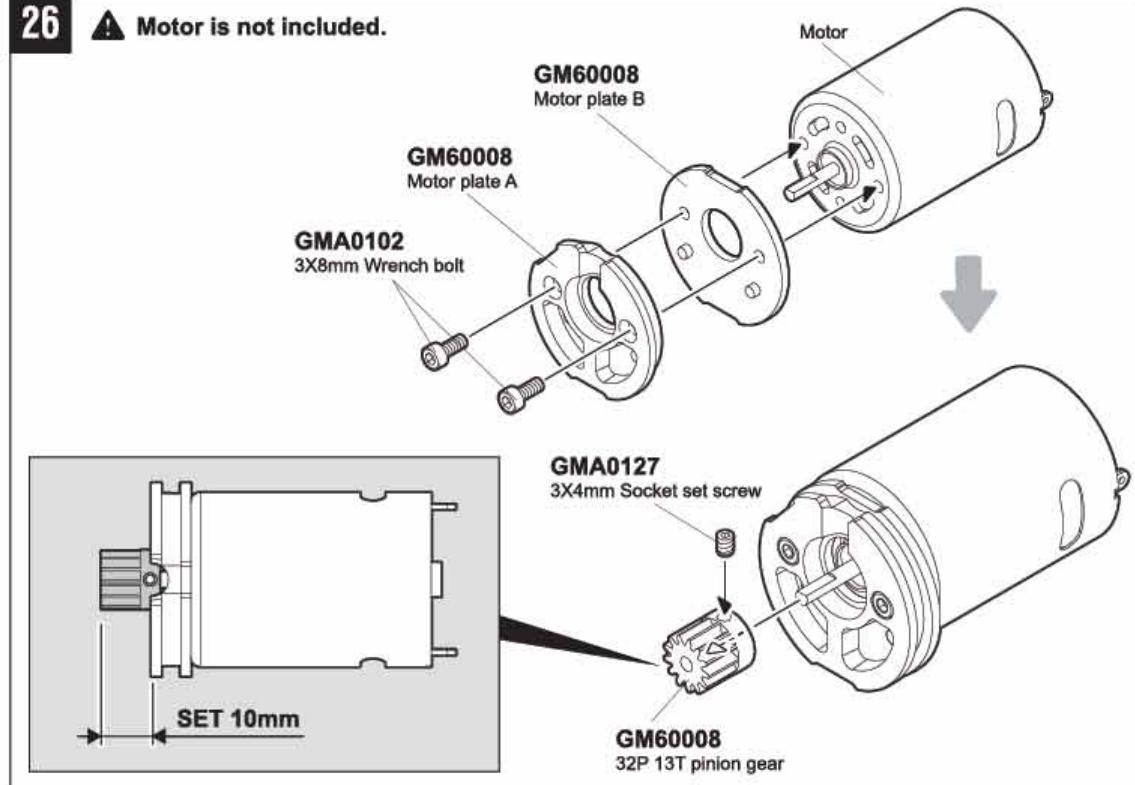

27

⚠ Use a small piece of paper to slip between the gears to help set the proper gear mesh.

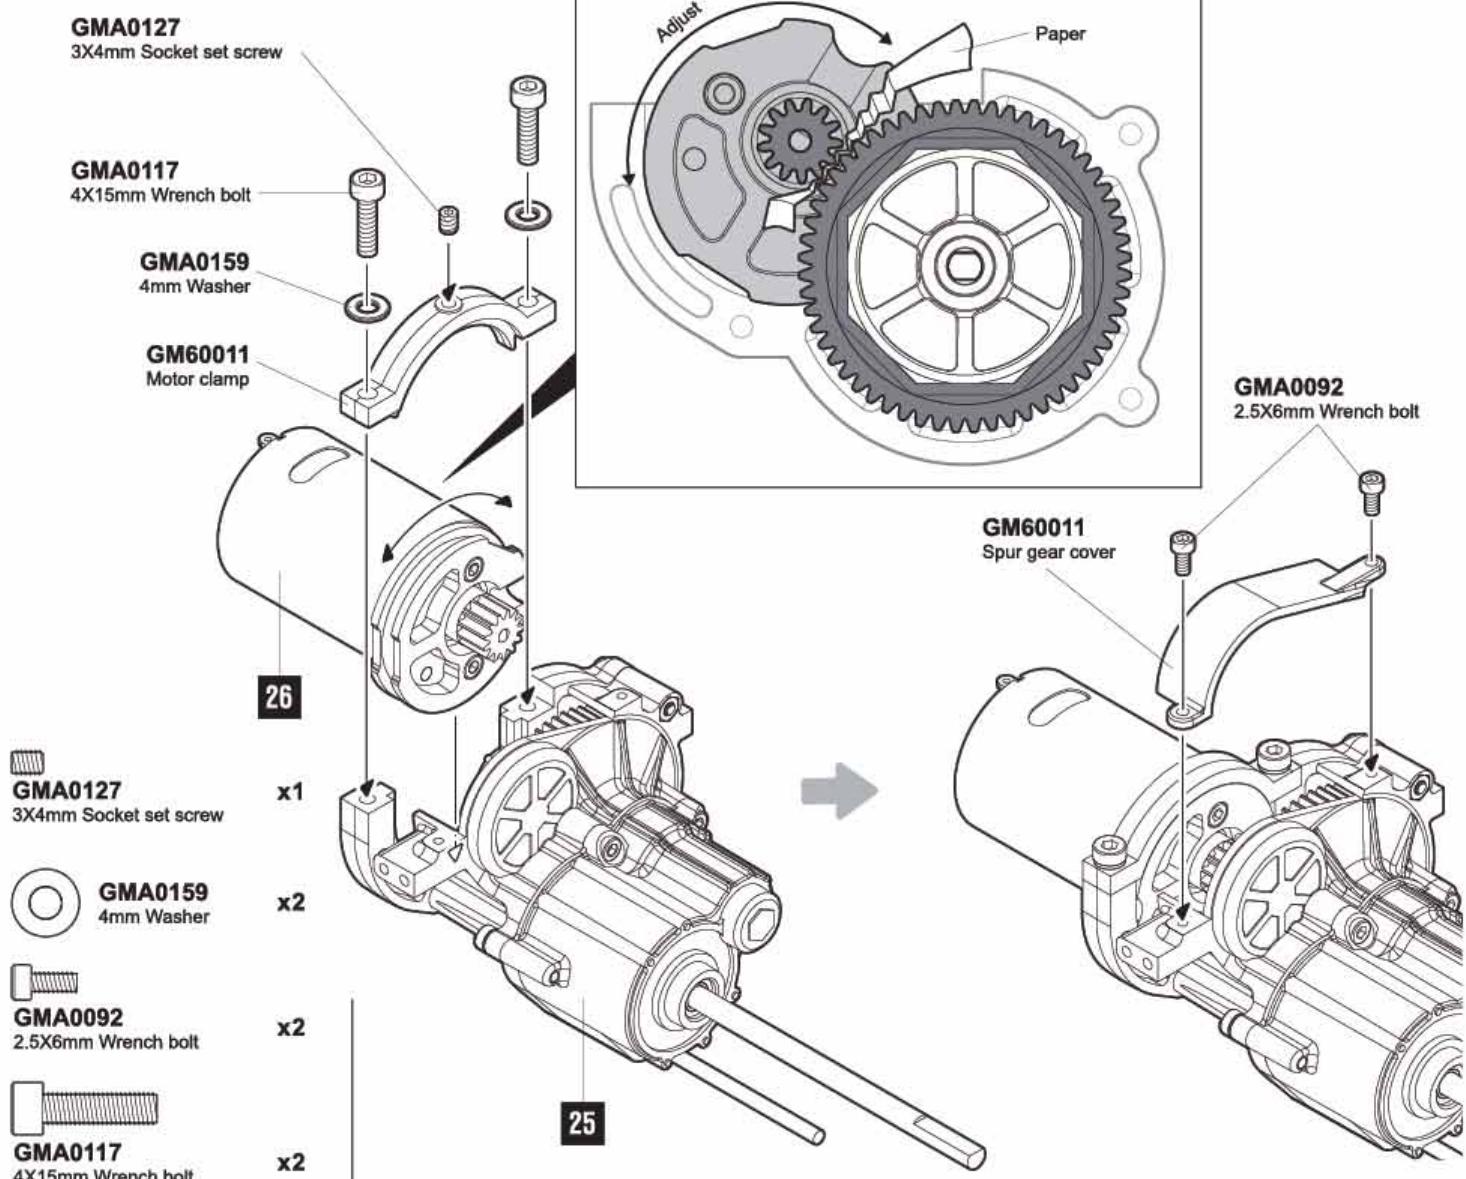


FRONT UPPER LINK ROD

28



GM60023 1 x2

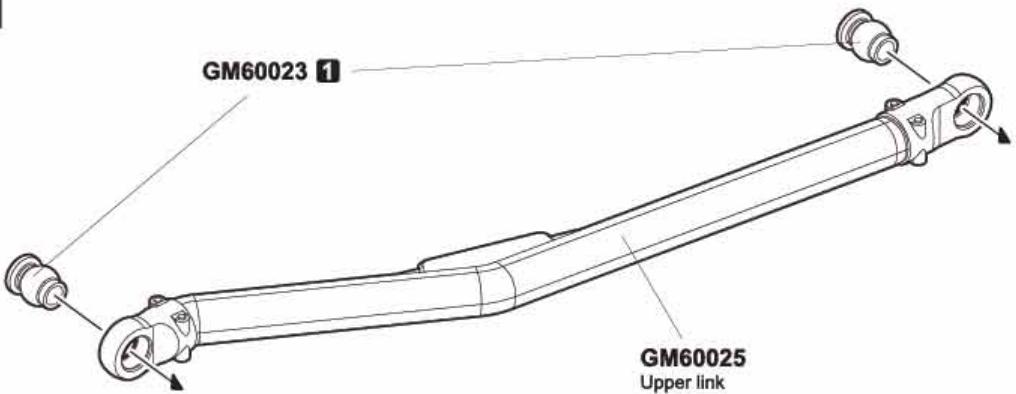

REAR UPPER LINK ROD

29




GMA0145
4X20mm Socket set screw

x4



GM60023 1 x4

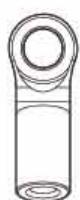

GM60022 6

x4

GMA0145
4X20mm Socket set screw

GM60027
Bent upper link M4x6.8x99mm

REAR


FRONT

GMA0145
4X20mm Socket set screw


GM60023 1

GM60022 6

⚠ REAR UPPER LINK ROD TOP VIEW

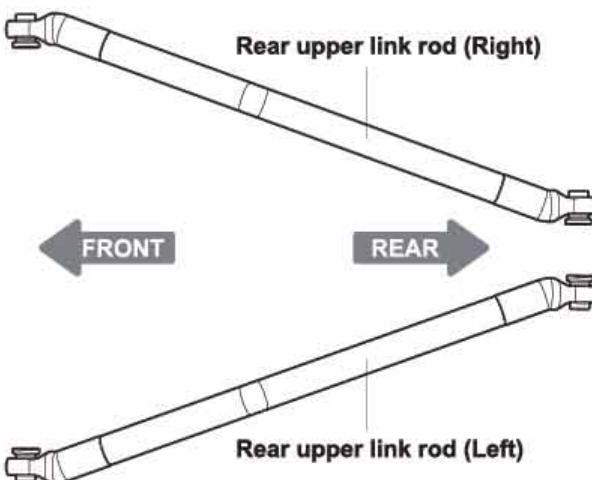


⚠ REAR UPPER LINK ROD SIDE VIEW

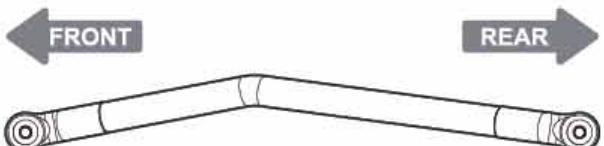

FRONT LOWER LINK ROD


30

 GM60031
Lower link M4x6.8x105mm x2

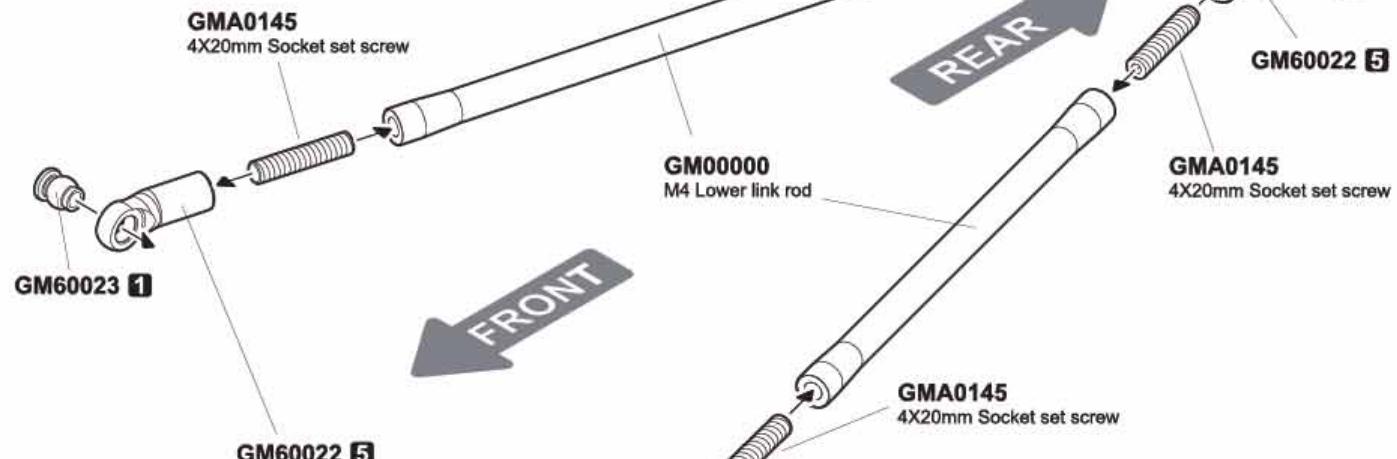


 GM0145
4X20mm Socket set screw x4

 GM60023 1
x4

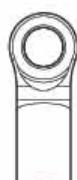 GM60022 5
x4


! FRONT LOWER LINK ROD TOP VIEW

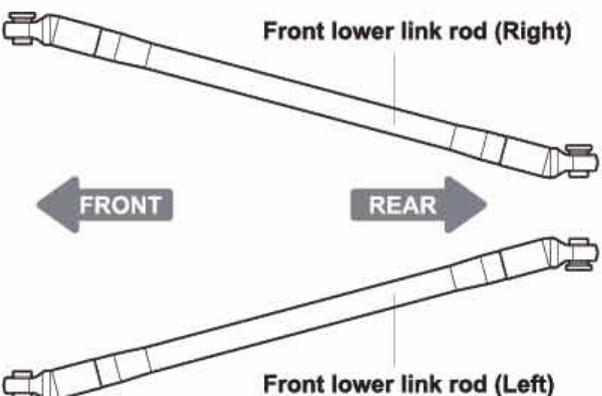

TRAILING ARM

31


 GM60023 1
x4

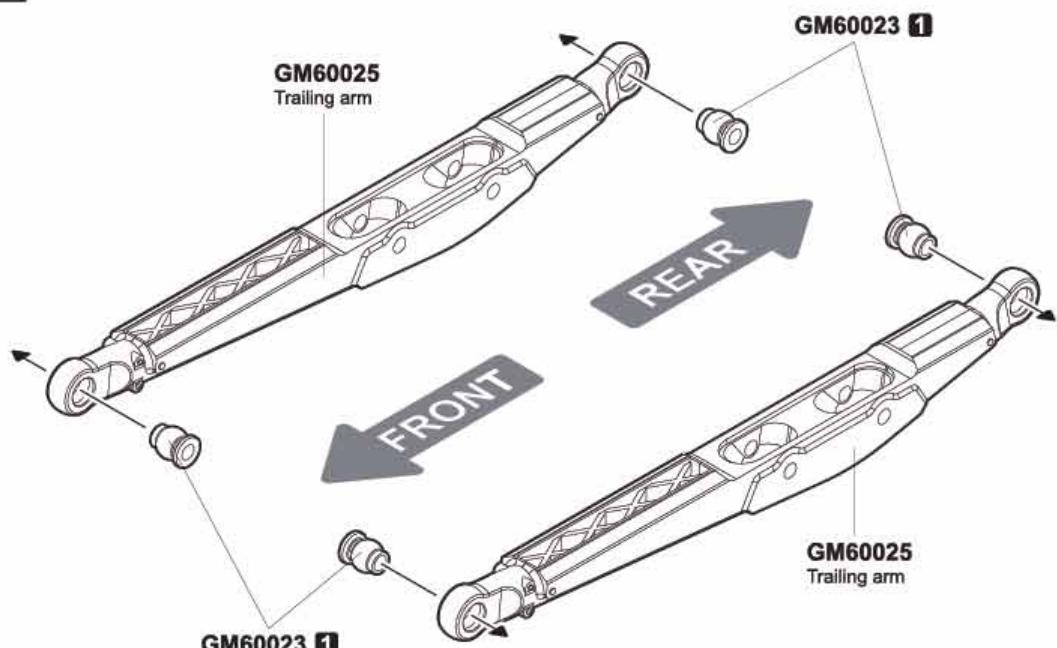

**GMA0058**


3X10mm Flat head wrench bolt

x2

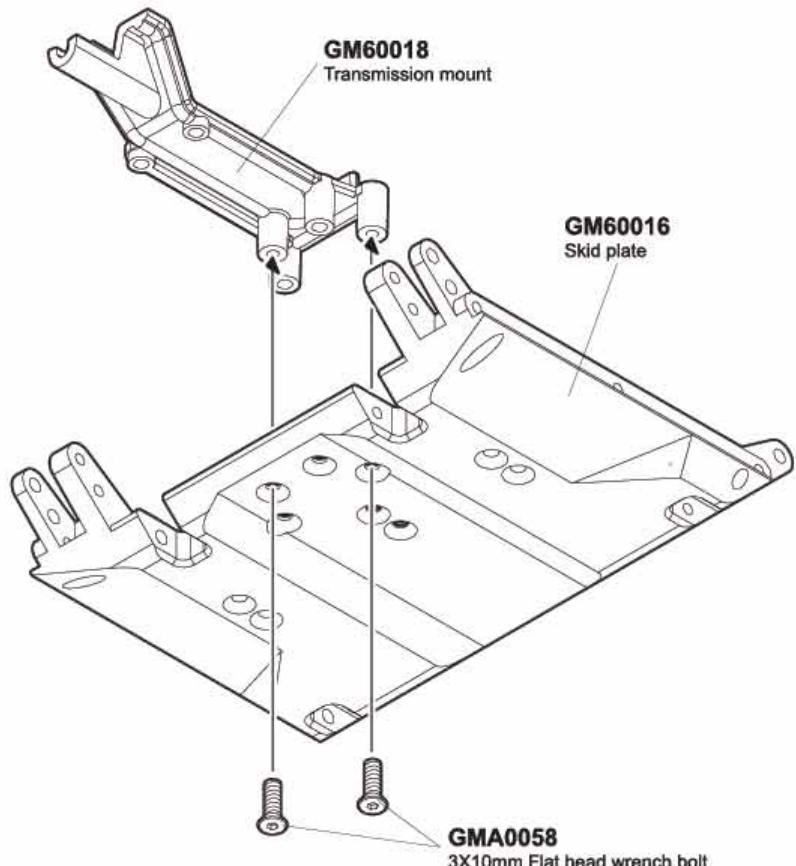**GMA0105**


3X15mm Wrench bolt

x2

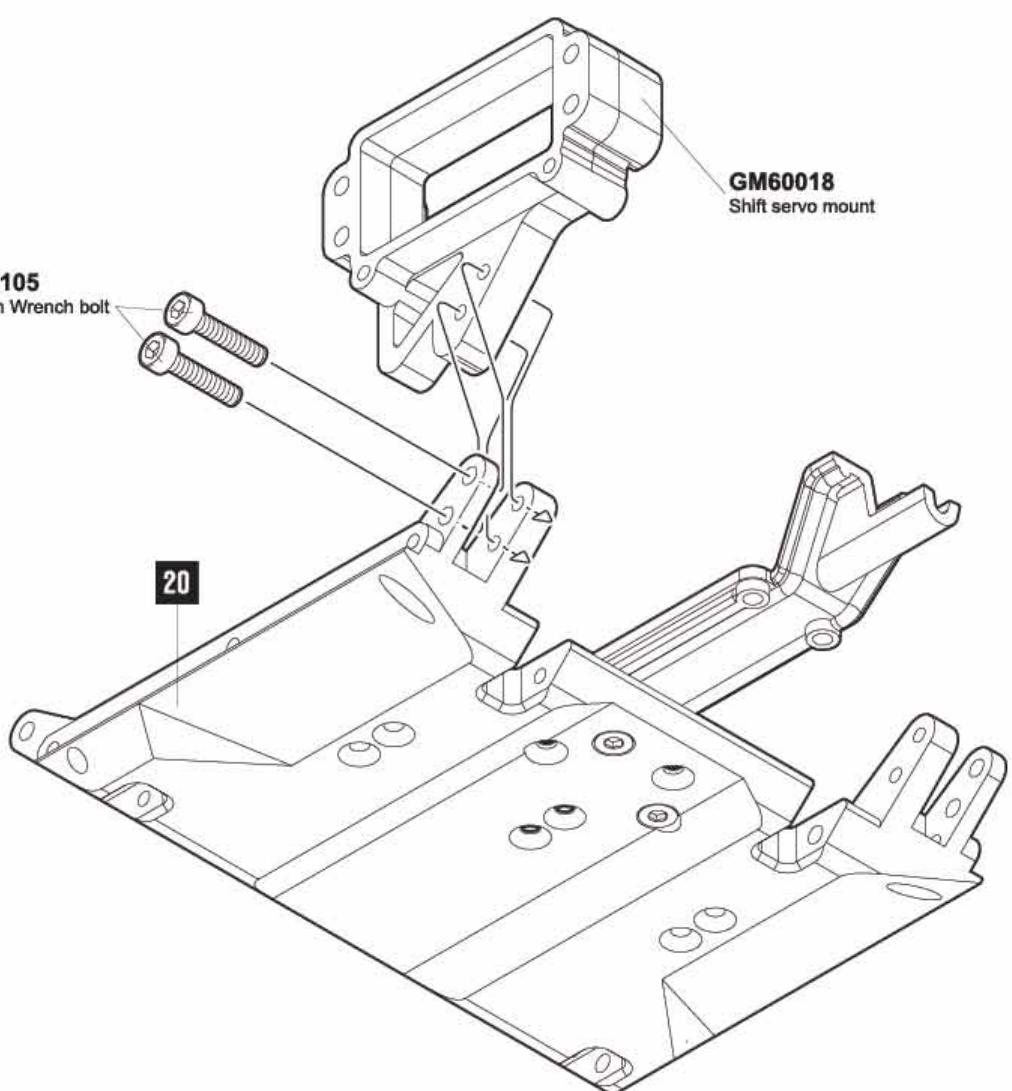


SKID PLATE**34****GMA0105**
3X15mm Wrench bolt





x1

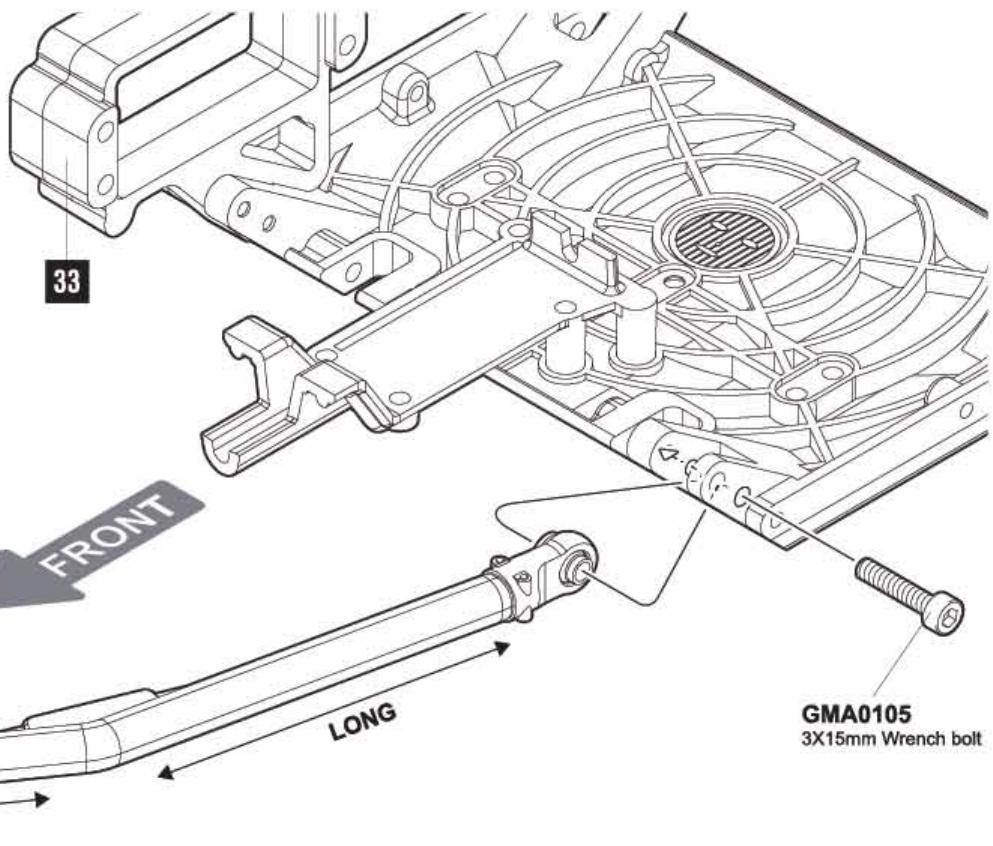
**35****GMA0105**
3X15mm Wrench bolt

x2



x2

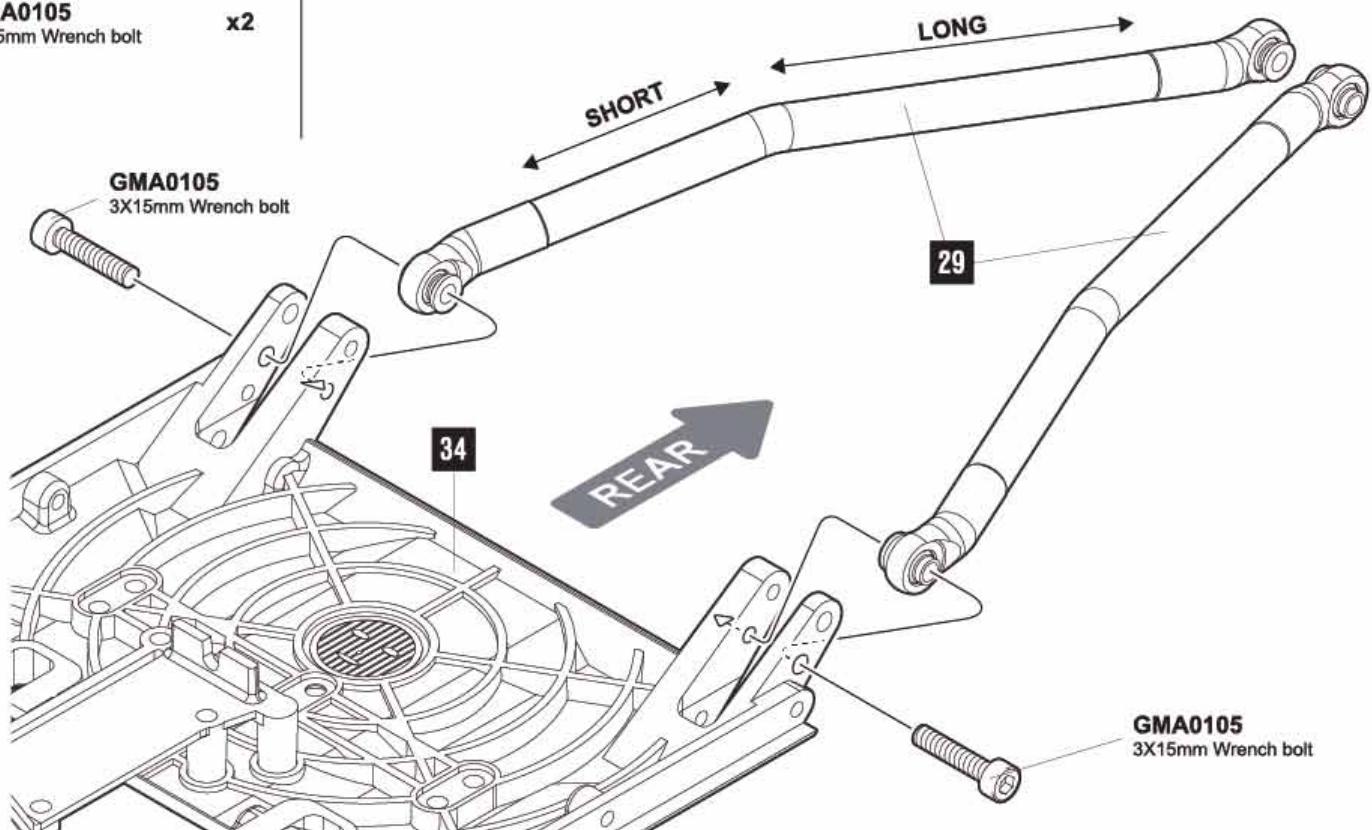GMA0105
3X15mm Wrench bolt

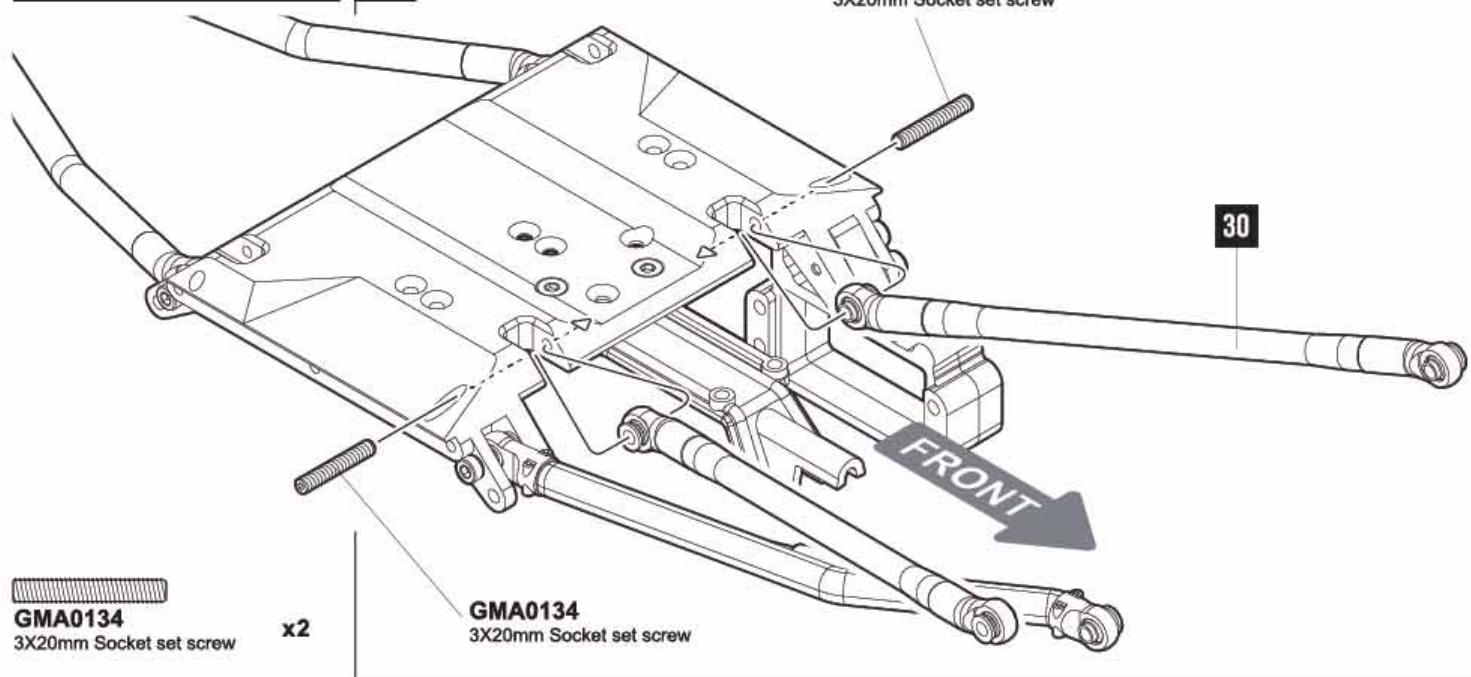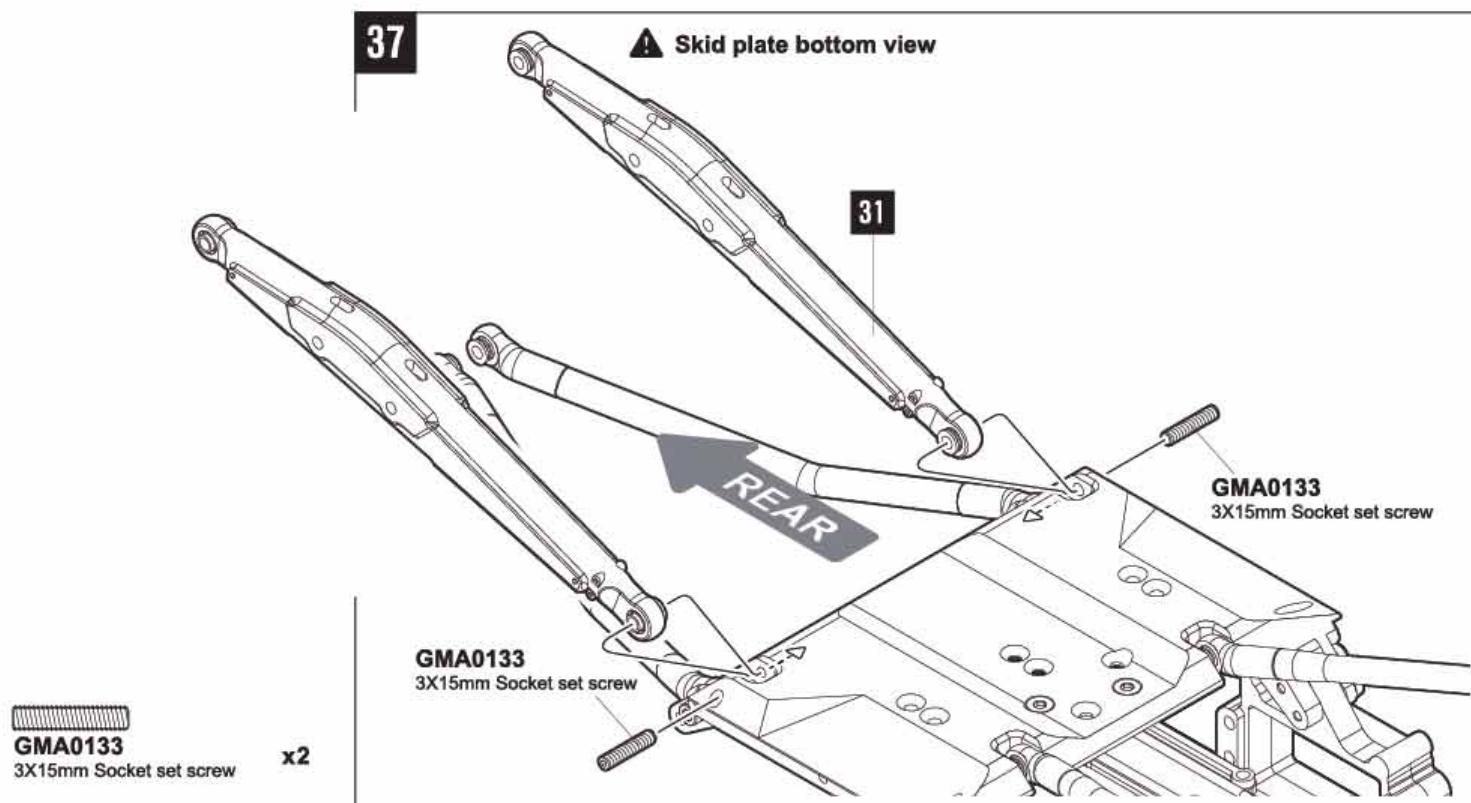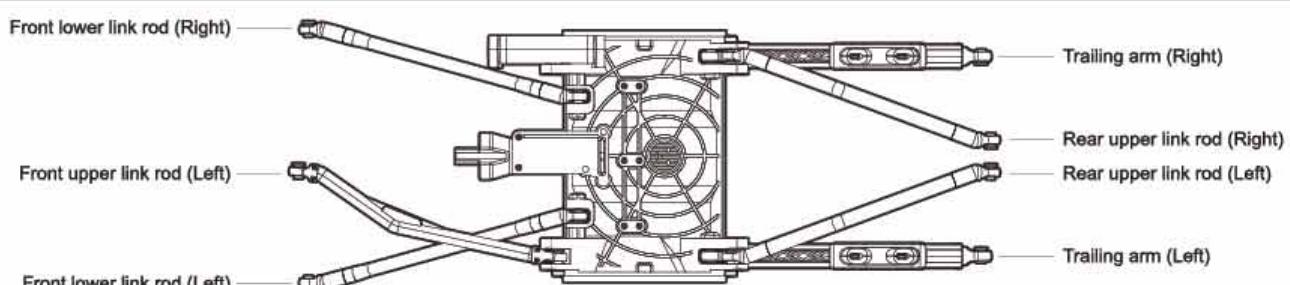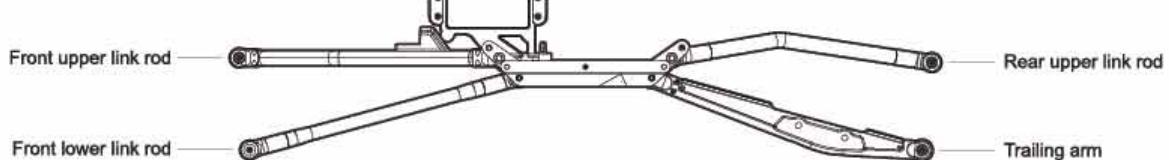SKID PLATE**36****⚠ Skid plate bottom view****37****⚠ Skid plate bottom view****TOP VIEW****SIDE VIEW**

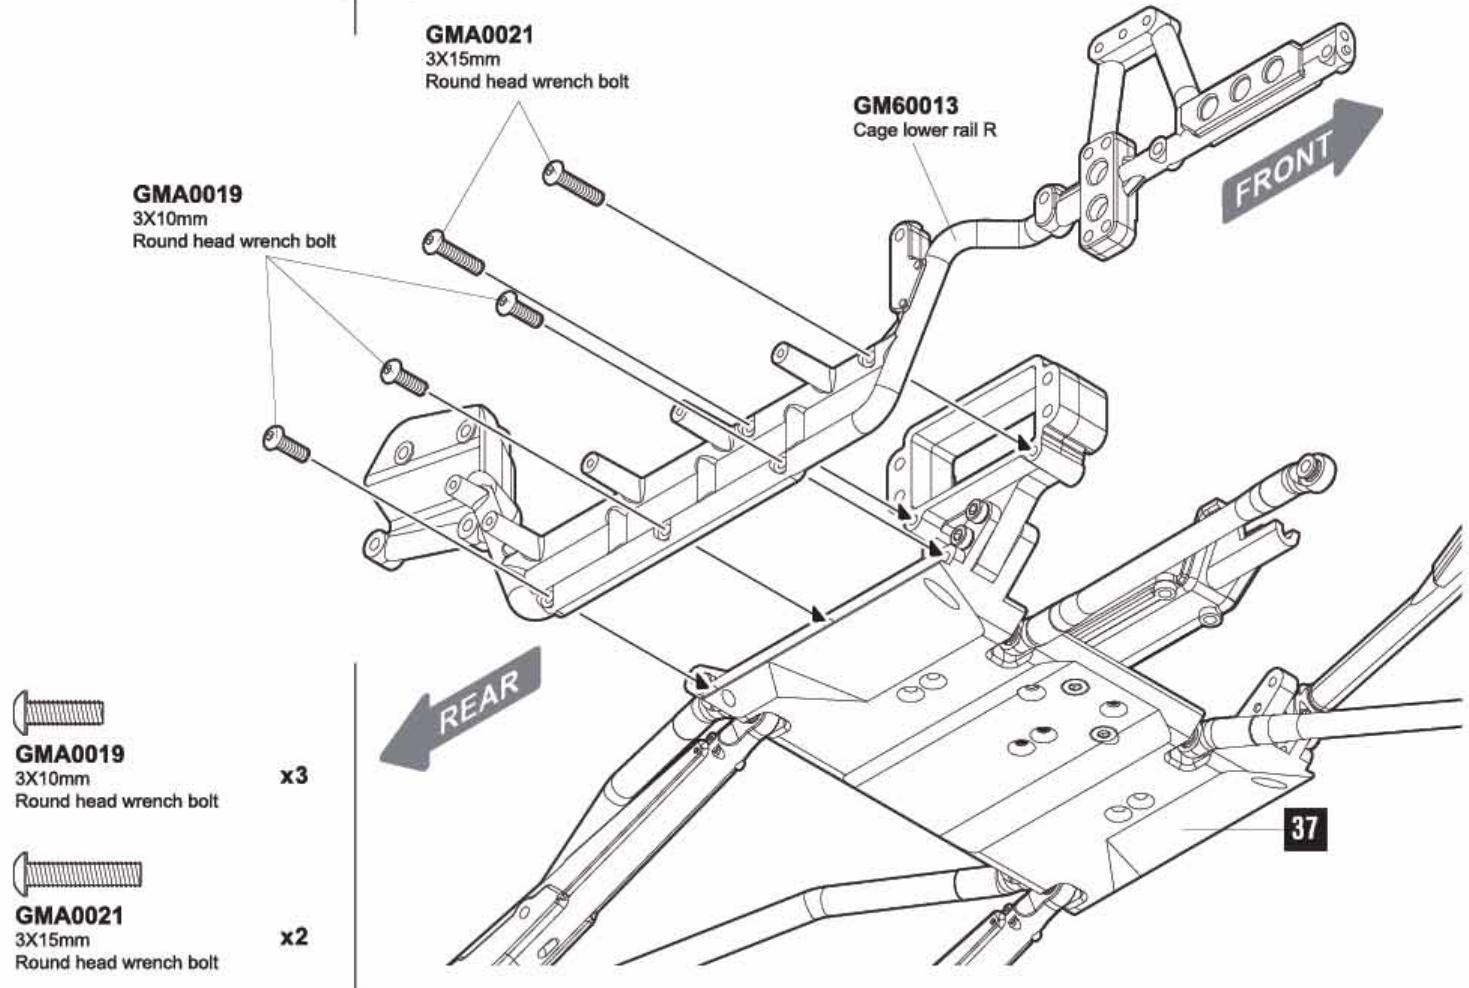

SHIFT SERVO

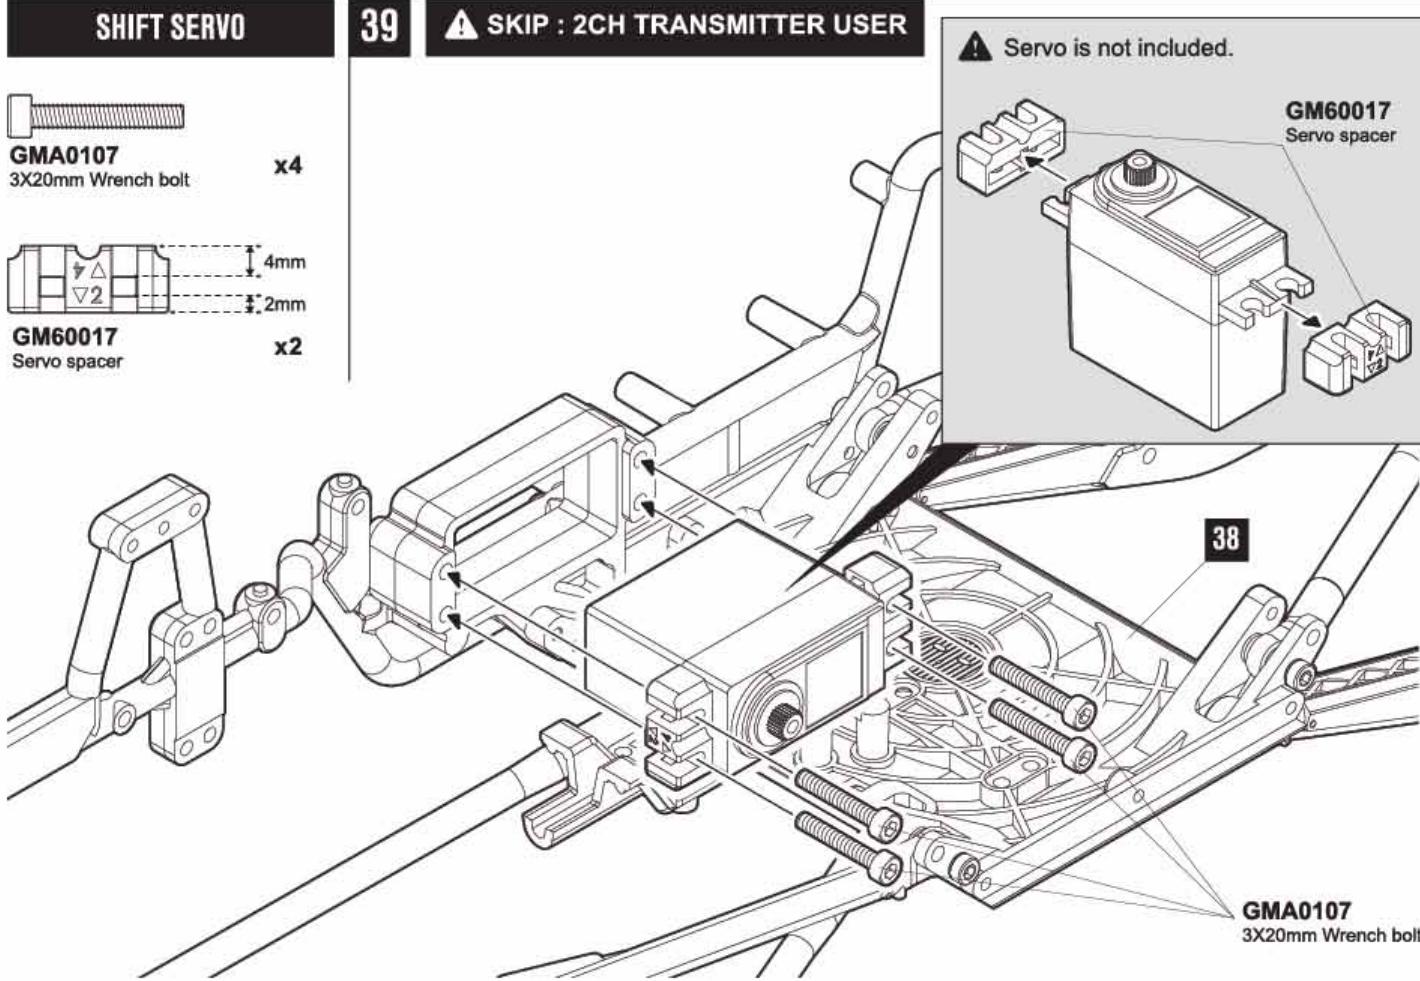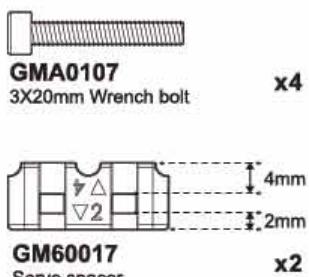
39 | **⚠ SKIP : 2CH TRANSMITTER USER**



GMA0057 x2
3X8mm Flat head wrench bolt



GMA0059 x4
3x12mm Flat head wrench bolt

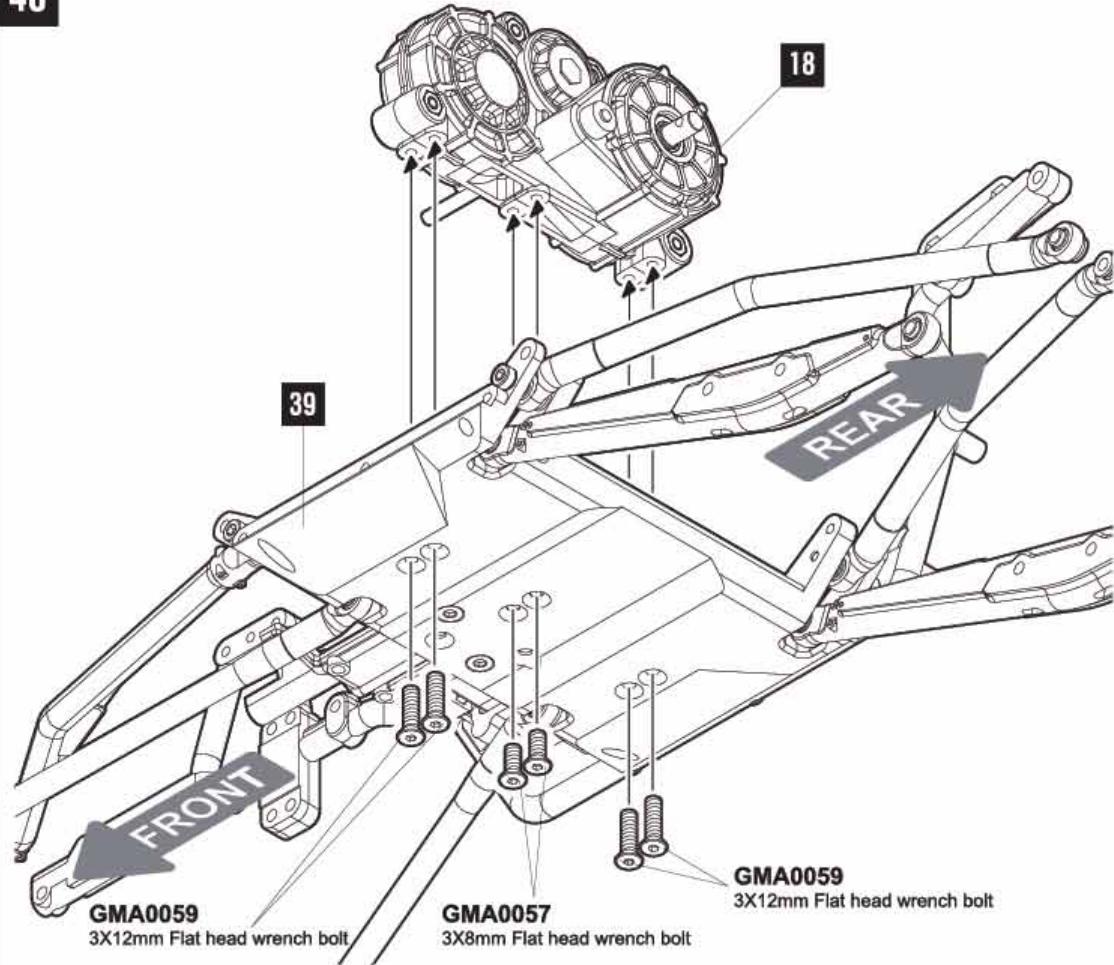

SERVO SAVER



GMA0020
3X12mm
Round head wrench bolt



GMA0021
3X15mm
Round head wrench bolt



GMA0172
3X18mm
Round head wrench bolt



 GMA0158
3mm Washer




GM60023 1 x2




三




GM60034 x1
Servo saver spring 9.8x9.5mm

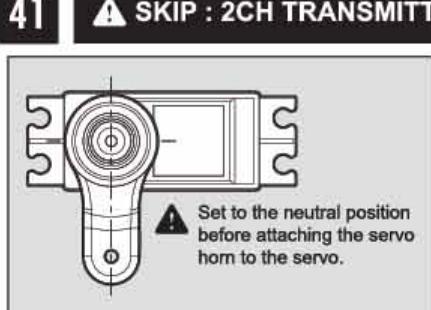



Set to the neutral position before attaching the servo horn to the servo.

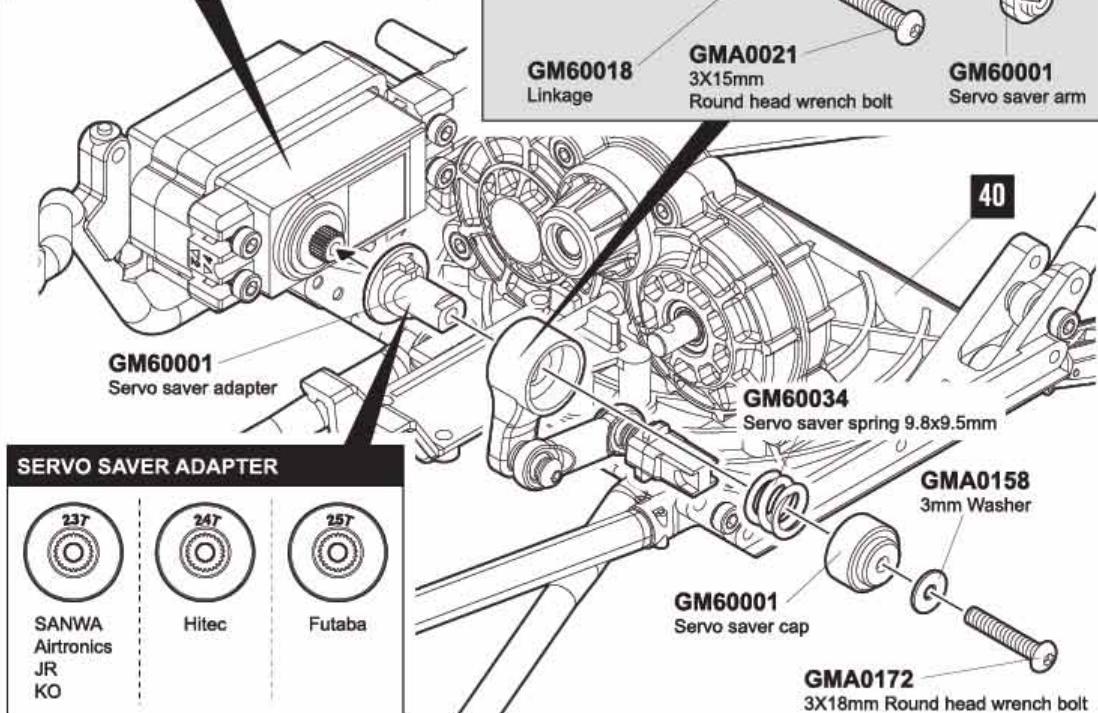

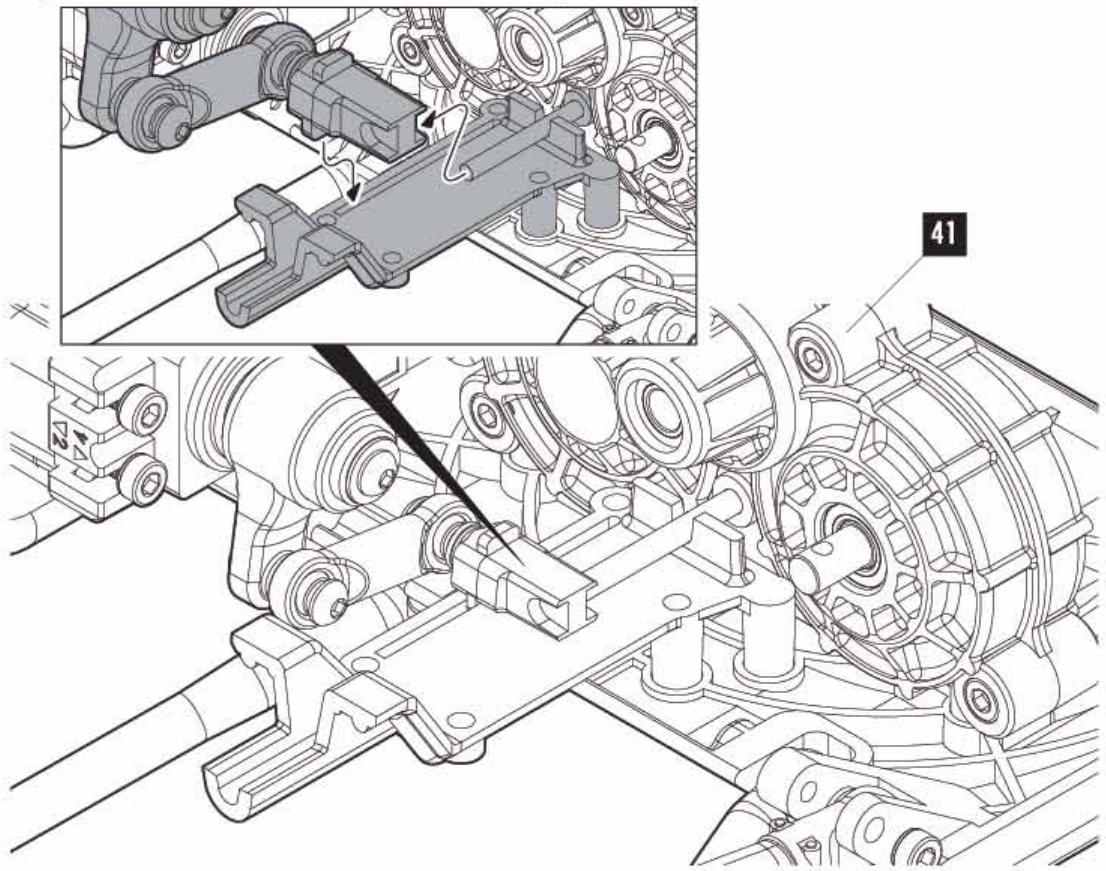


TRANSMISSION HOUSING

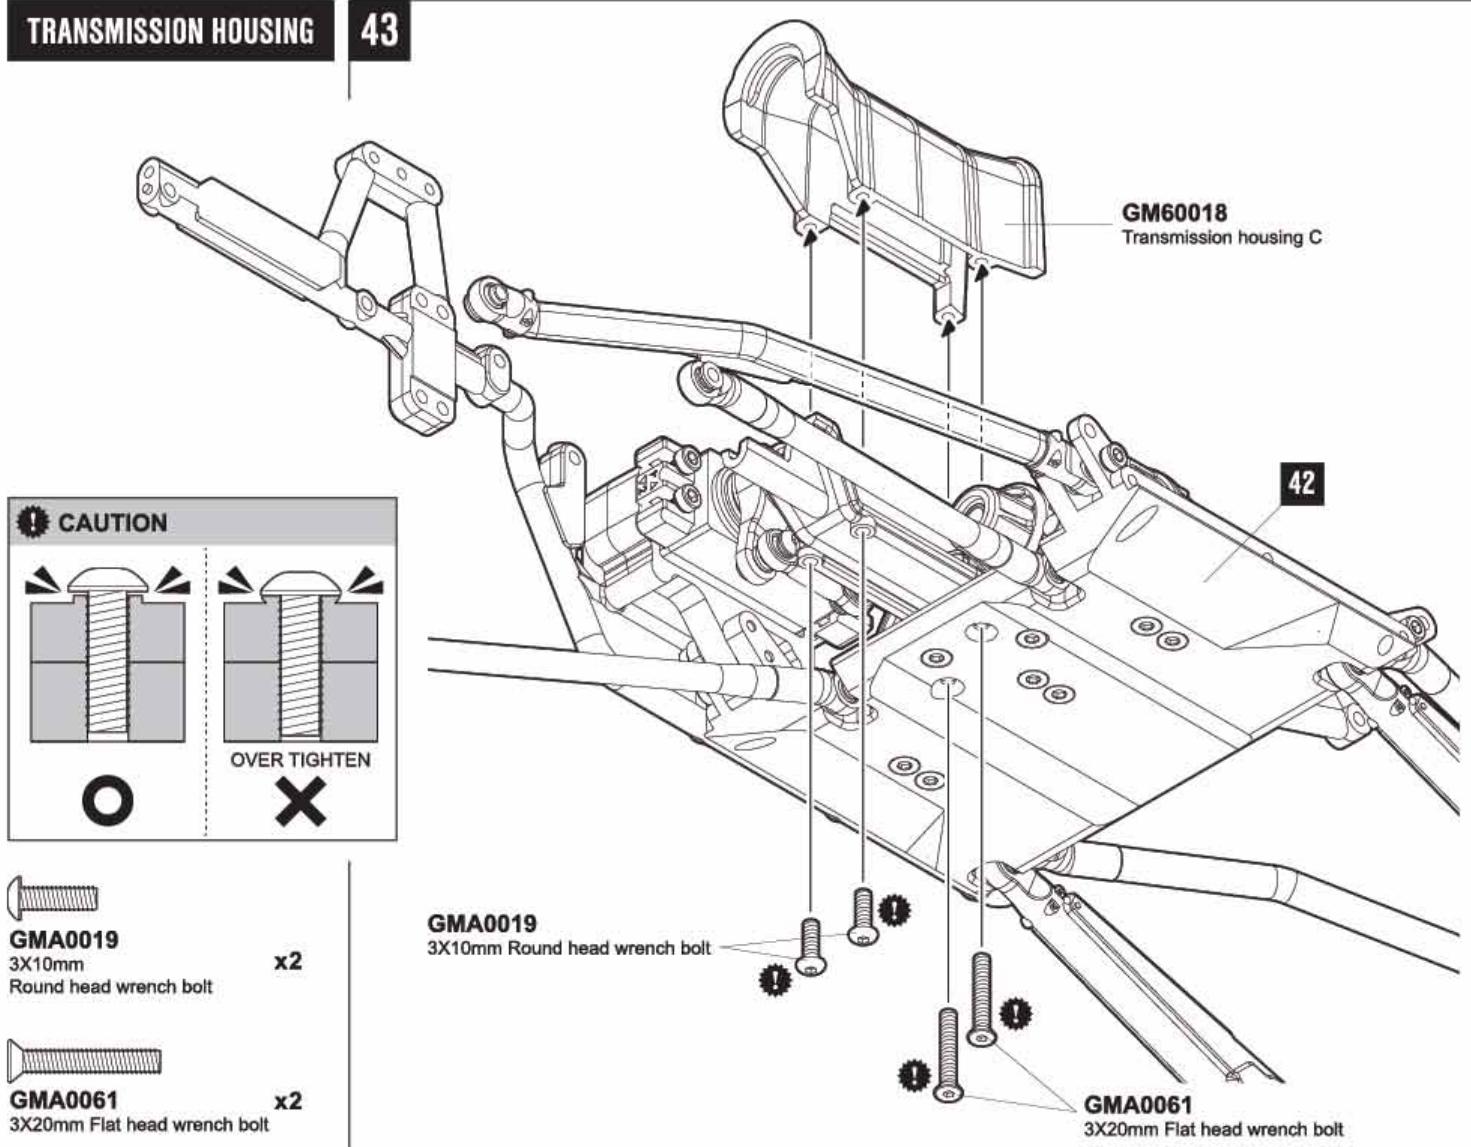

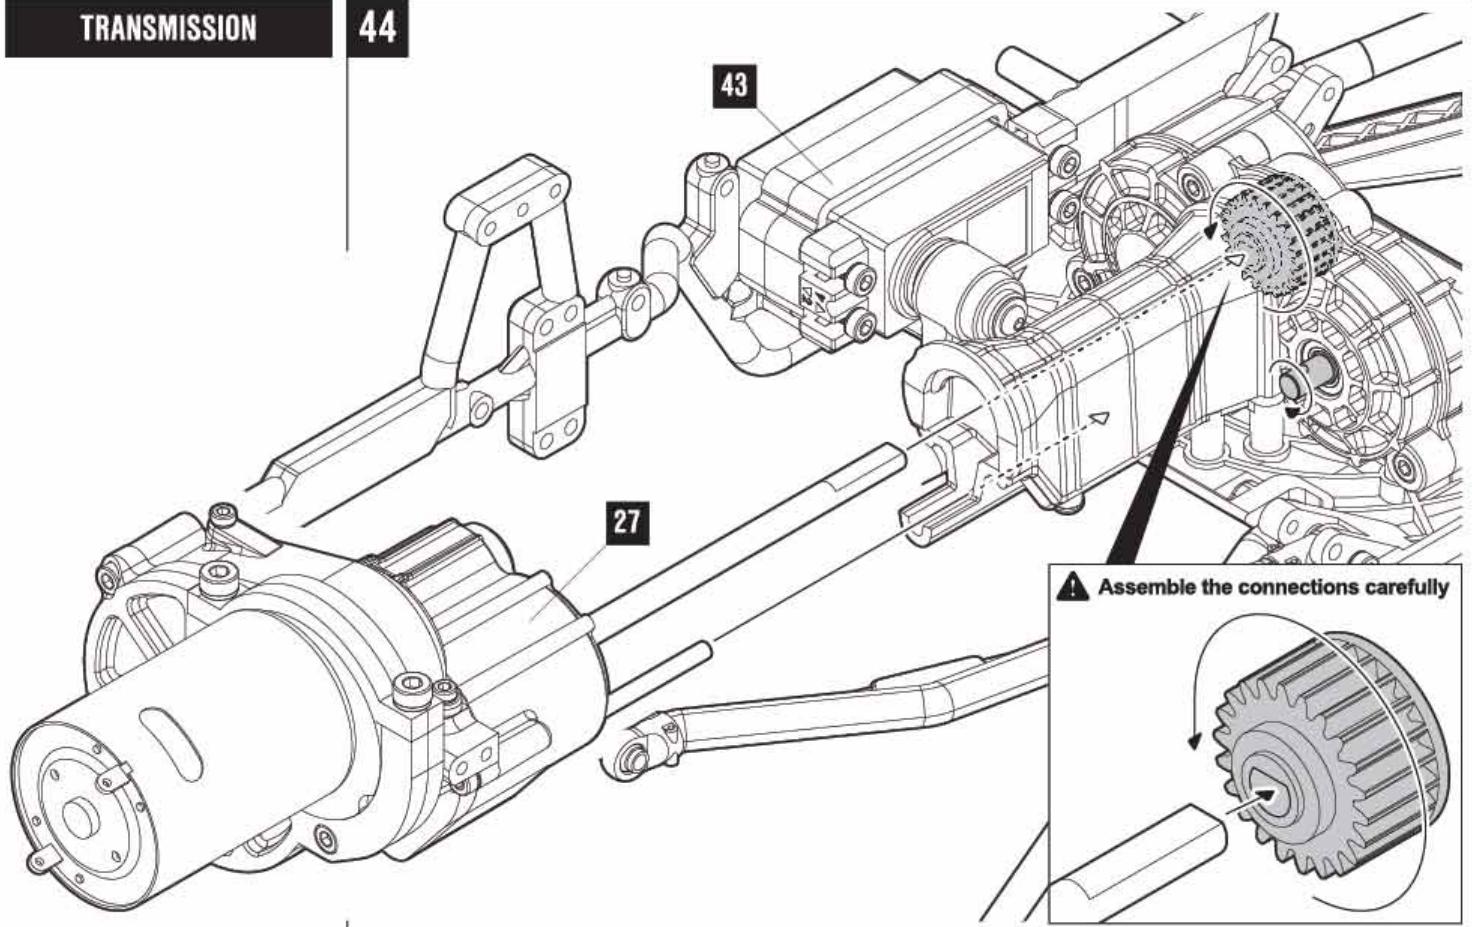


GMA0020
3X12mm
Round head wrench bolt


x4

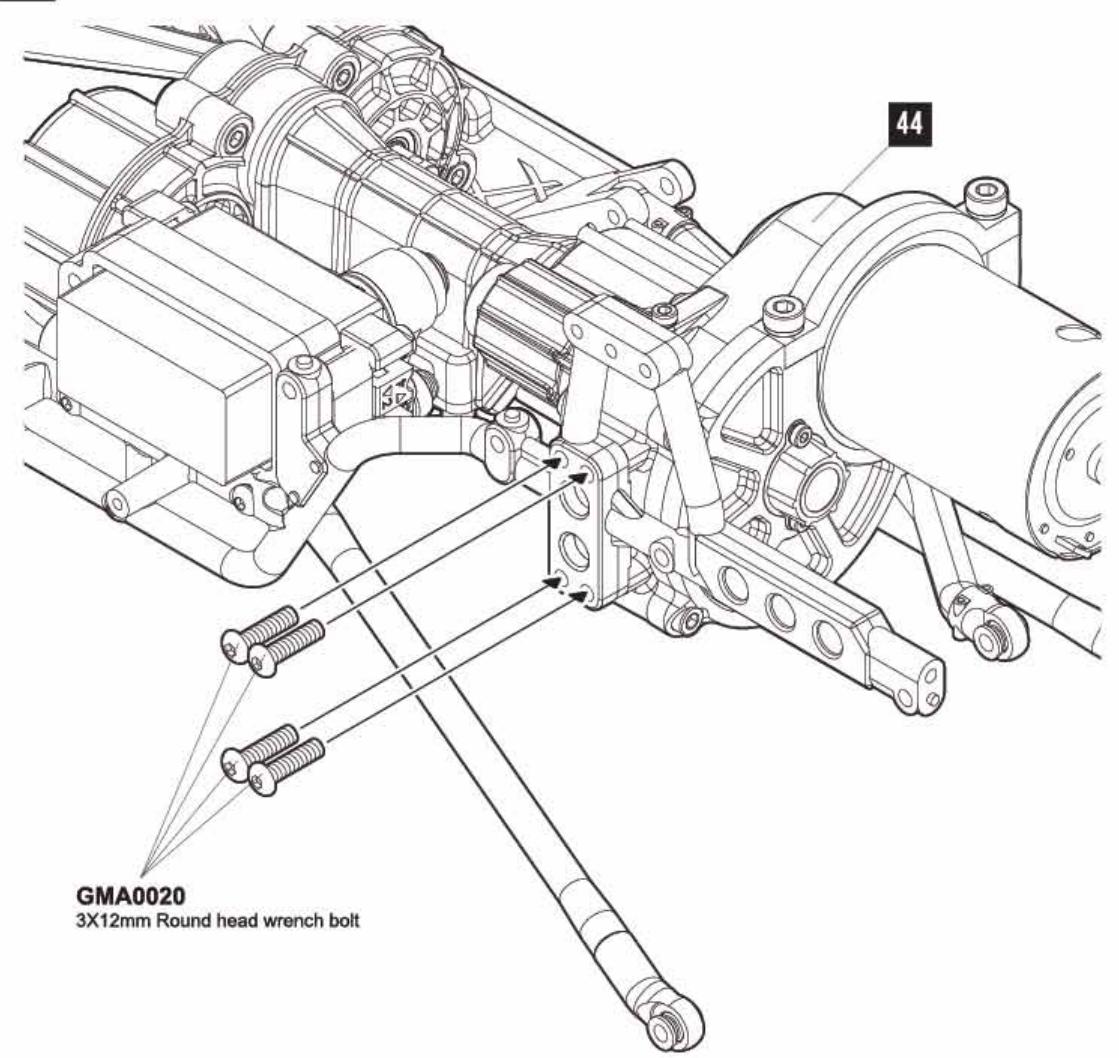


TRANSMISSION SERVO POSITION SETUP

⚠ 3CH TRANSMITTER USER (3position AUX channel is required.)


LOW SPEED SETUP (Neutral position)

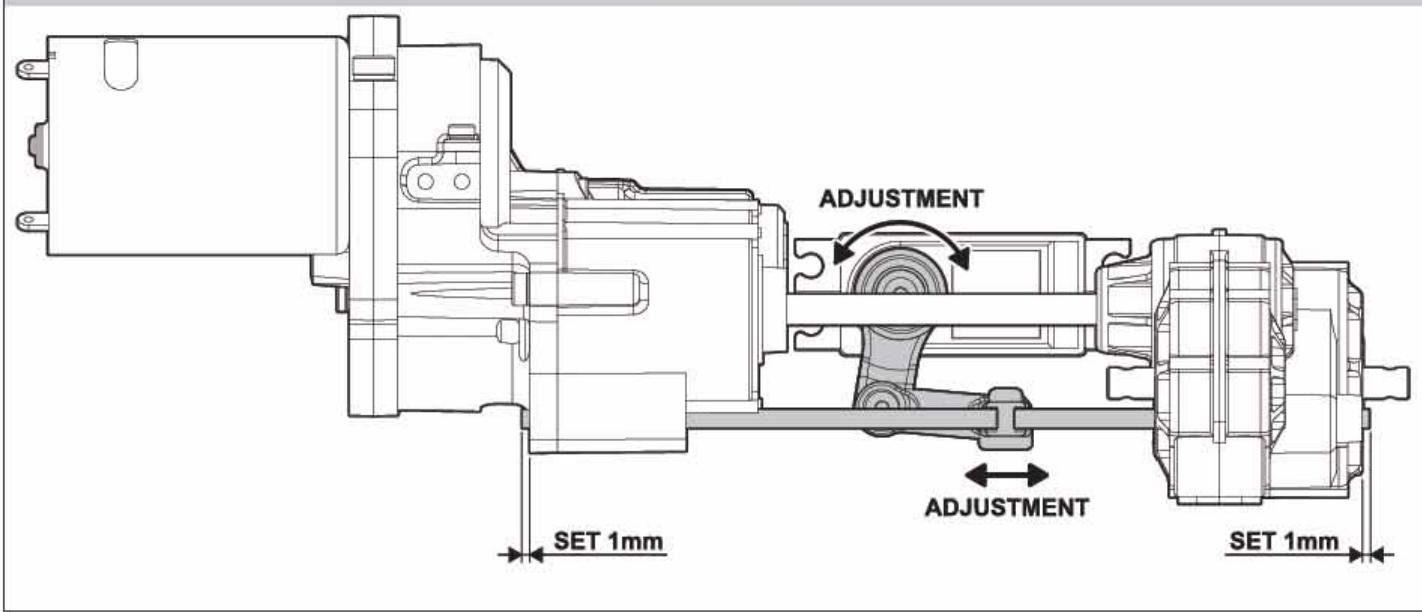

HIGH SPEED SETUP

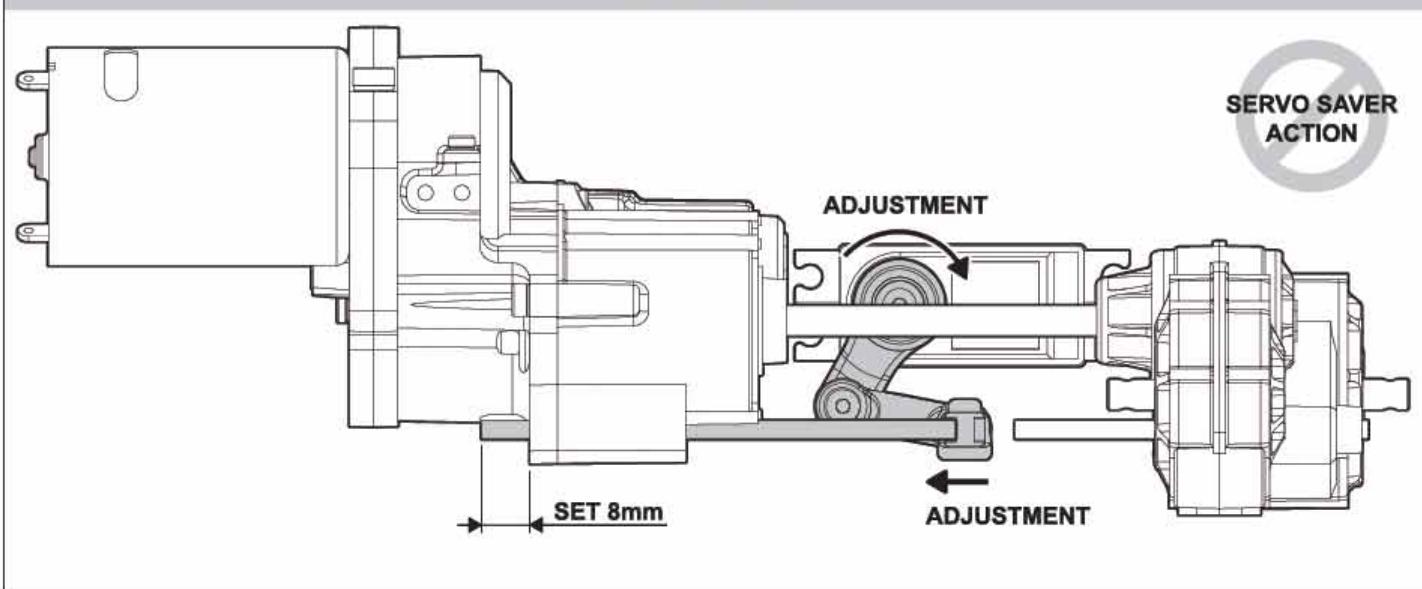

DIG SETUP

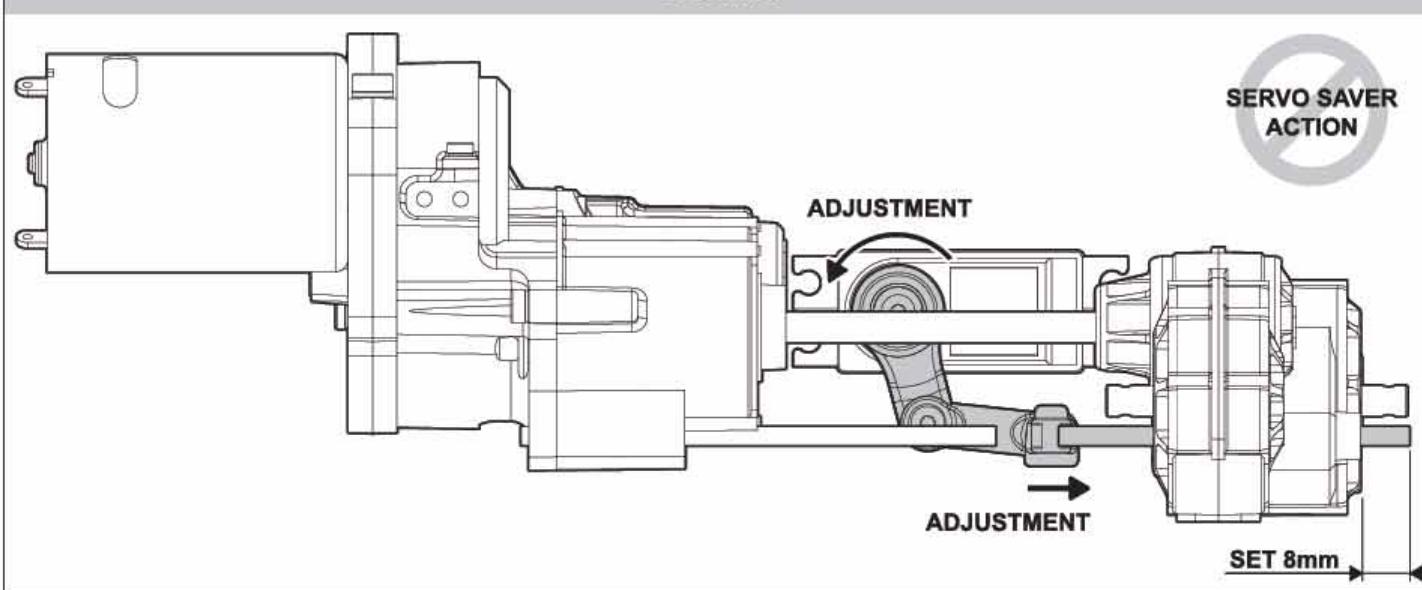

RECEIVER BOX

46




GMA0172

3X18mm


Round head wrench bolt

x2

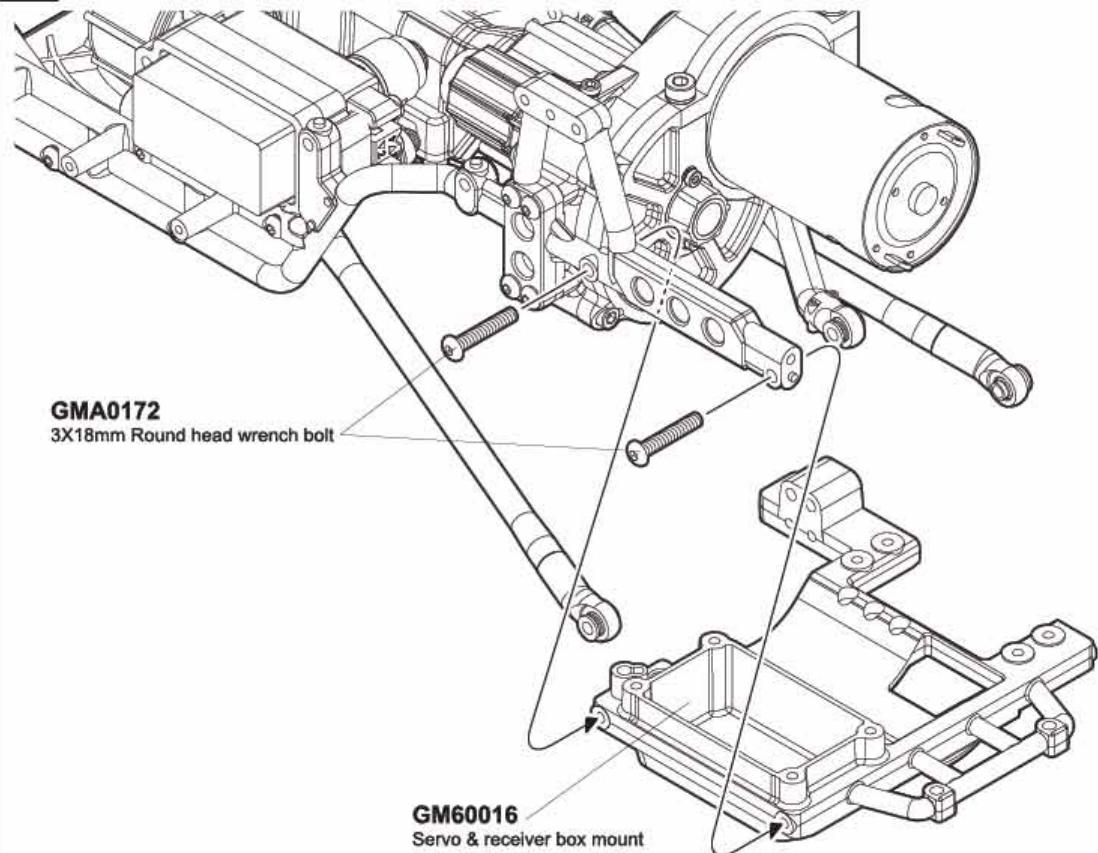

STEERING SERVO

47

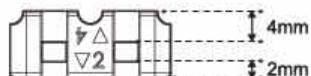

GM60017

Servo spacer


x2





GMA0105

3X15mm Wrench bolt

x4

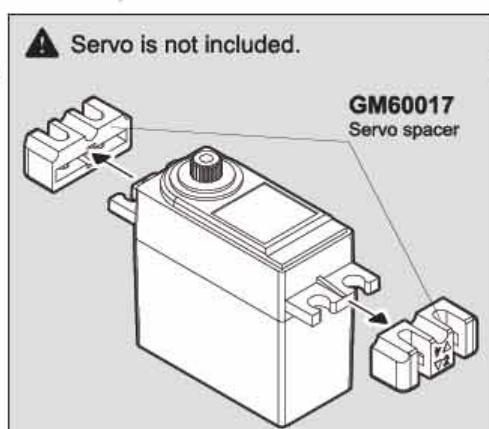

! SERVO HEIGHT SETUP

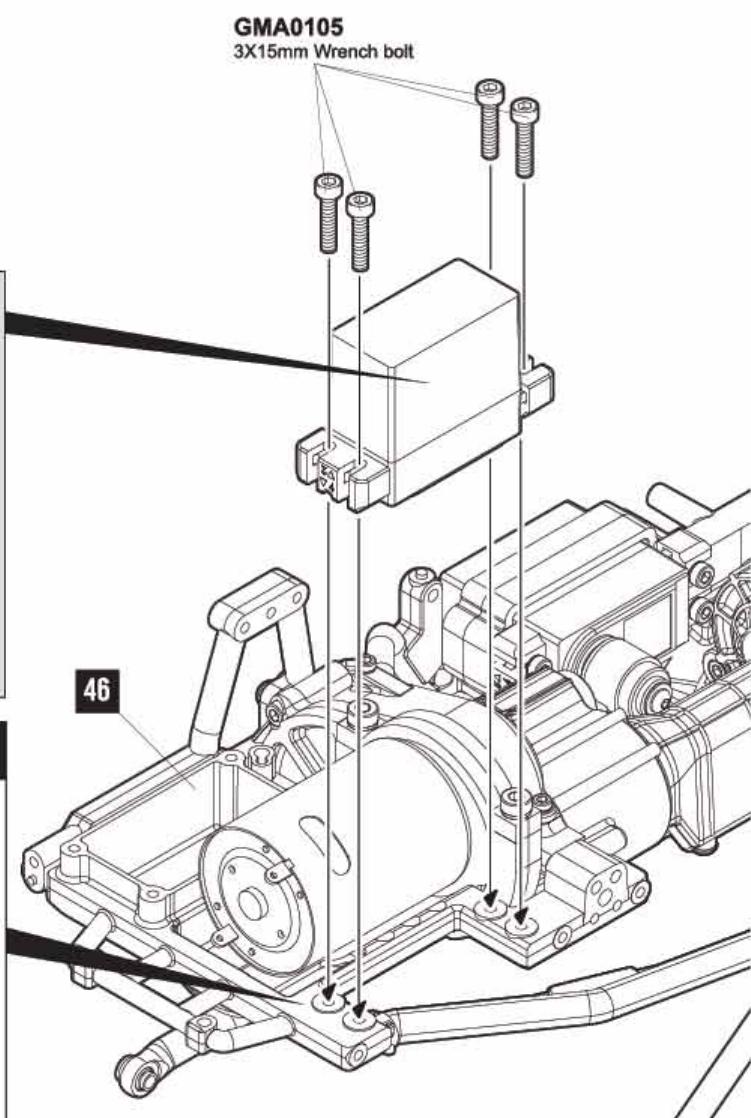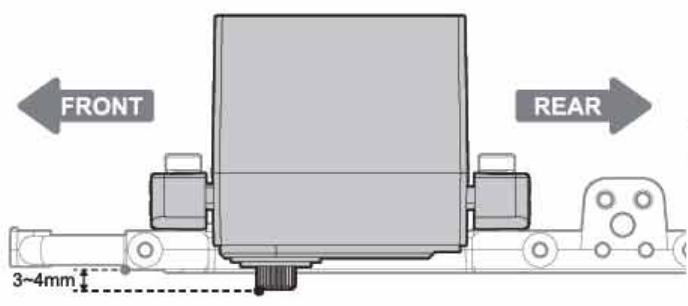


RECEIVER BOX

48

⚠ Receiver, ESC is not included.




GMA0060
3X15mm Flat head wrench bolt **x4**

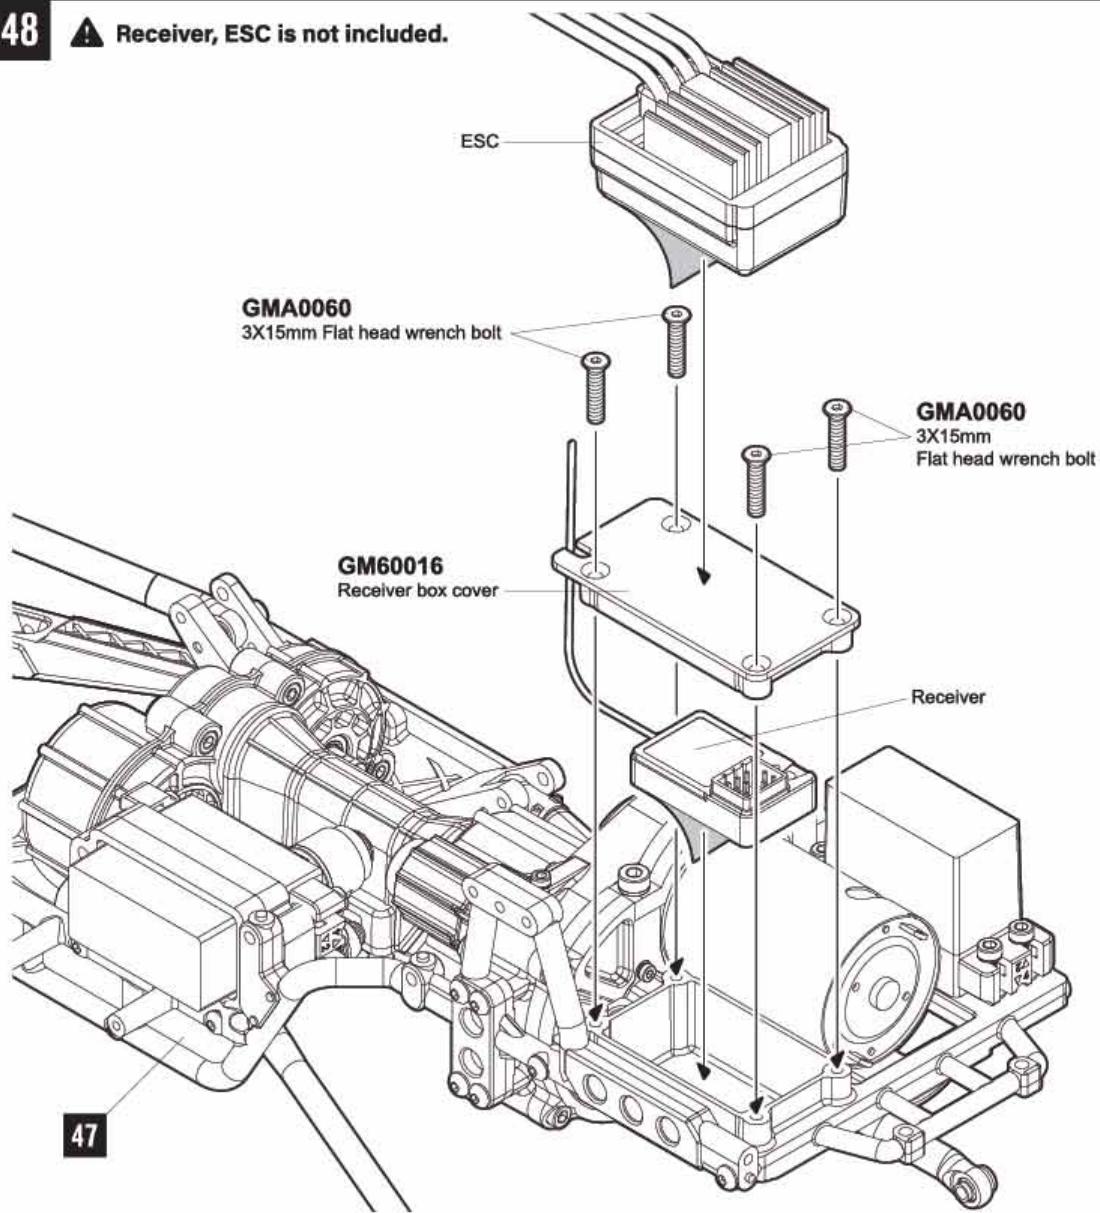

CAGE LOWER RAIL


49

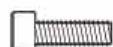

GMA0103
3X10mm Wrench bolt **x2**




GMA0154
M3 Nut **x2**

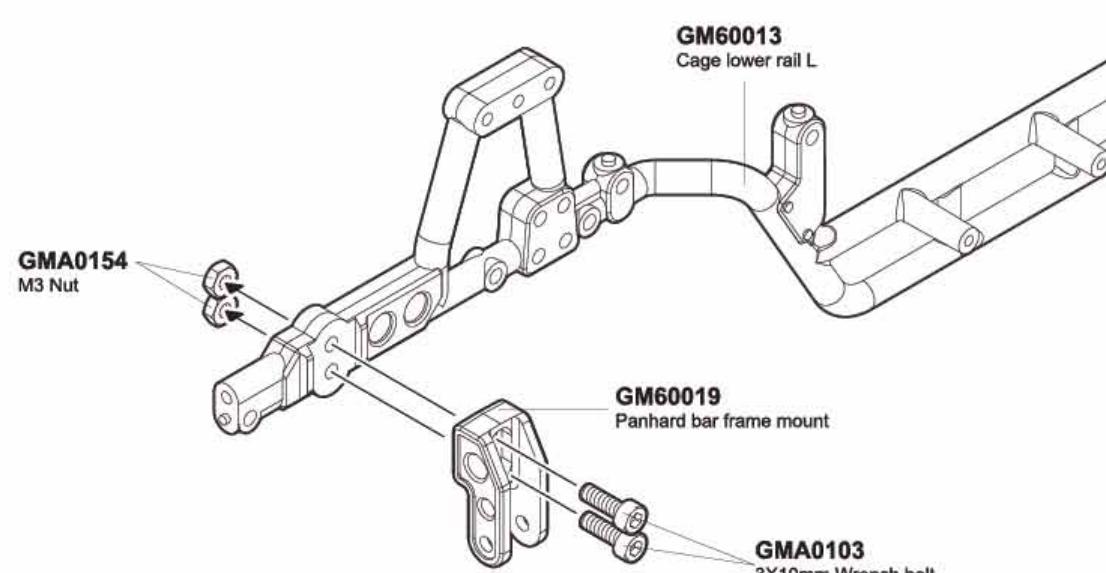

CAGE LOWER RAIL

50

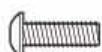 **GMA0019**
3X10mm
Round head wrench bolt

x3

 **GMA0021**
3X15mm
Round head wrench bolt

x2

 **GMA0021**
3X15mm
Round head wrench bolt

 **GM60015**
Rear brace

 **GMA0172**
3X18mm
Round head wrench bolt

x3

 GMA022
3X20mm
Round head wrench bolt

x2

 GMA023
3X25mm
Round head wrench bolt

x2

 **GMA0172**
3X18mm
Round head wrench bolt

x3

 GMA022
3X20mm
Round head wrench bolt

x2

 GMA023
3X25mm
Round head wrench bolt

x2

 **GMA017**
3X6mm
Round head wrench bolt

x2


 **GMA0158**
3mm Washer

x2

 **GM60055**
S85 O-ring

x1



51

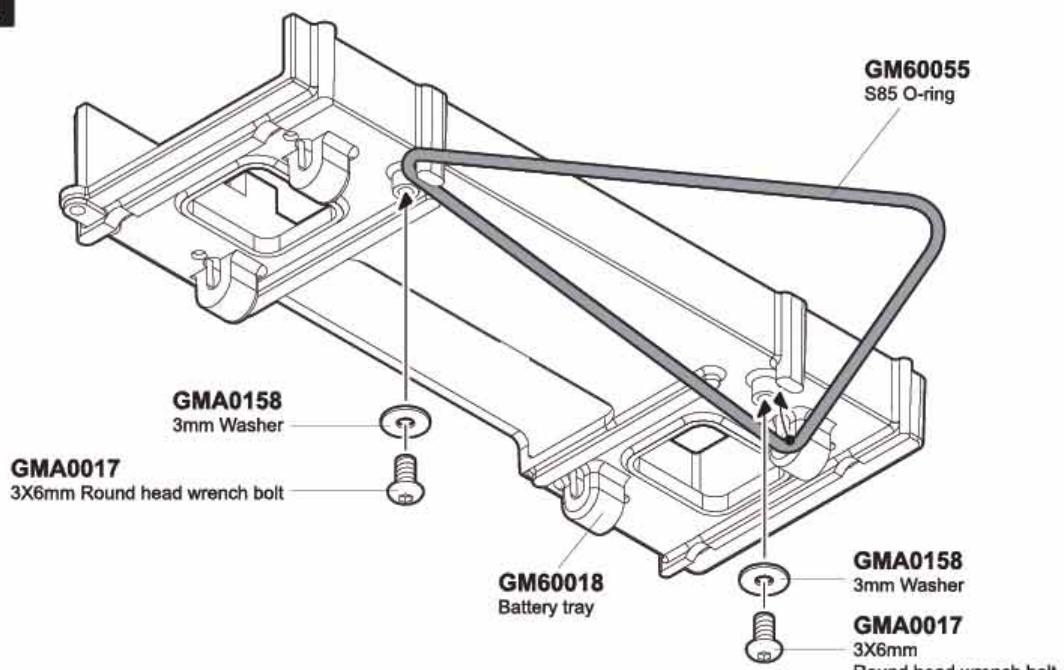

BATTERY TRAY**52**


GMA0156
M3 Nylon lock nut.

x4

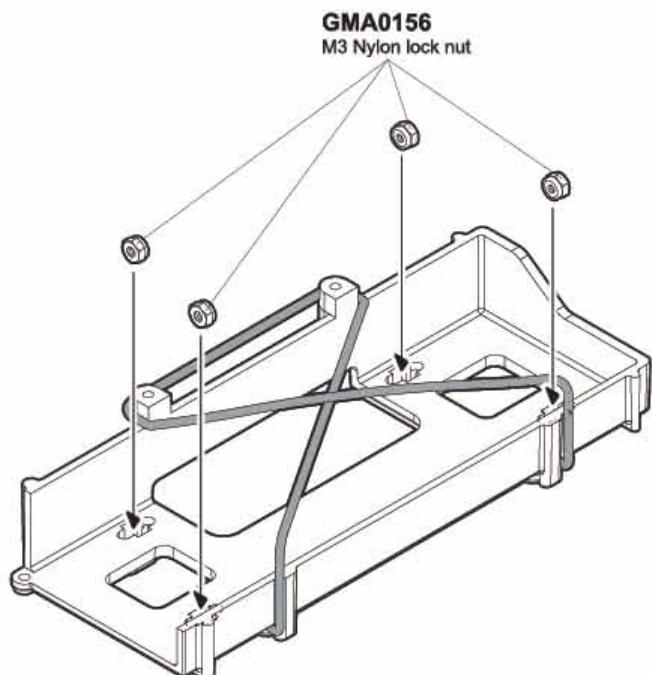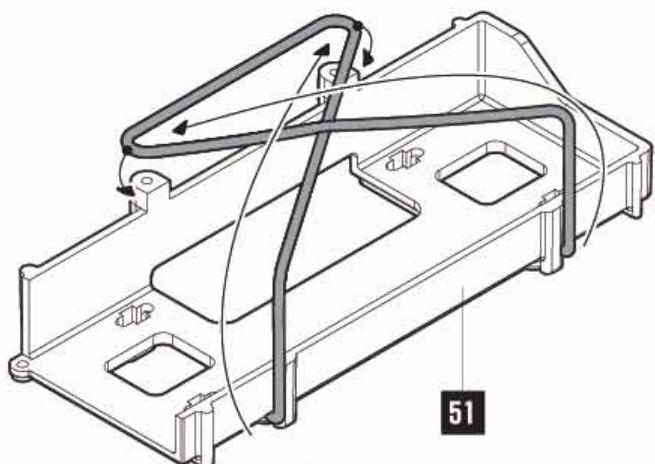**53**


GMA0105
3X15mm Wrench bolt

x4

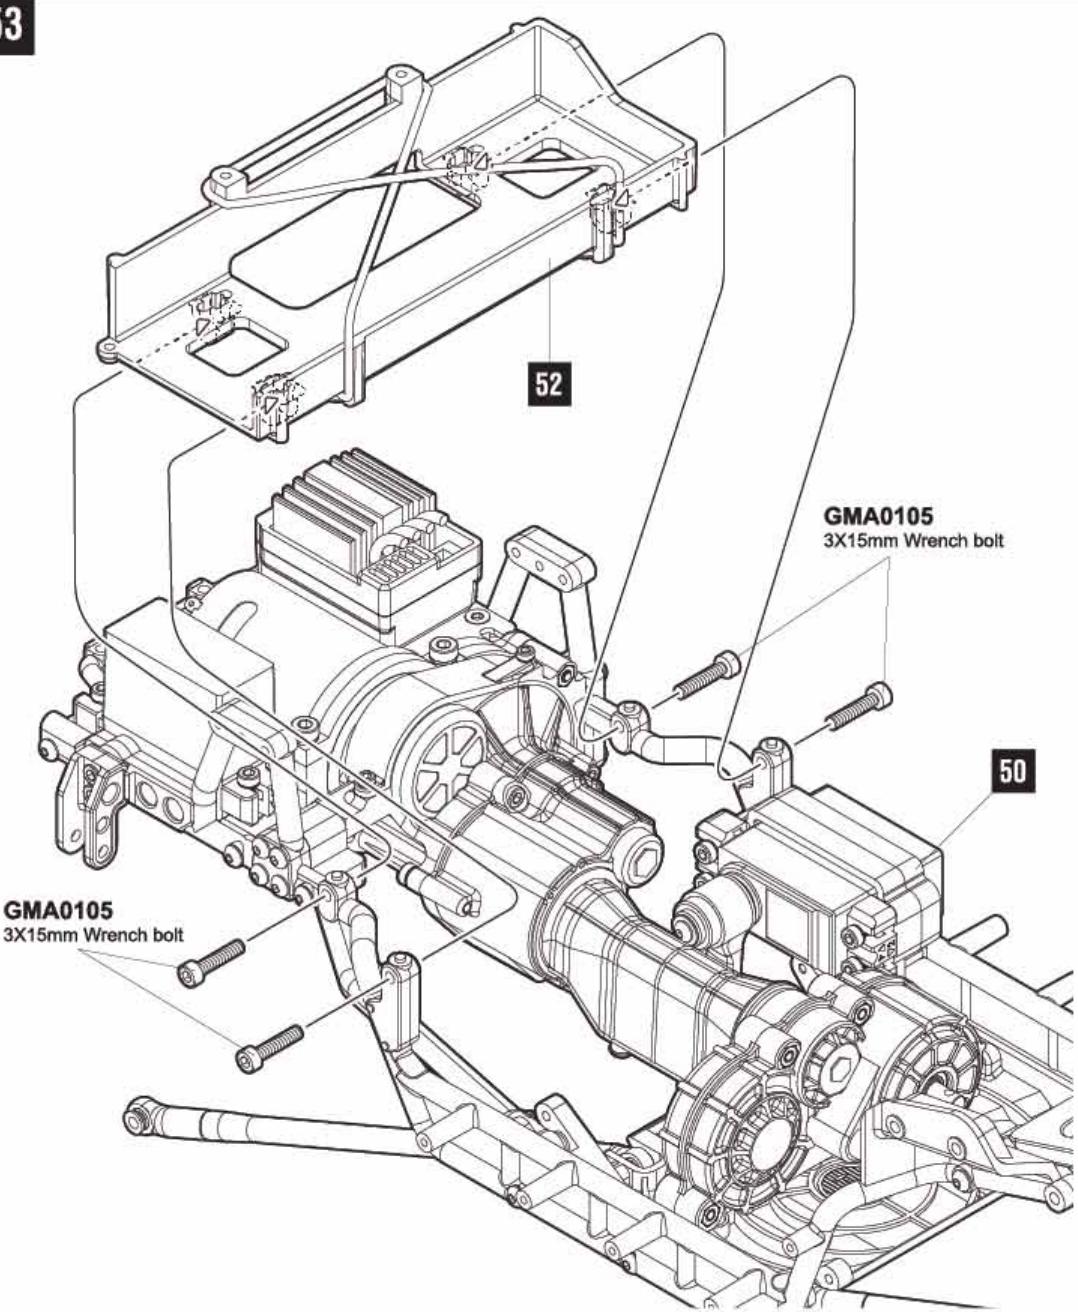

FRONT CAGE & BUMPER

54

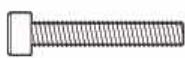

GMA0107
3X20mm Wrench bolt

x2



GMA0014
2.5X12mm
Round head wrench bolt

x2




GMA0172
3X18mm
Round head wrench bolt

x2

GMA0014
2.5X12mm
Round head wrench bolt

x2

GMA0172
3X18mm
Round head wrench bolt

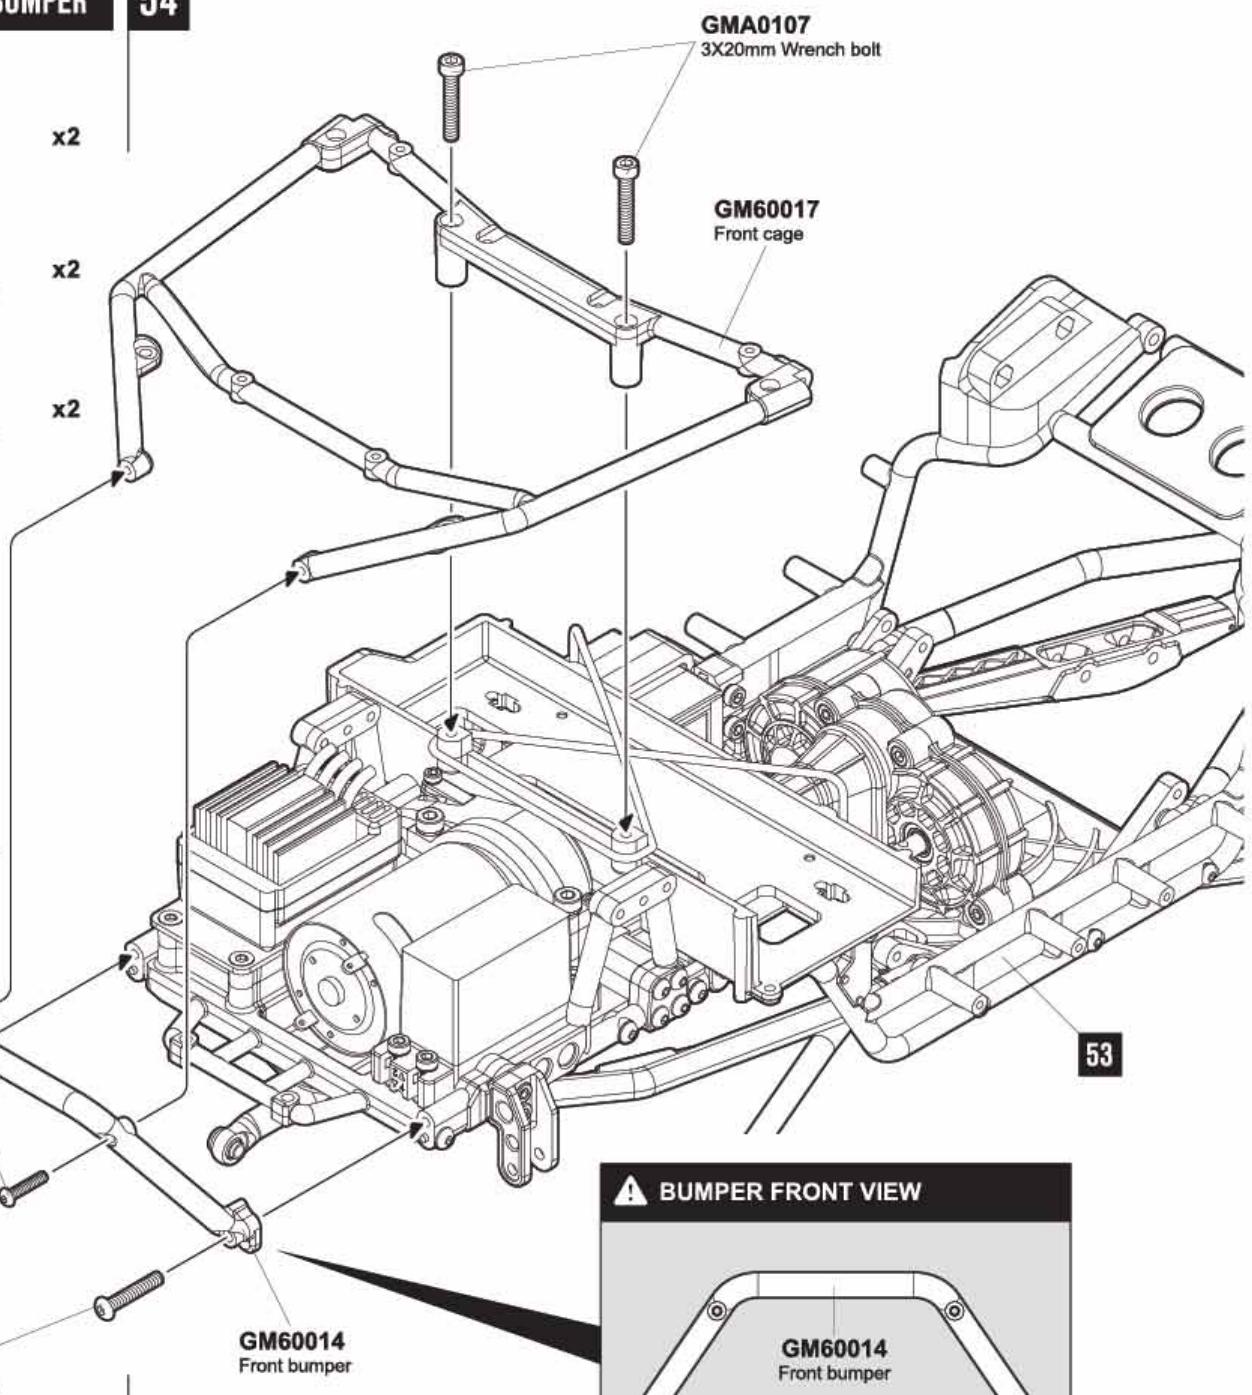

UNIVERSAL SHAFT


55

MAKE X 4



GMA0160
2mm E-ring

x4

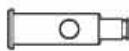


GM60046
Universal drive coupler

x4





GM60046
Universal joint

x4

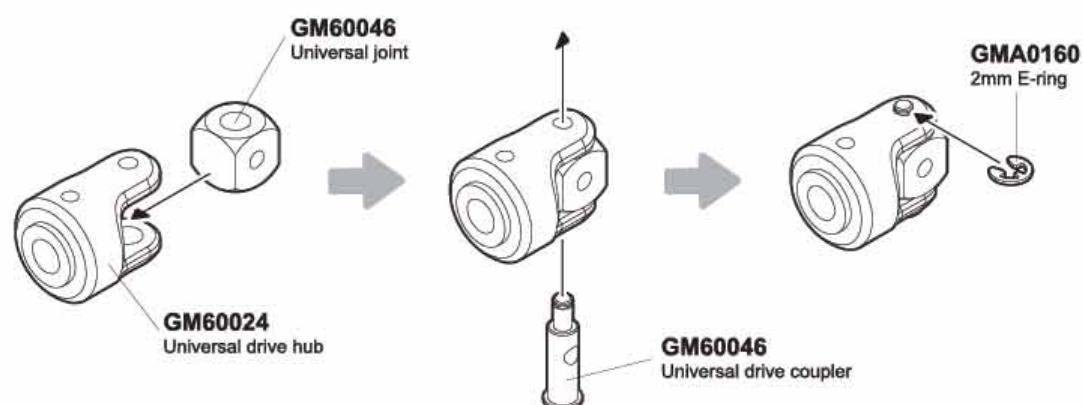


UNIVERSAL SHAFT**56**


⚠ MAKE X 2

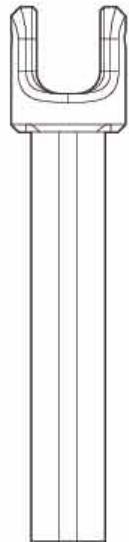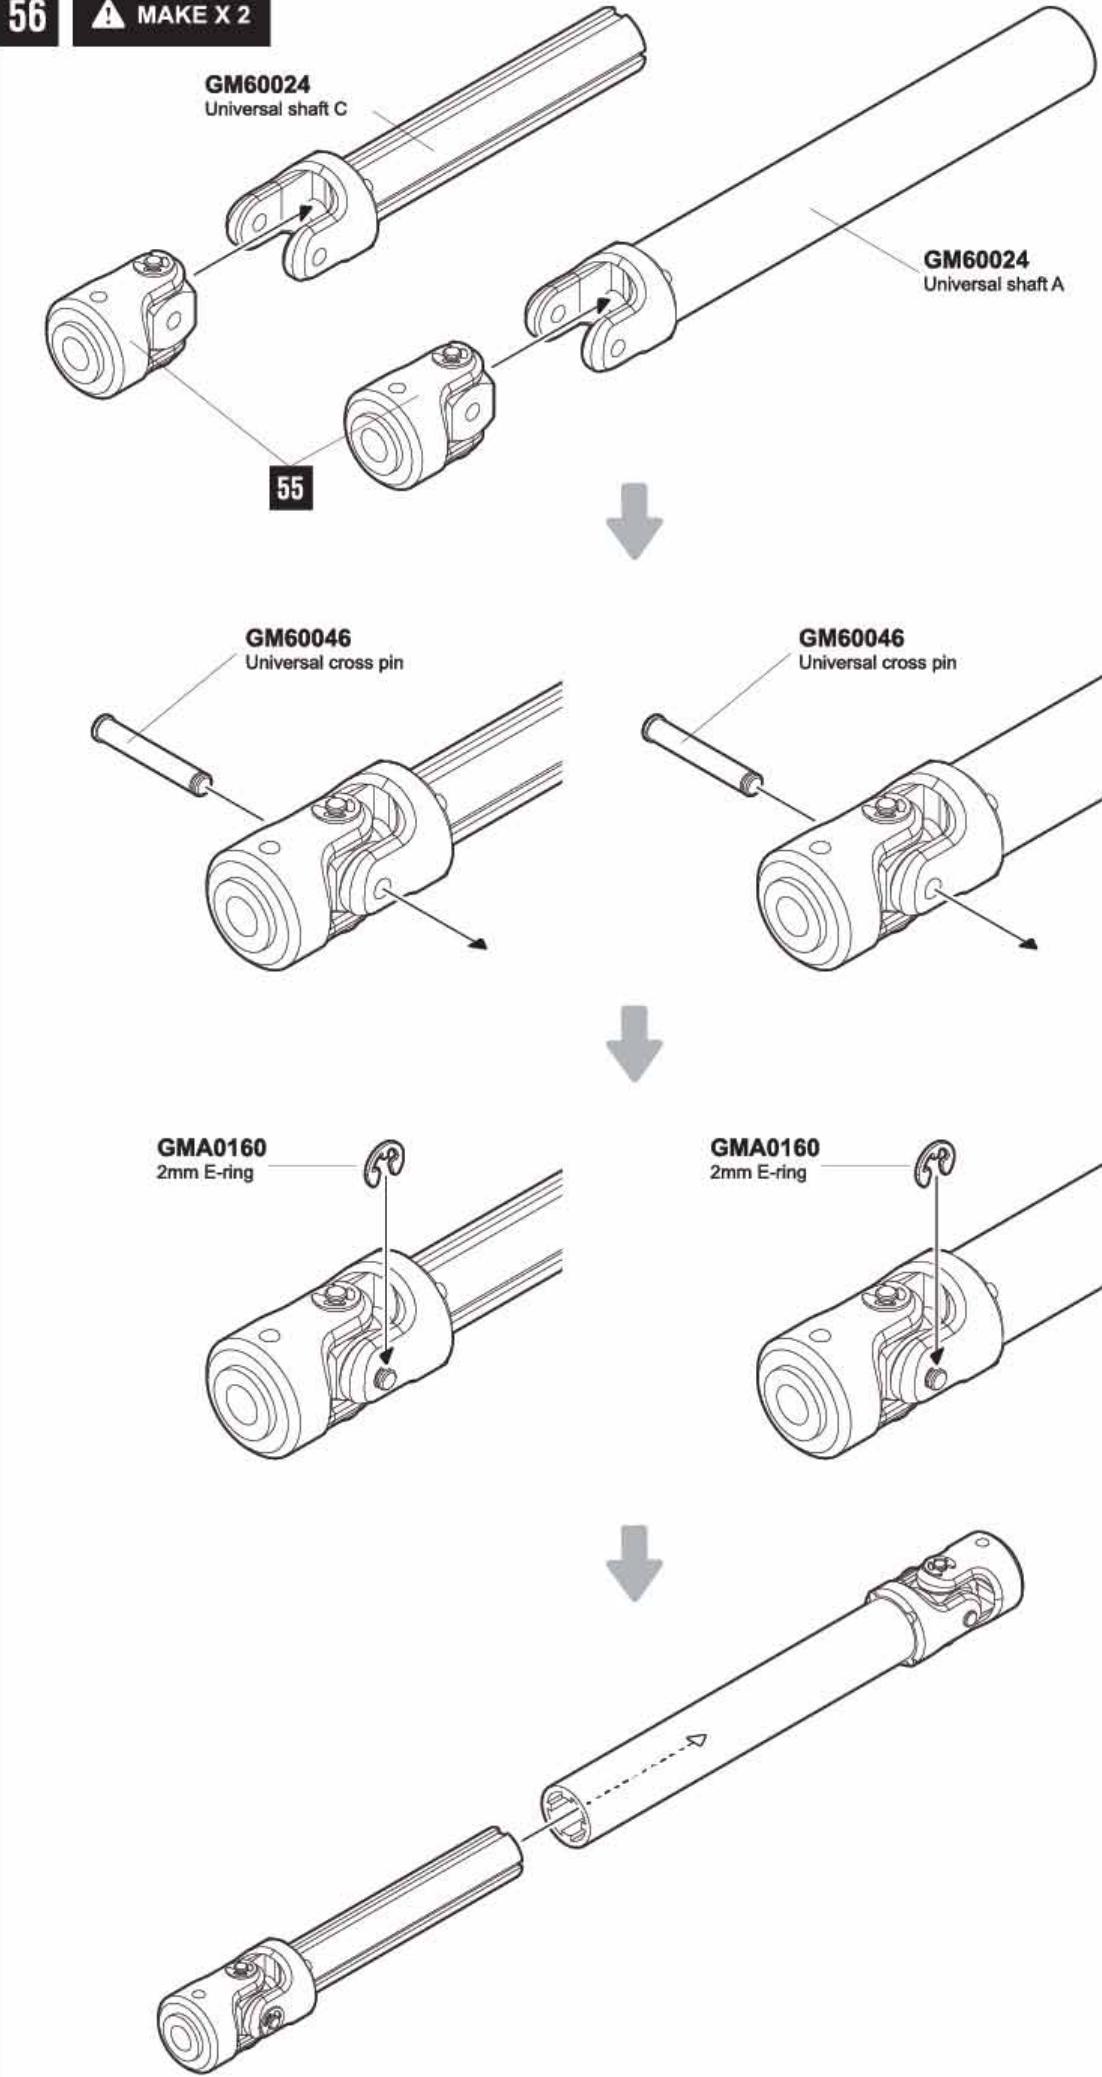**GM60046**
Universal cross pin**x4****GMA0160**
2mm E-ring**x4****GM60024**
Universal shaft C**x2****GM60024**
Universal shaft A**x2**

FRONT UNIVERSAL SHAFT


57

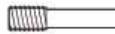
 GM51306
3X15mm screw pin

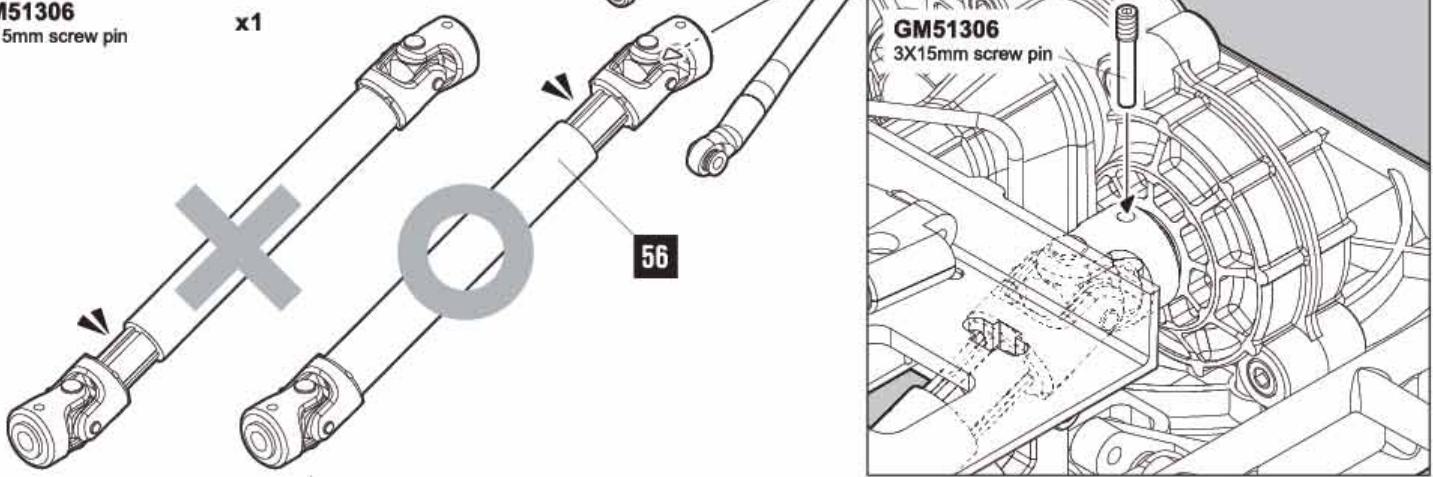

REAR UNIVERSAL SHAFT


58

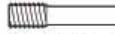 GM51306
3X15mm screw pin

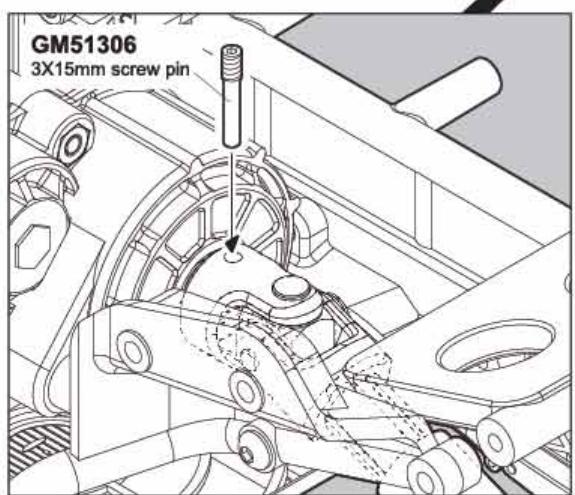


FRONT AXLE

59

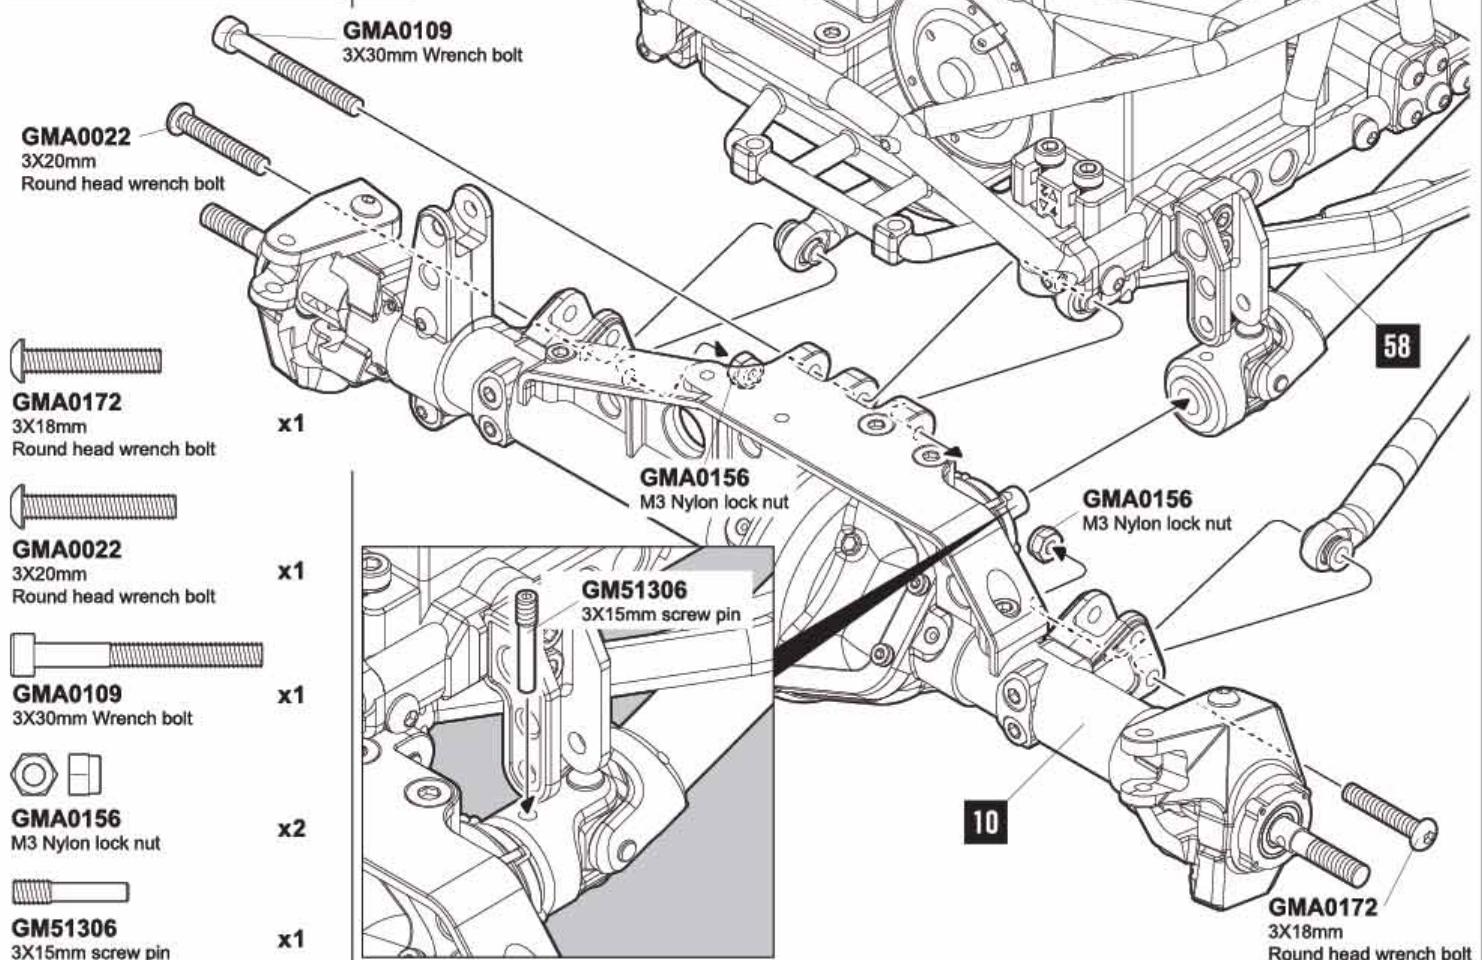

REAR AXLE

60

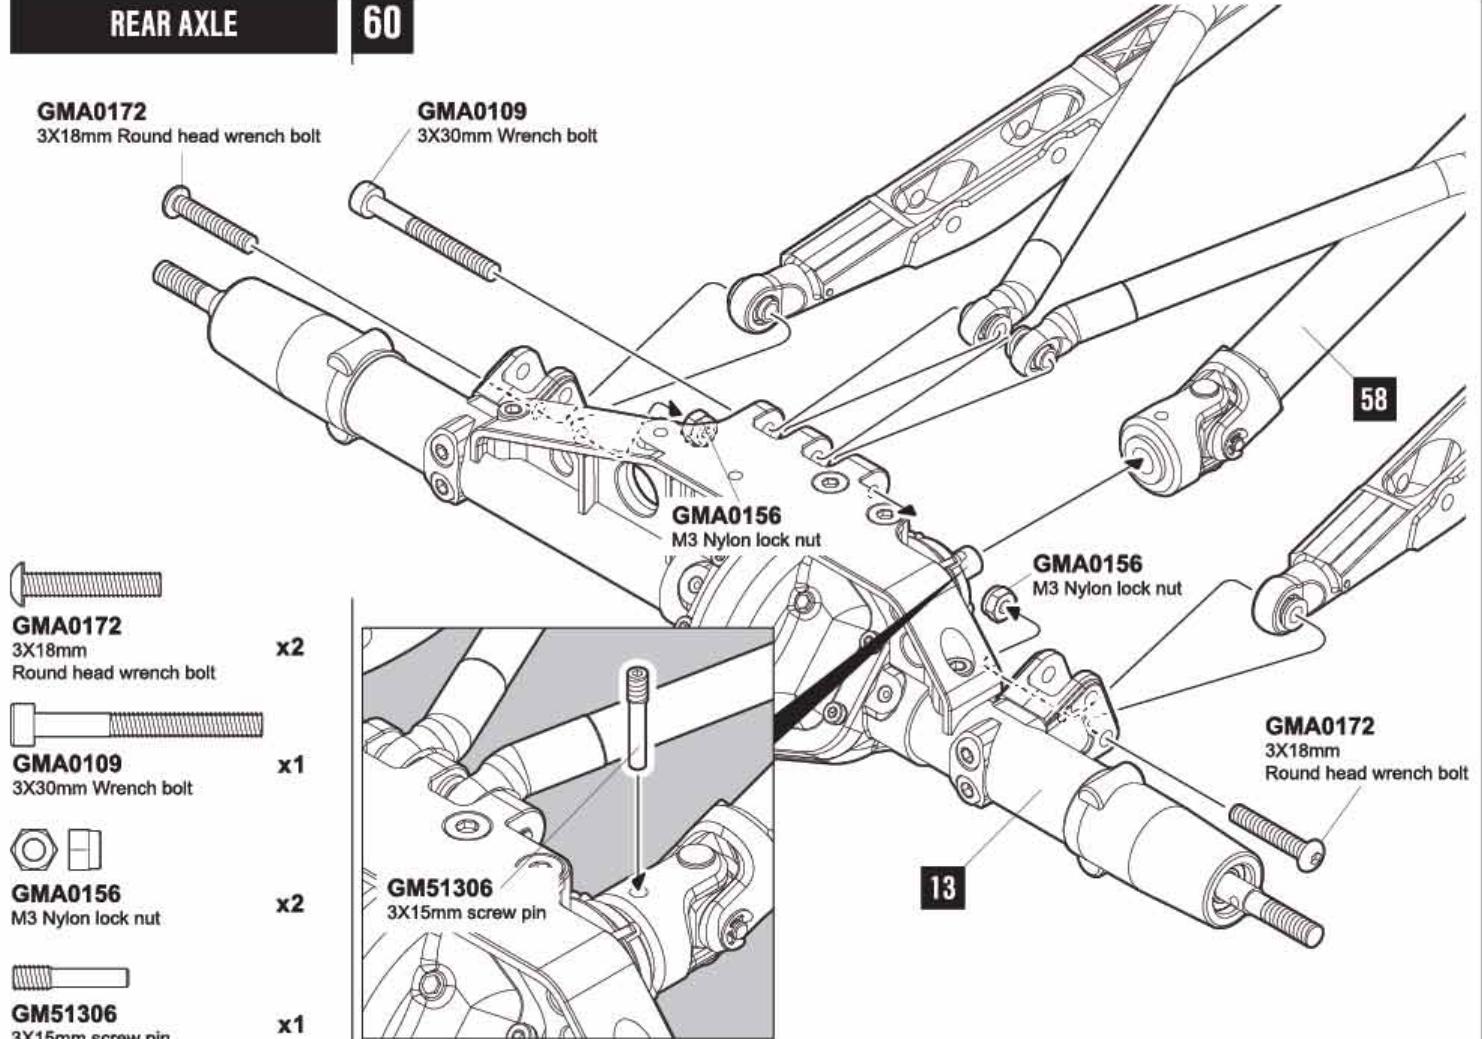


SHOCK ABSORBER

61  **MAKE X 4**

 GMA0161 2.5mm E-ring	x8
 GM0020020 Shock delrin piston	x4
 GM0020007 XD 103mm shock shaft	x4

GMA0161
2.5mm E-ring

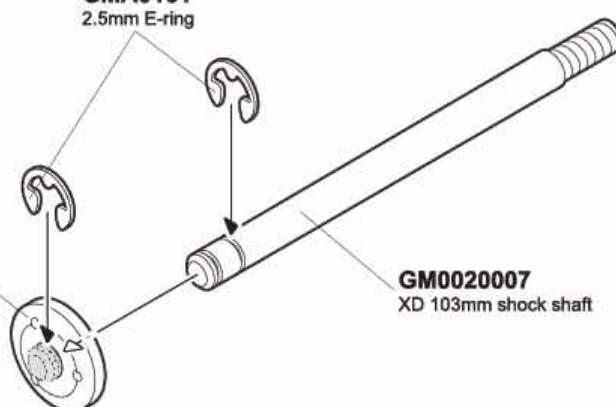

62  **MAKE X 4**

 GM0020008 Shock cartridge cap	x4
 GM0020008 Spacer	x4
 GMA0169 P3 O-ring	x8
 GM0020008 Shock cartridge C-clip	x4
 GMA0171 S9 O-ring	x4


GM0020008
Shock cartridge cap

GMA0169
P3 O-ring

GM0020008
Spacer


GMA0169
P3 O-ring

GM0020008
Shock cartridge

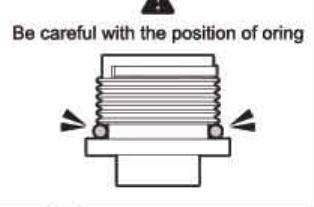

GMA0171
S9 O-ring

GM0020008
Shock cartridge C-clip

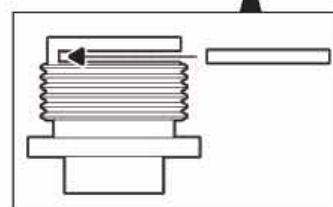

61

63  **MAKE X 4**

 GM0020017 Aeration screw	x4
 GMA0168 3x1 O-ring	x4
 GMA0171 S9 O-ring	x4

GM0020008
Shock adjustment nut

GM0020014
XD 103mm Shock body


GMA0168
3x1 O-ring

GM0020016
Aeration shock cap

GM0020017
Aeration screw


GMA0171
S9 O-ring

Please be careful with the position of oring.

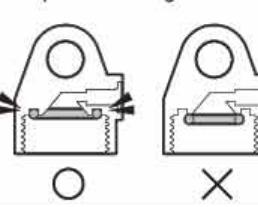


LOW PRESSURE SETUP

64-A

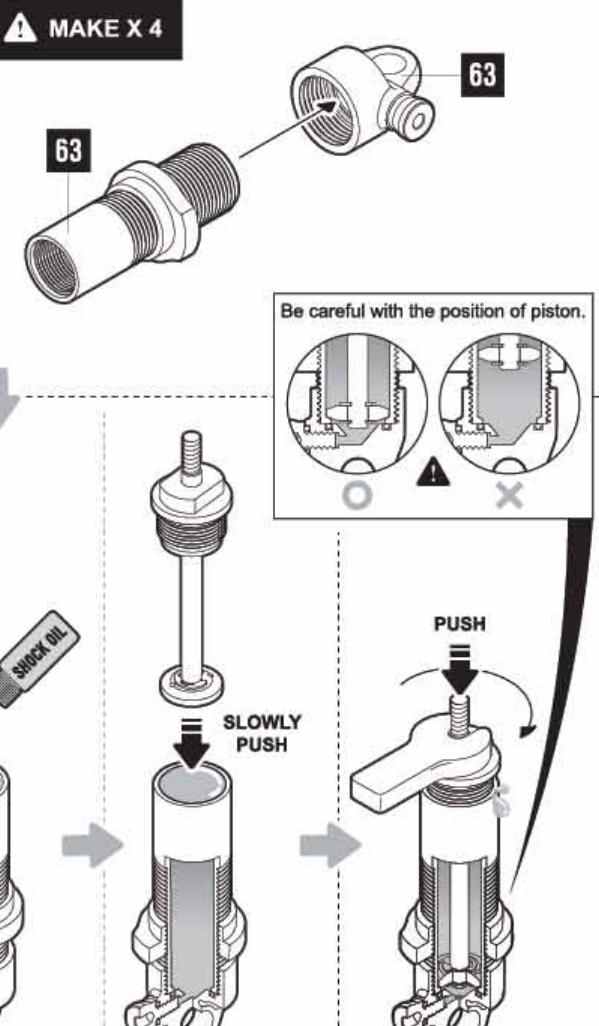


HIGH PRESSURE SETUP

64-B

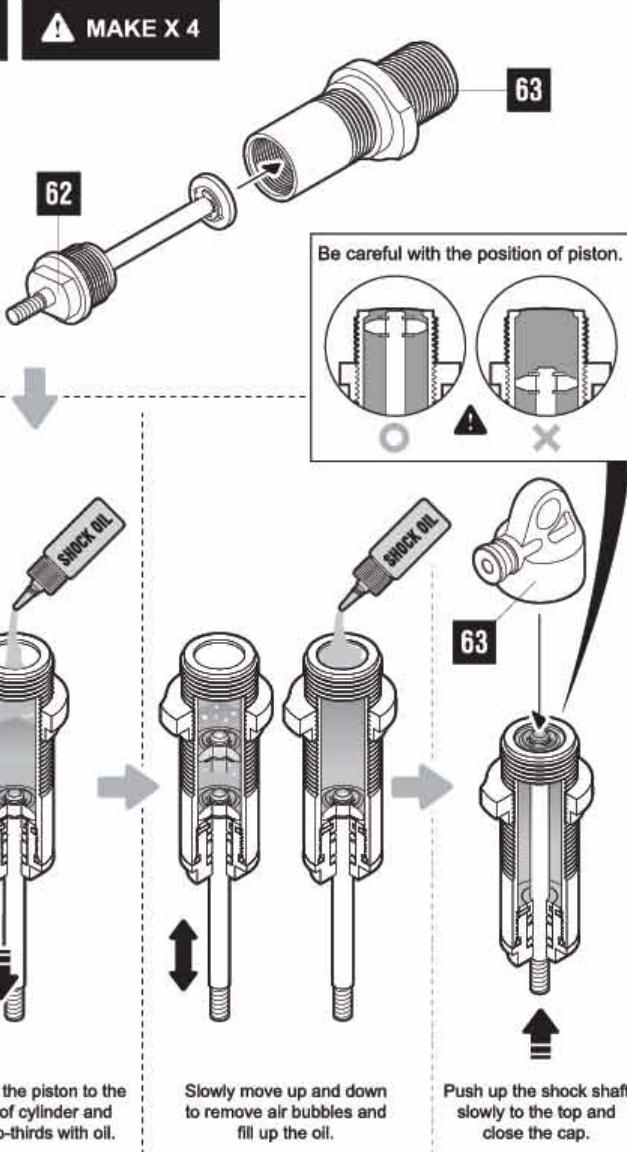

65 **⚠ MAKE X 4**

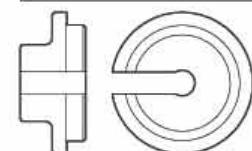

GM0020008
Shock spring cup

x4

GM60023 1

x4

GM60023 2

x4


GM0020096
Rubber Bump Stop


x4



GM0020026
Shock Spring
19x68mm Mideum

x4

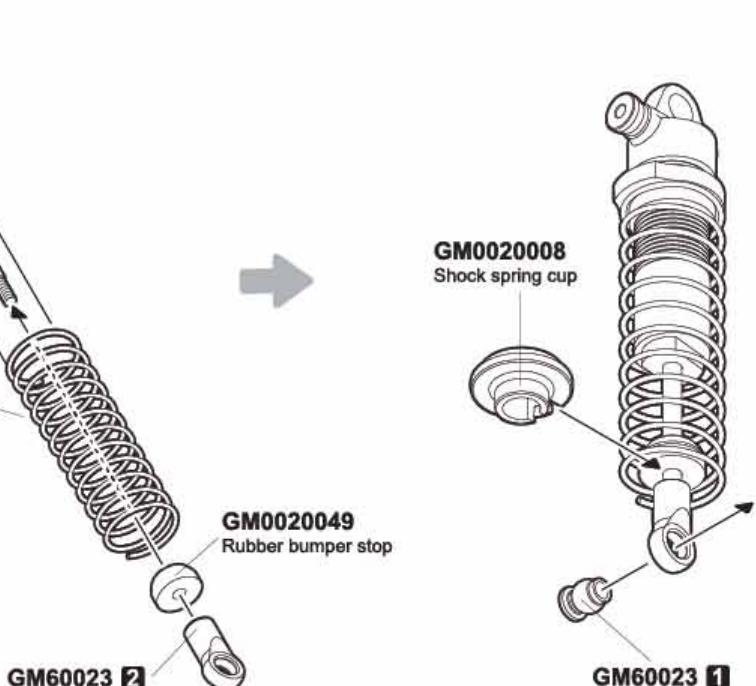

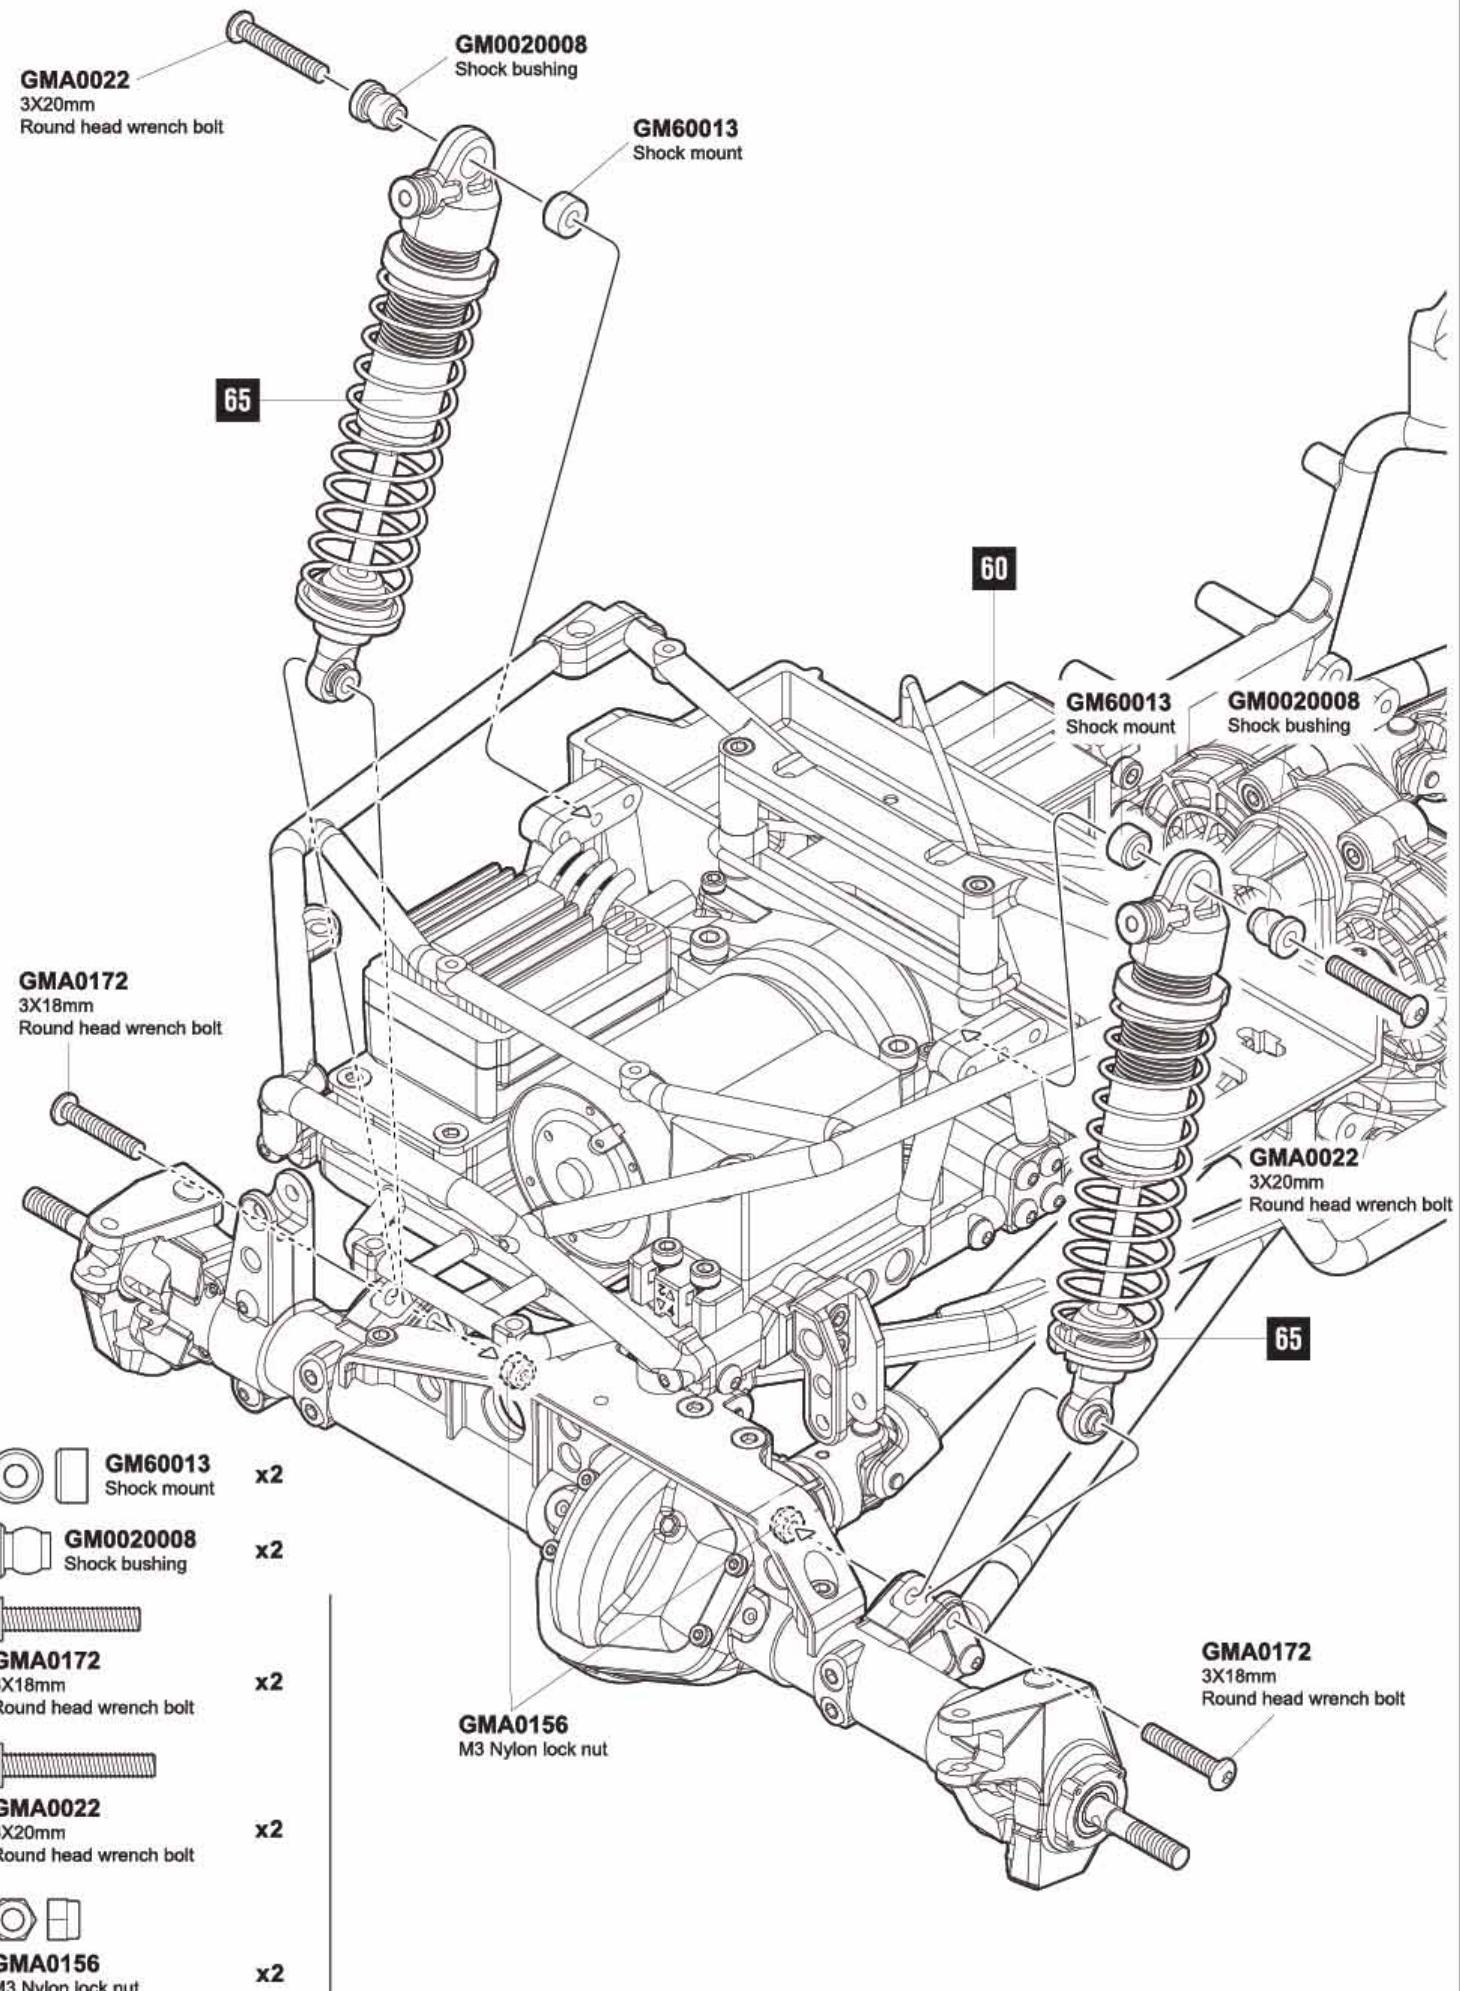

REAR SHOCK ABSORBER

67

GMA0172

3X18mm

Round head wrench bolt

x2

GM0020008

Shock bushing

x2

GMA0156

M3 Nylon lock nut

x2

65

GM0020008

Shock bushing

GMA0172

3X18mm

Round head wrench bolt

65

66

68



GMA0172

3X18mm

Round head wrench bolt

x2



GMA0156

M3 Nylon lock nut

x2

67

GMA0156

M3 Nylon lock nut


GMA0172

3X18mm

Round head wrench bolt


STEERING ROD

69

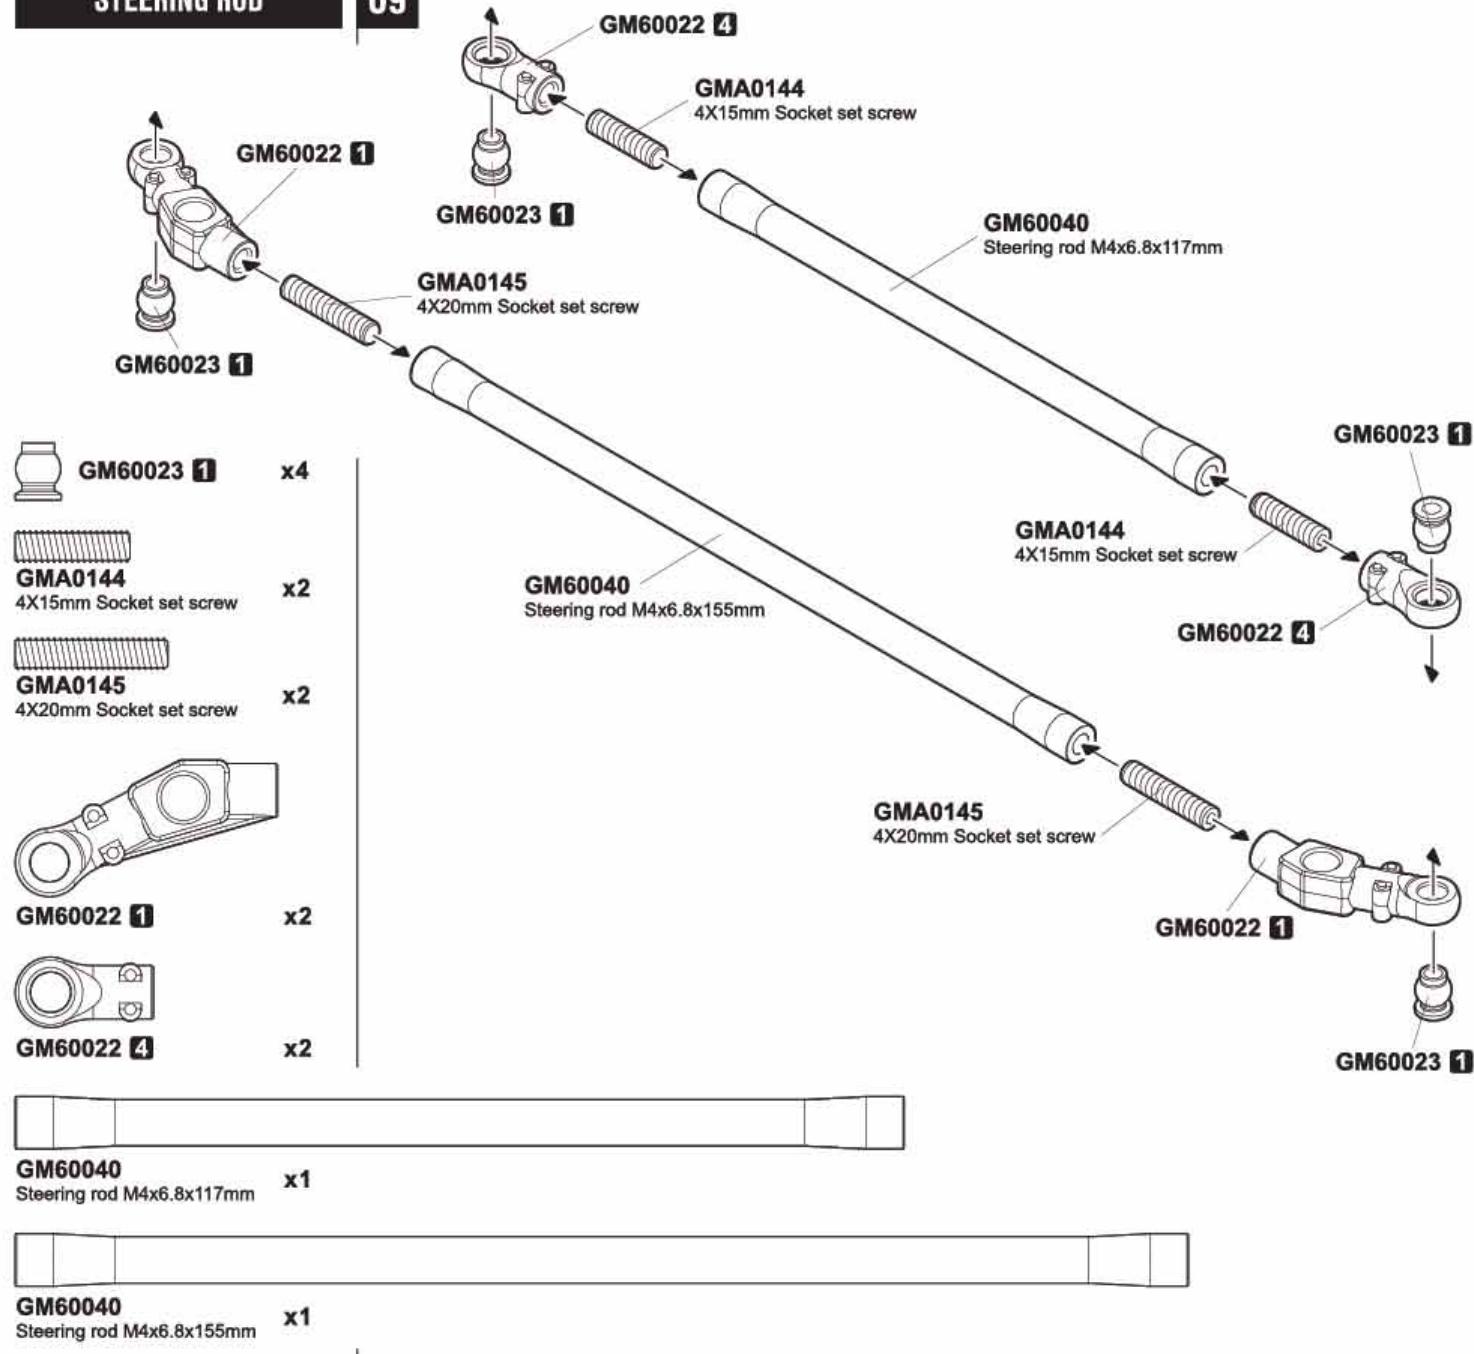

PANHARD ROD

70

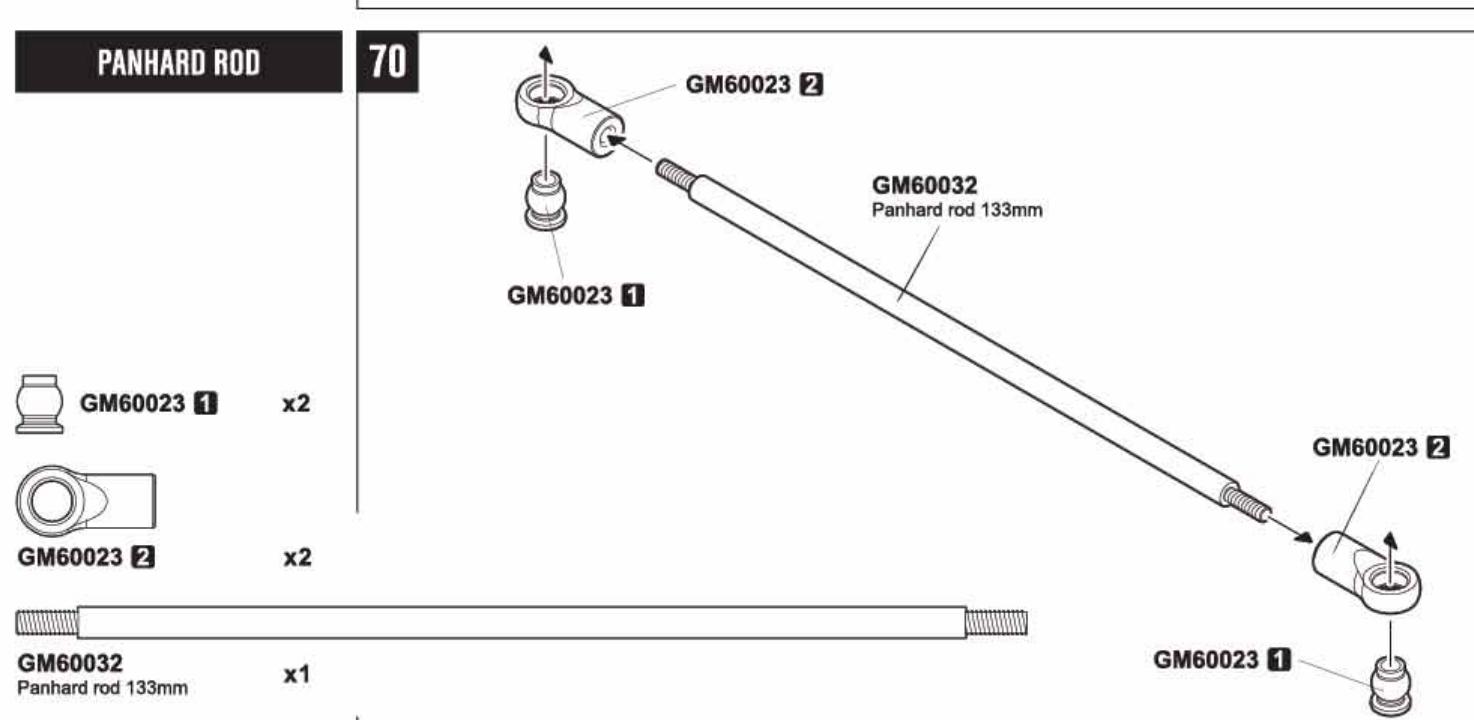

PANHARD ROD

71



GMA0021
3X15mm
Round head wrench bolt

x1



GMA0156
M3 Nylon lock nut


x1

70

68



GMA0060
3X15mm Flat head wrench bolt

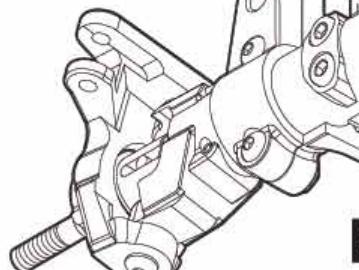

GMA0156
M3 Nylon lock nut

STEERING ROD

72



GMA0172
3X18mm
Round head wrench bolt

x1



GMA0023
3X25mm
Round head wrench bolt

x1



GMA0156
M3 Nylon lock nut

x2

GMA0156
M3 Nylon lock nut

GMA0156
M3 Nylon lock nut

69

71


GMA0172
3X18mm
Round head wrench bolt



GMA0156
M3 Nylon lock nut



STEERING ROD

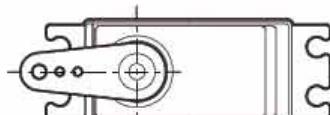

⚠ Set to the neutral position before attaching the servo horn to the servo.



GMA0018
3X8mm
Round head wrench bolt

x1



GMA0020
3X12mm
Round head wrench bolt

x1



GMA0154
M3 Nut

x1

73


SERVO HORN



SANWA
Airtronics
JR
KO



Hitec

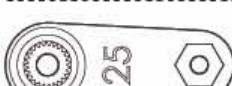

Futaba

GMA0154

M3 Nut

72


GMA0018
3X8mm Round head wrench bolt

GMA0020
3X12mm Round head wrench bolt





STOCK DRIVE SHAFT

Default setup

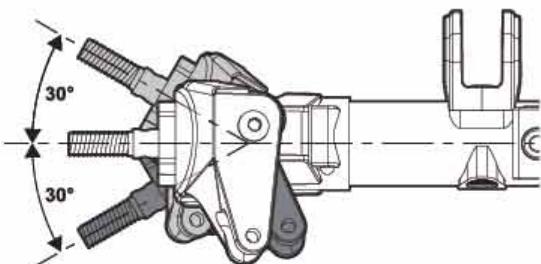

OPTION CVA KIT


GM30062 GA60 CVA KIT
Option parts (Not included.)

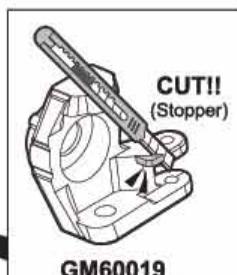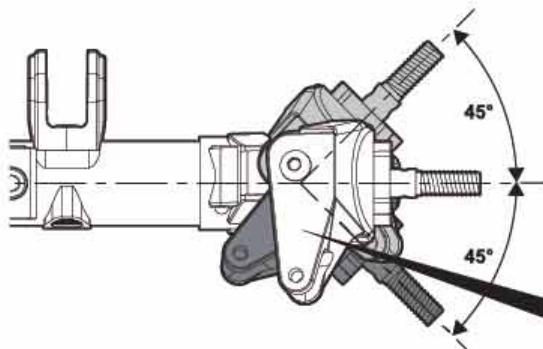

GM60019
Steering knuckle

PANHARD ROD

74

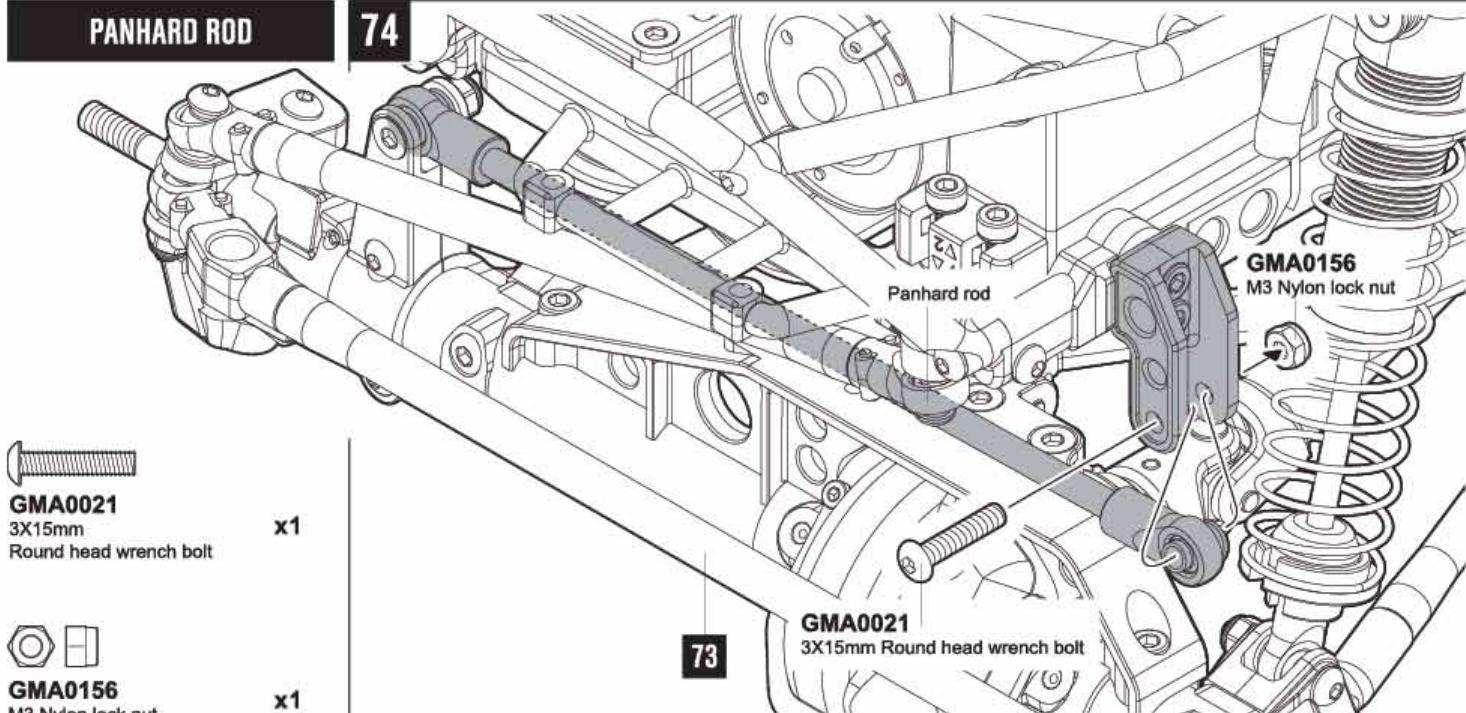

GMA0021
3X15mm
Round head wrench bolt

x1



GMA0156
M3 Nylon lock nut


x1


73

GMA0021
3X15mm Round head wrench bolt

73

48

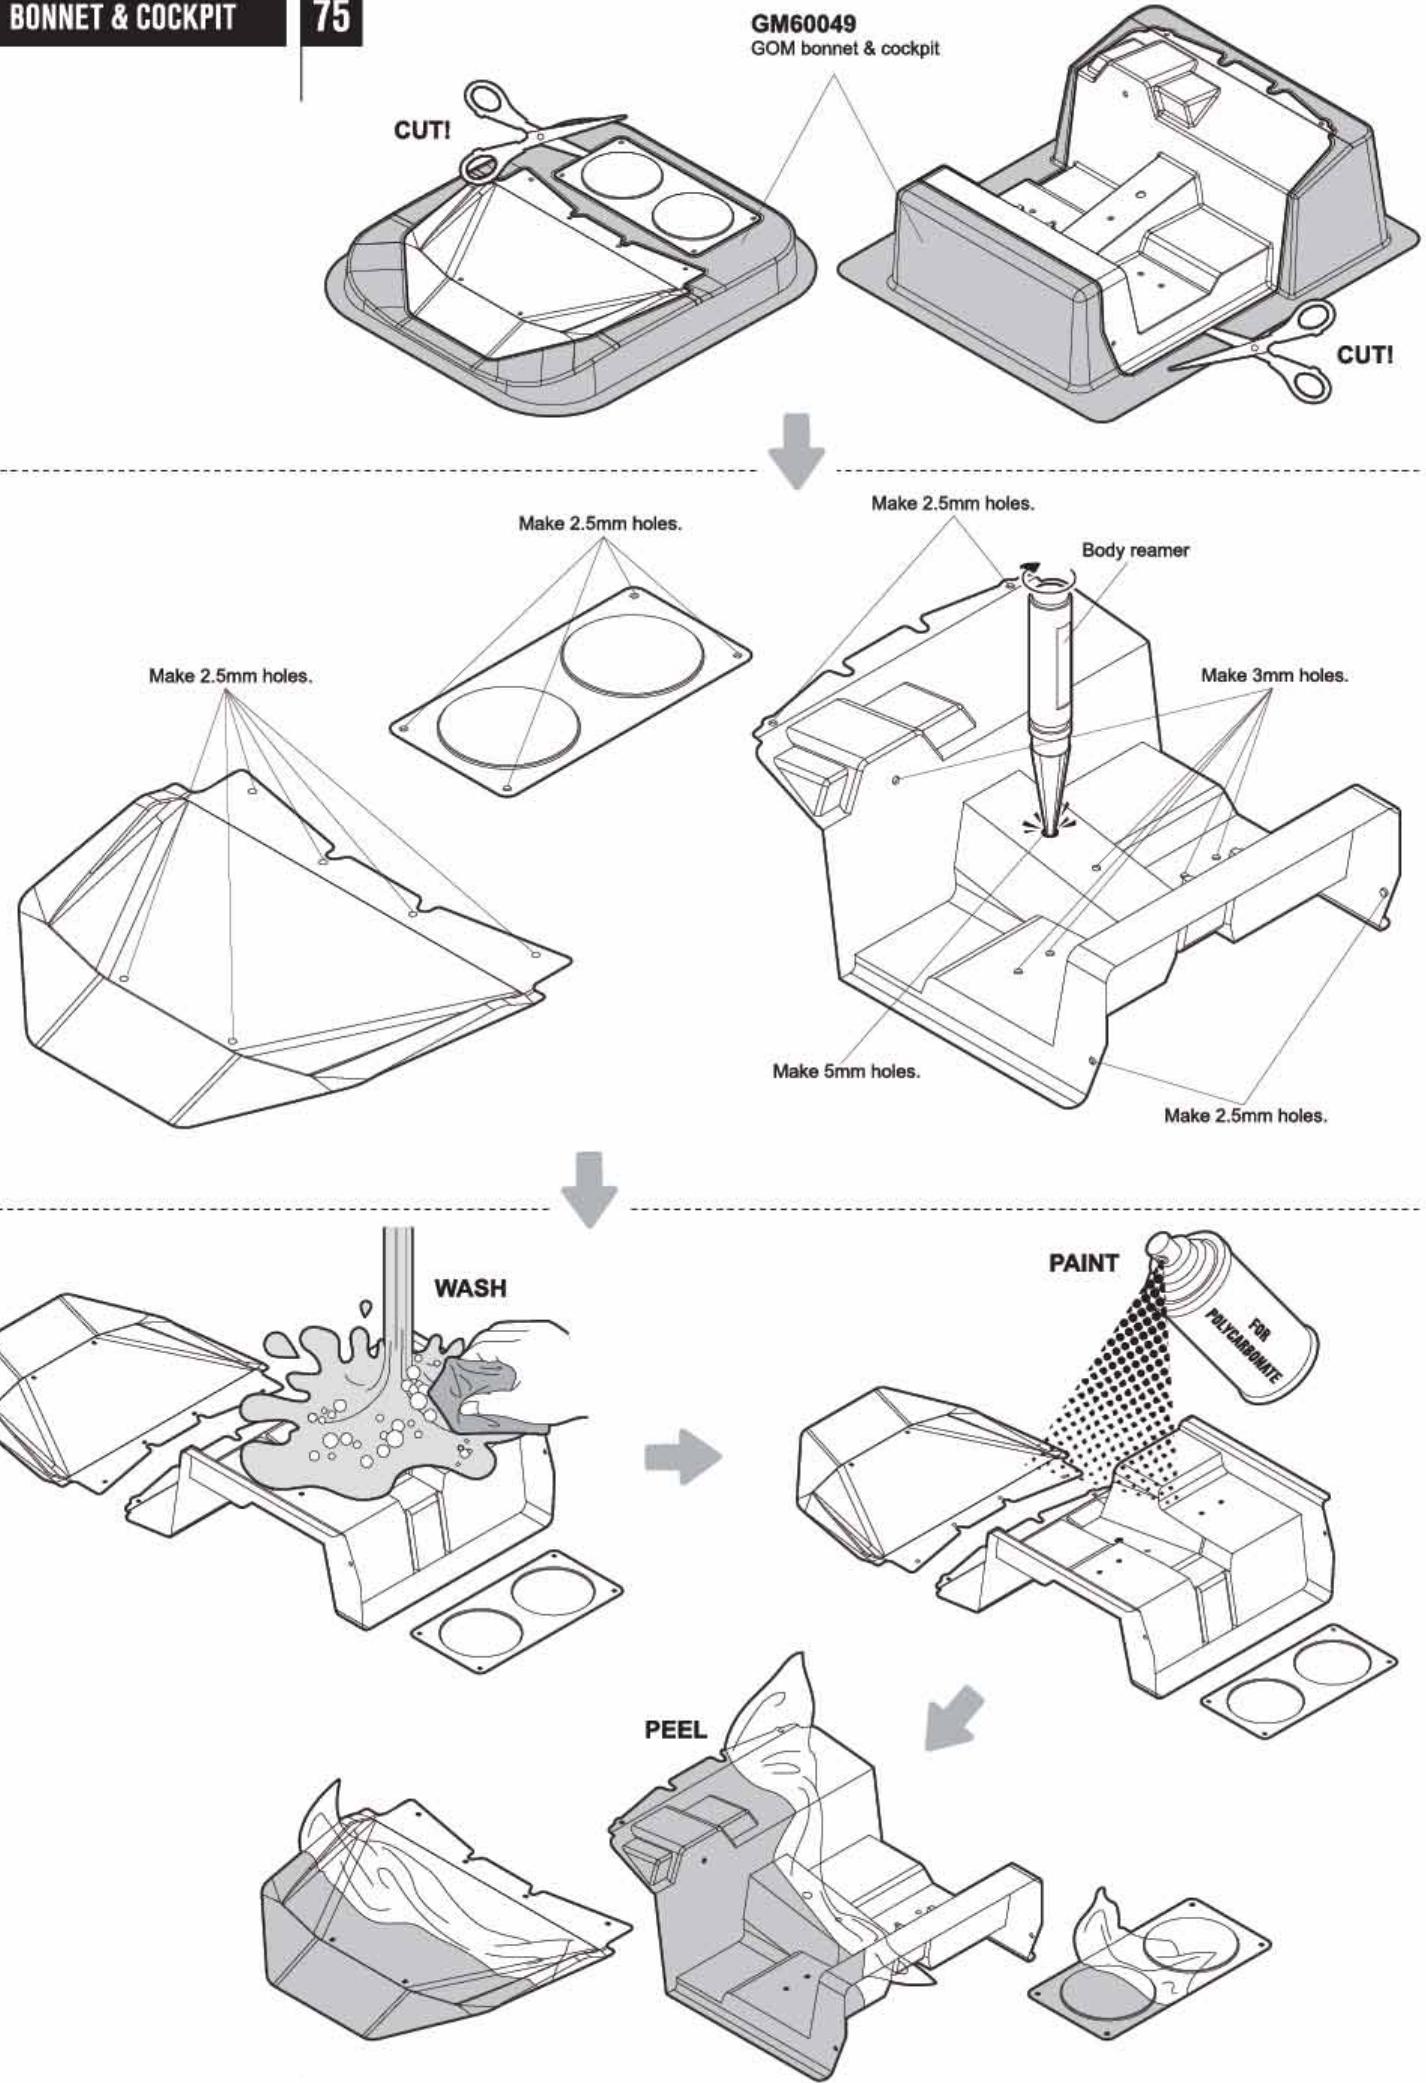
GM60049
GOM bonnet & cockpit

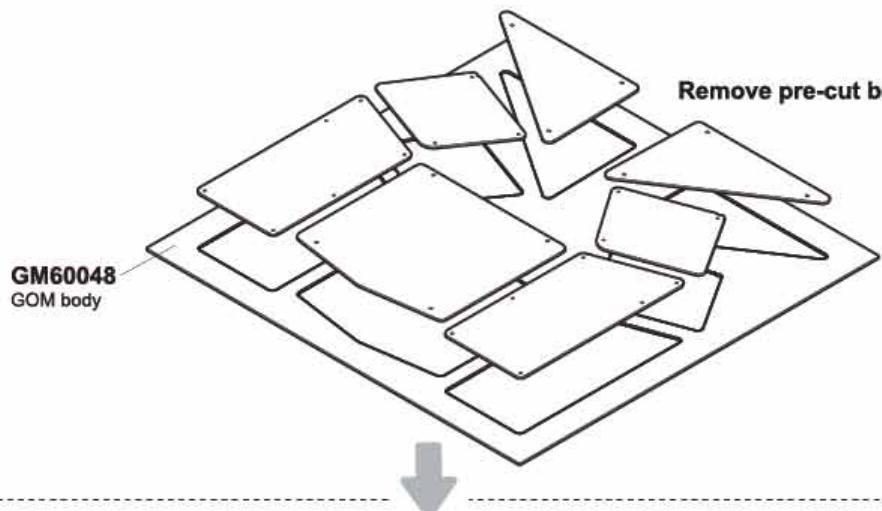





Remove pre-cut body panel

GM60048
GOM body

⚠ MAKE ALL 2.5mm HOLES.

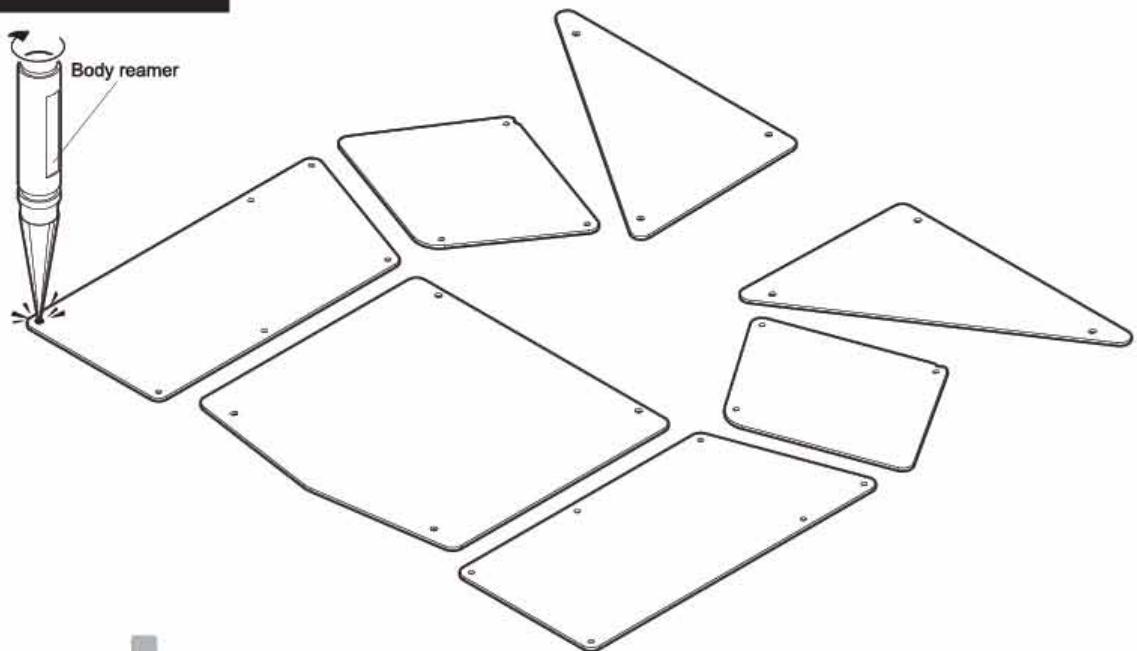

Body reamer

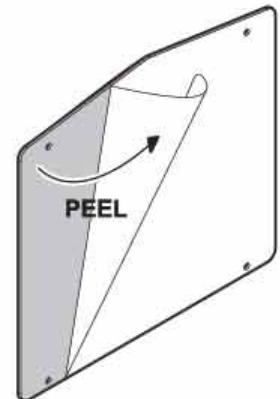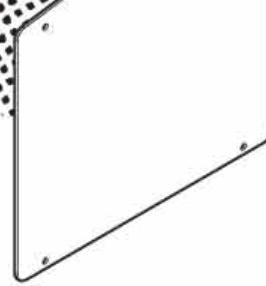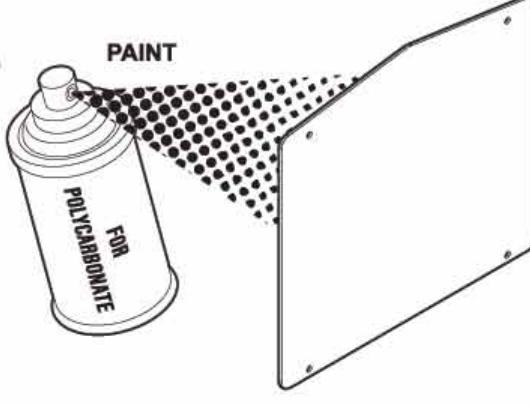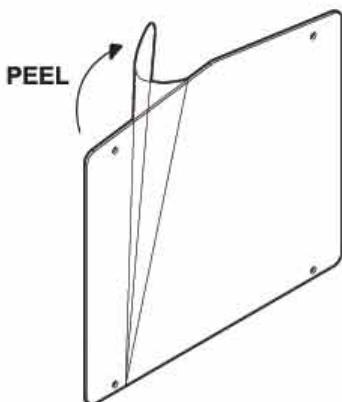

COCKPIT

77




GMA0018
3X8mm
Round head wrench bolt

x1



GMA0158
3mm Washer

x1

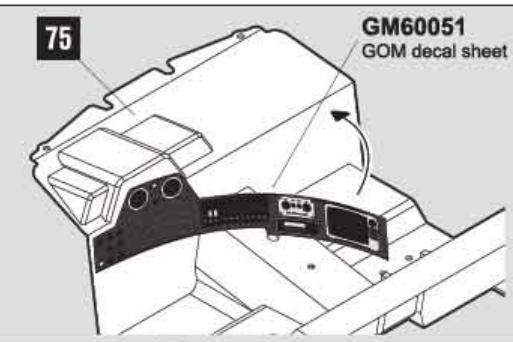

! SHIFTER ASSEMBLE

GM60026
Shifter

GM49006
R5 snap pin



GMA0170
P5 O-ring

GMA0018

3X8mm
Round head wrench bolt

GMA0158
3mm Washer

x1



GM49006
R5 snap pin



GMA0170
P5 O-ring

x1

GM60026
Steering wheel



78



GMA0019
3X10mm
Round head wrench bolt

x4




GMA0158
3mm Washer

x4

GM60026
Seat

GM60026
Backrest


77

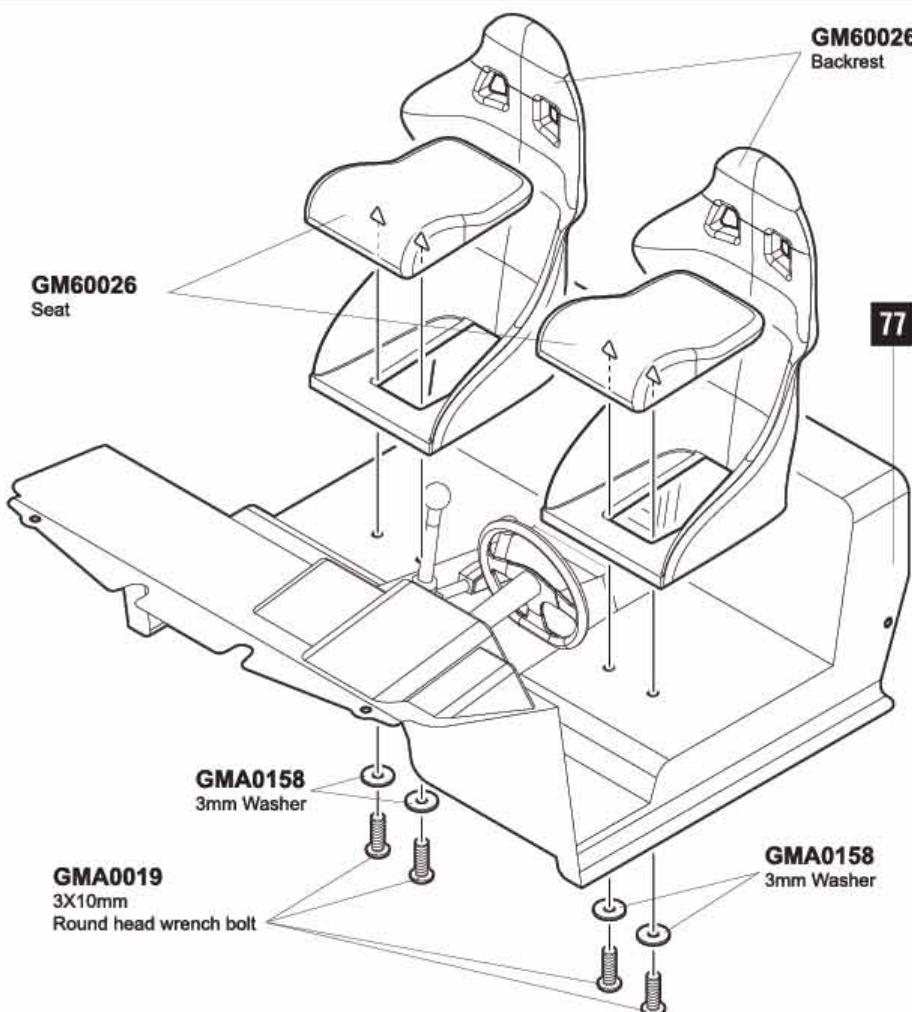

COCKPIT**79****GMA0093**

2.5X8mm Wrench bolt


x2

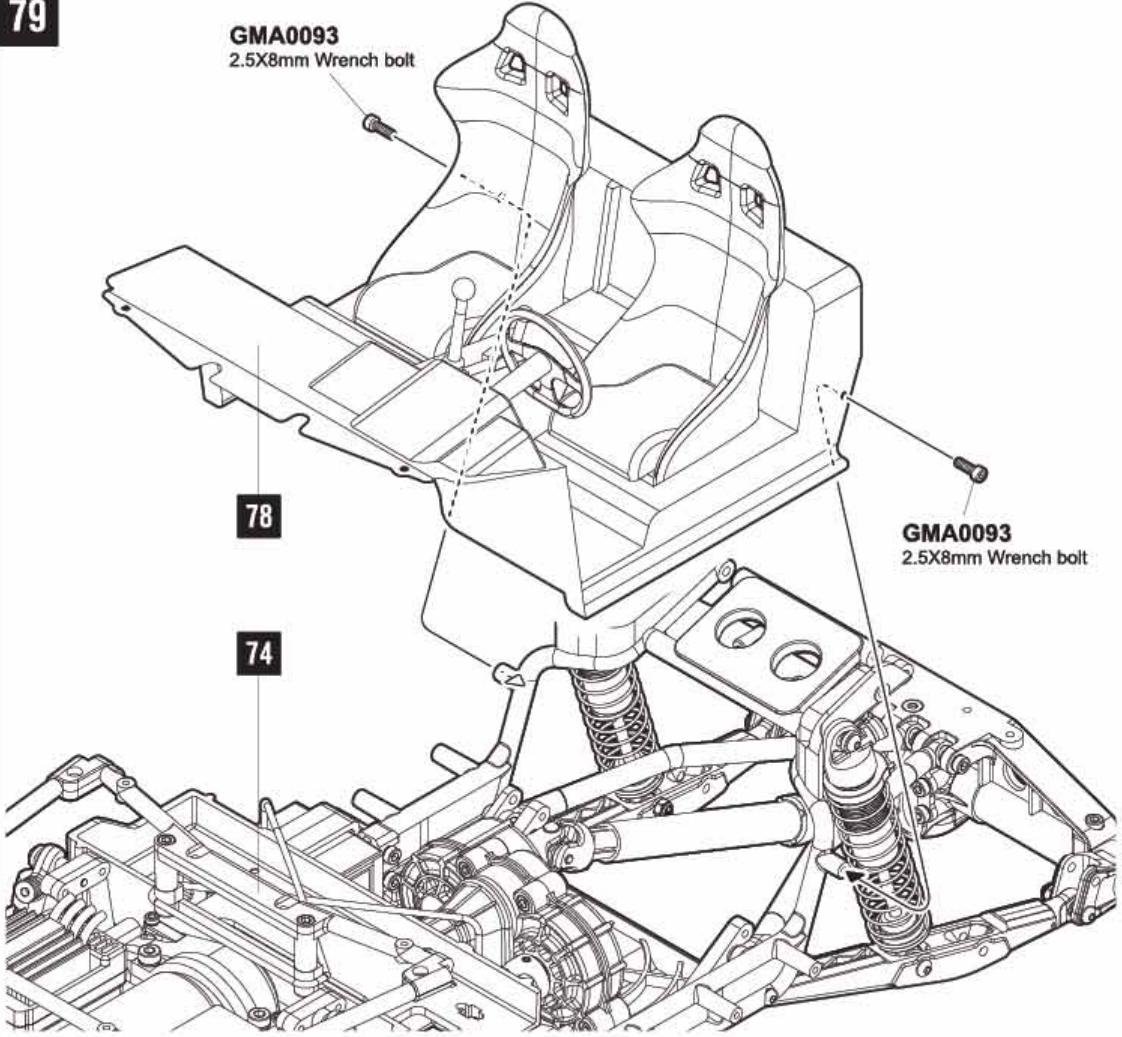**BONNET****80****GMA0012**

2.5X8mm

Round head wrench bolt


x6

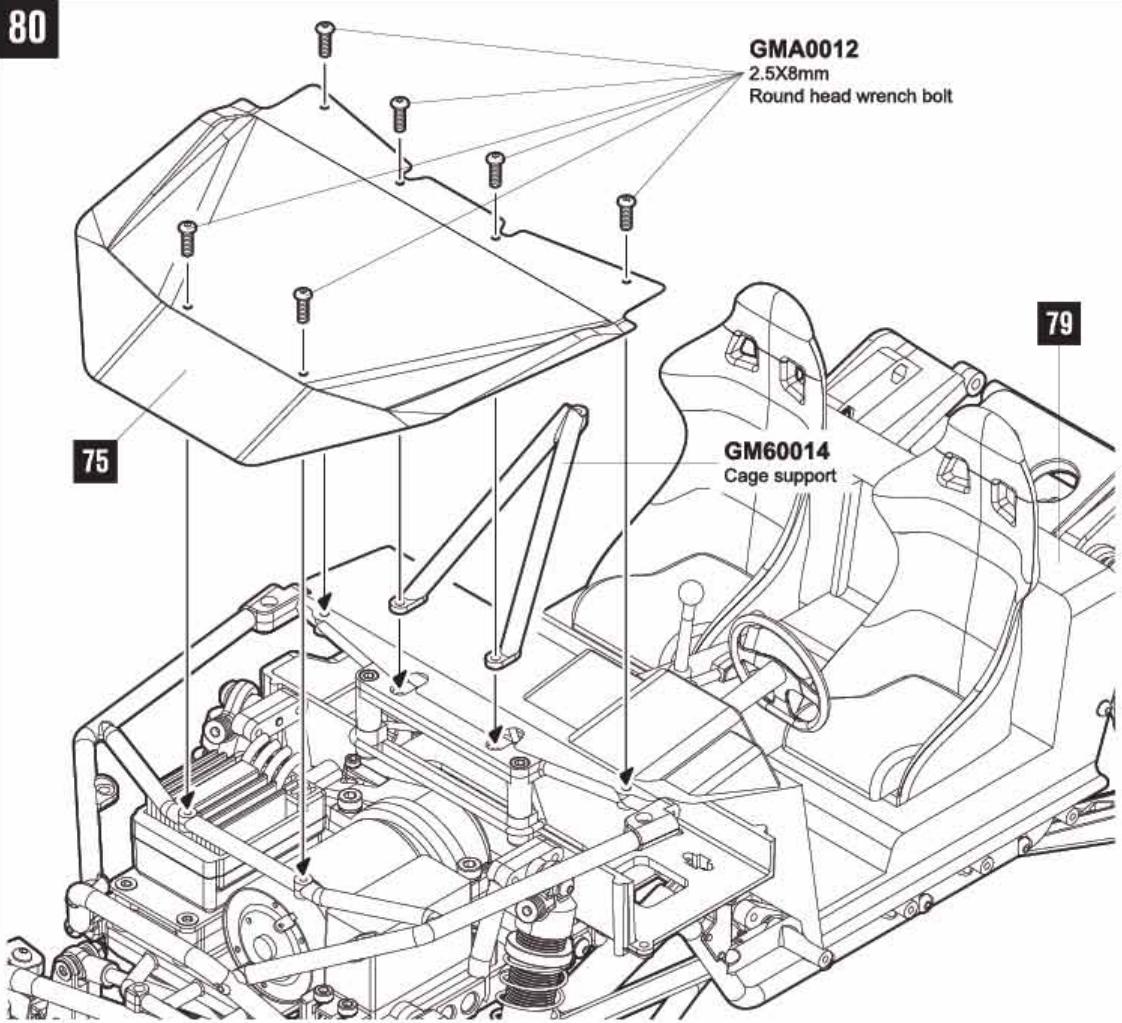

CAGE


81

	GMA0012	2.5X8mm	x1
		Round head wrench bolt	
	GMA0014	2.5X12mm	x5
		Round head wrench bolt	
	GMA0095	2.5X12mm Wrench bolt	x1
	GMA0096	2.5X15mm Wrench bolt	x1
	GMA0173	3X45mm Wrench bolt	x1

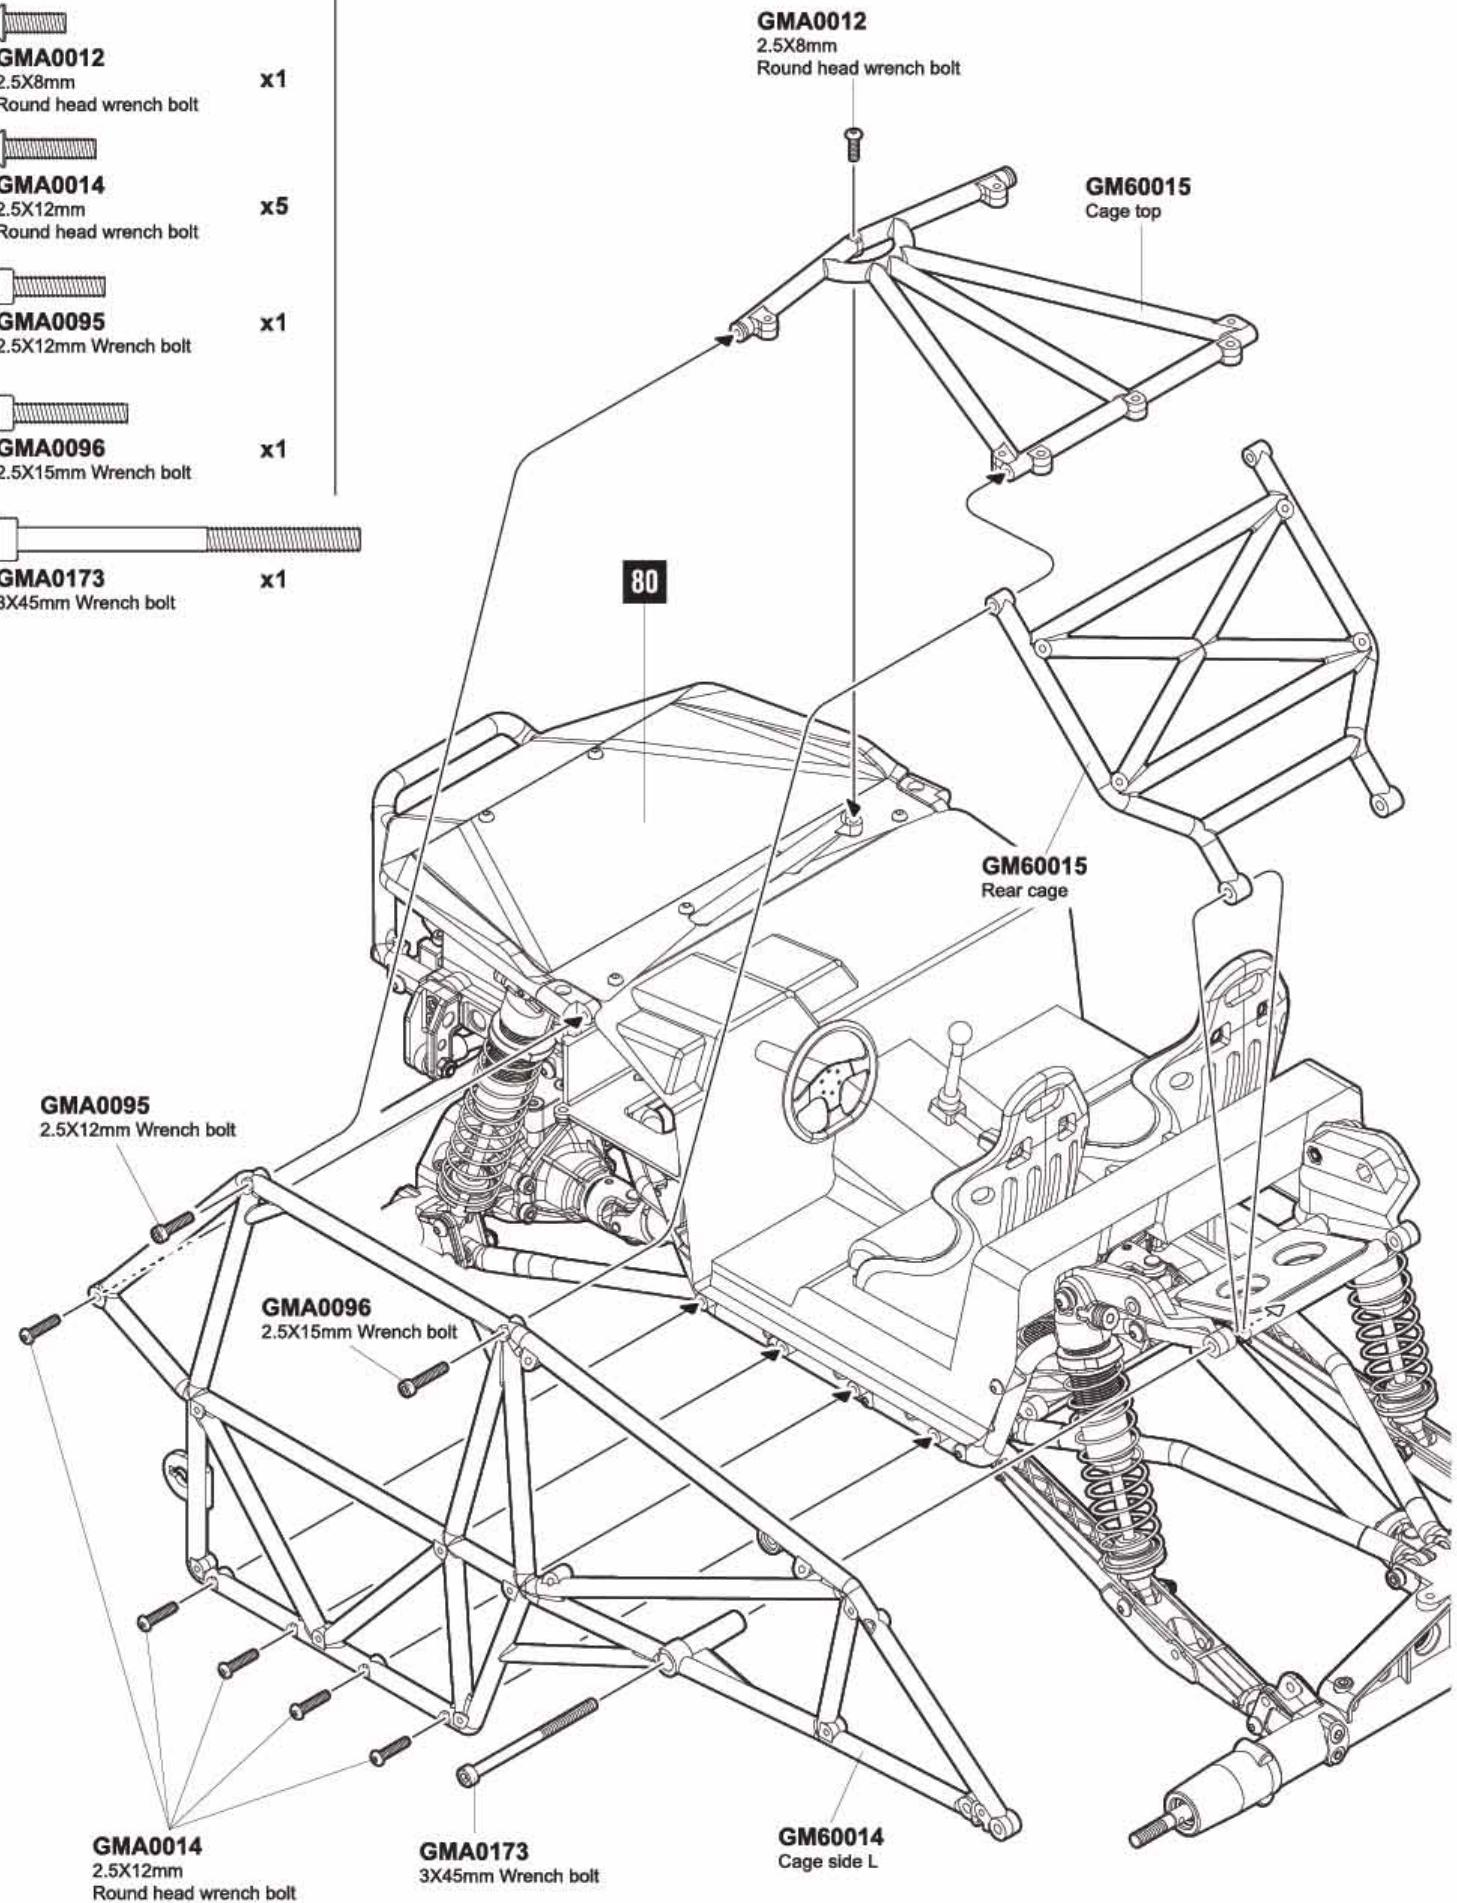

CAGE

82

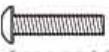GMA0014
2.5X12mm
Round head wrench bolt


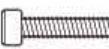
x7

GMA0021
3X15mm
Round head wrench bolt



x4

GMA0093
2.5X8mm Wrench bolt


x1

GMA0095
2.5X12mm Wrench bolt


x1

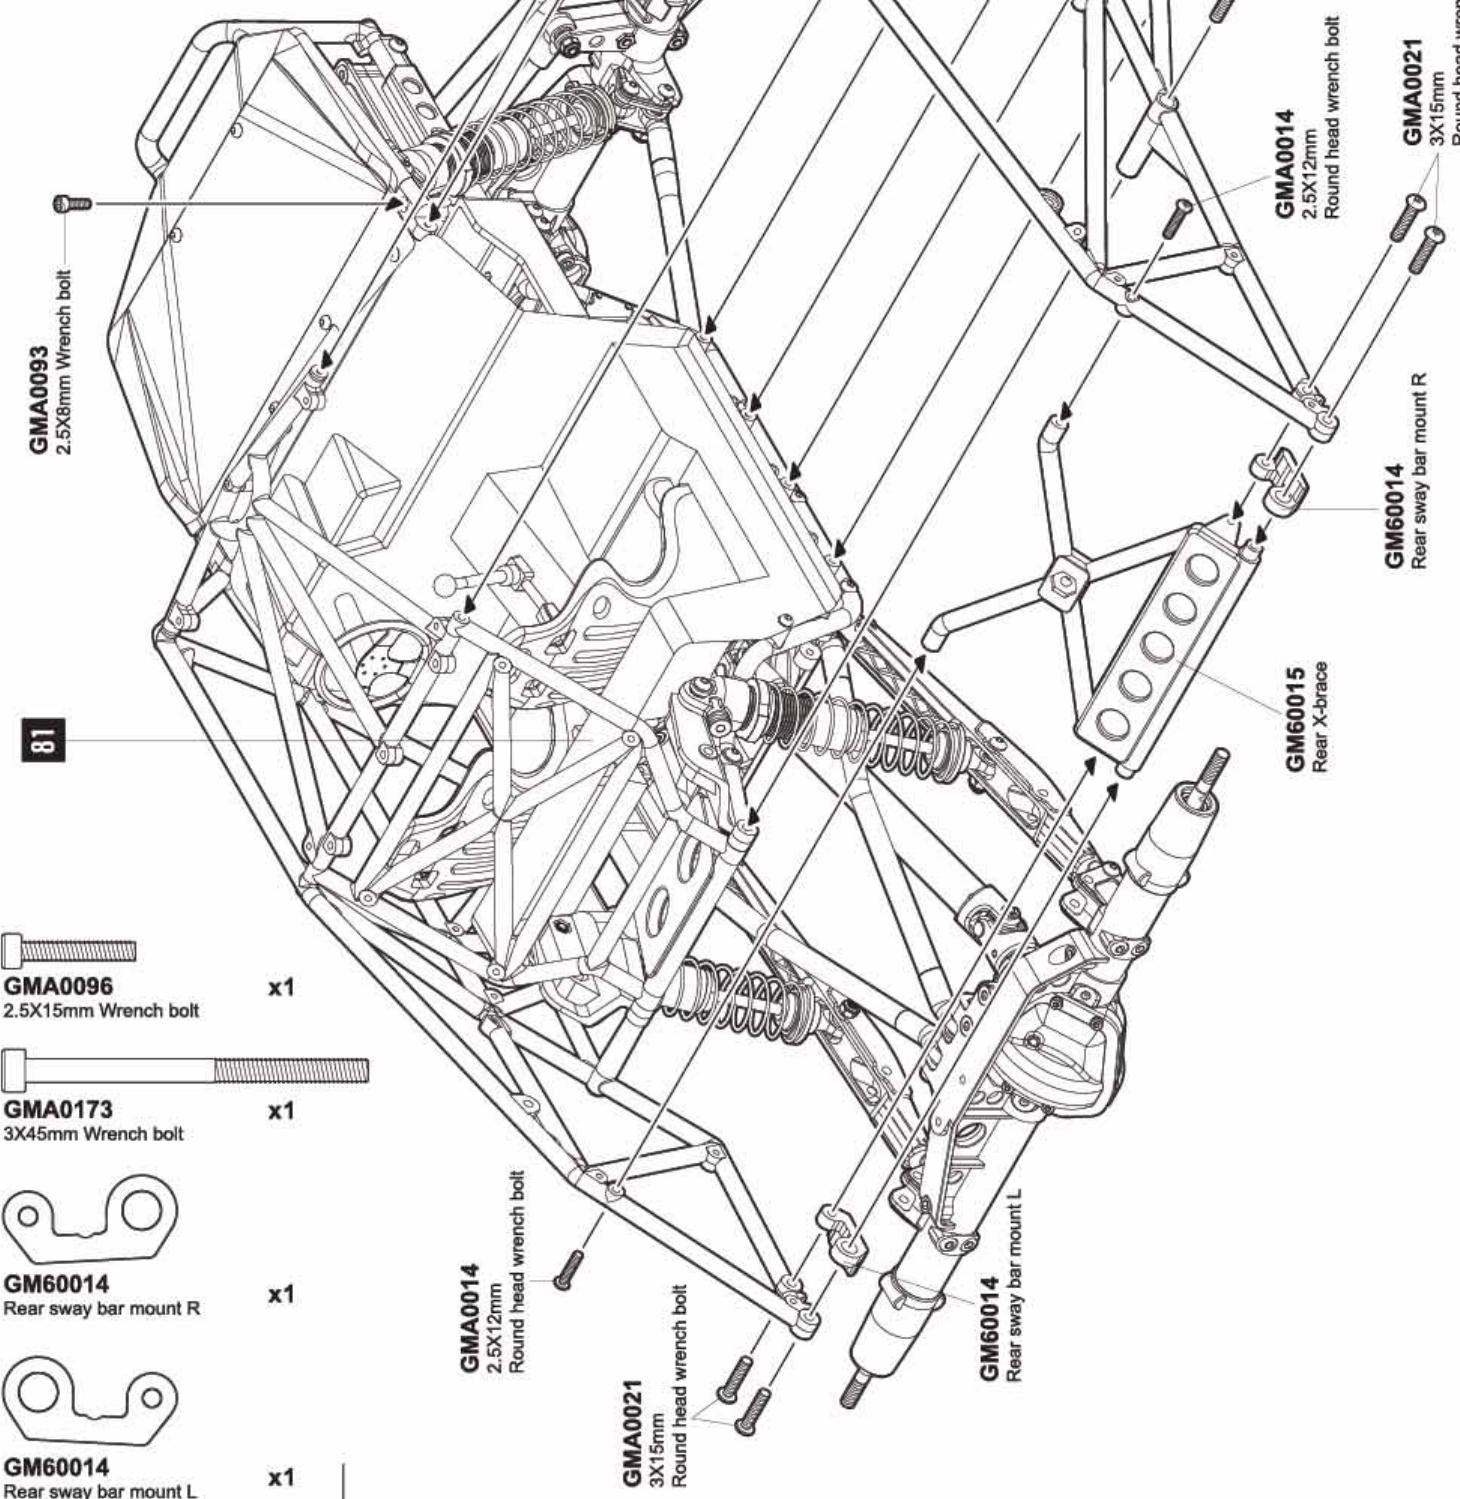


BATTERY COVER**83**

GMA0012
2.5X8mm
Round head wrench bolt
x1

GMA0083
2X8mm Wrench bolt
x1

GMA0094
2.5X10mm Wrench bolt
x1

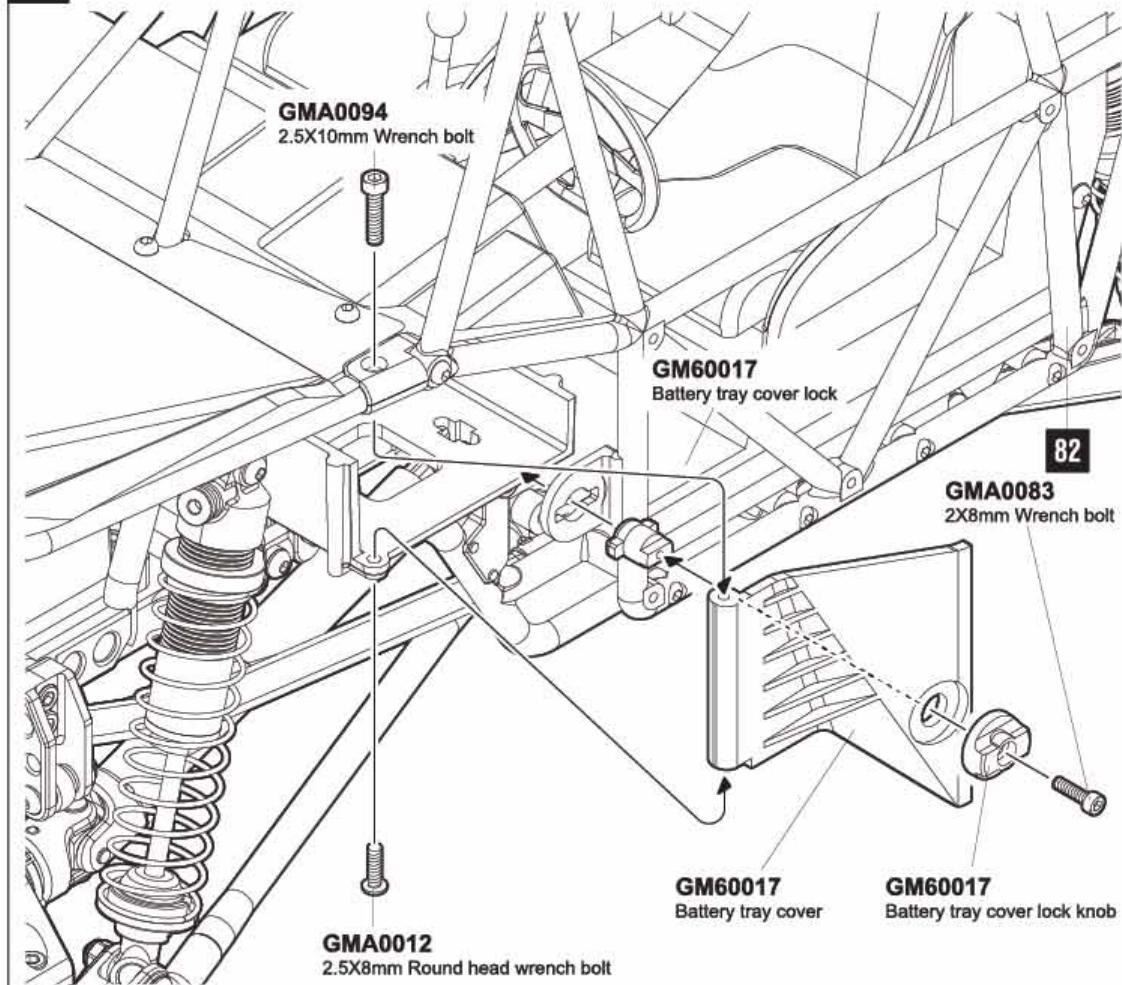**BODY****84**

GMA0012
2.5X8mm
Round head wrench bolt
x4

GMA0093
2.5X8mm Wrench bolt
x4

83


GMA0012
2.5X8mm
Round head wrench bolt

GM60051
GOM decal sheet

75

GMA0012
2.5X8mm
Round head wrench bolt

GMA0012
2.5X8mm
Round head wrench bolt

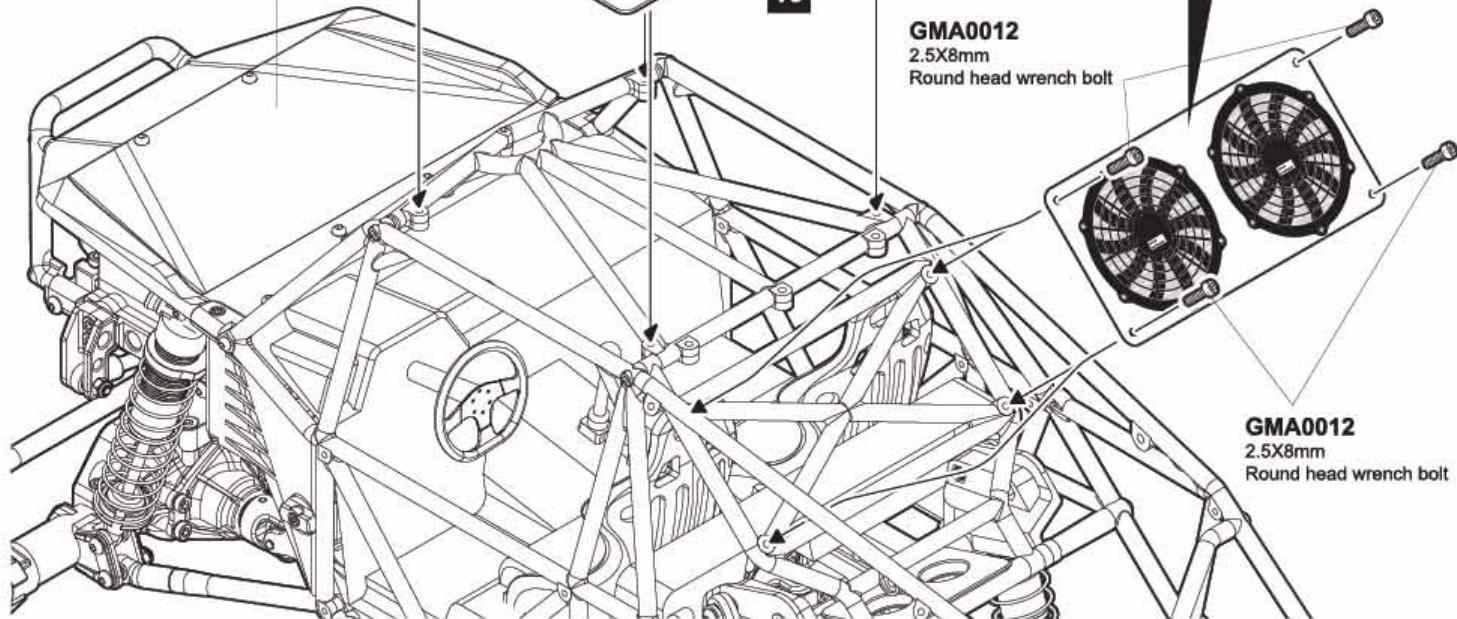

TAIL LIGHT**85****GM60017**

Tail light

**GMA0057**


3X8mm Flat head wrench bolt

x3**GMA0057**

3X8mm Flat head wrench bolt

**GMA0057**

3X8mm Flat head wrench bolt

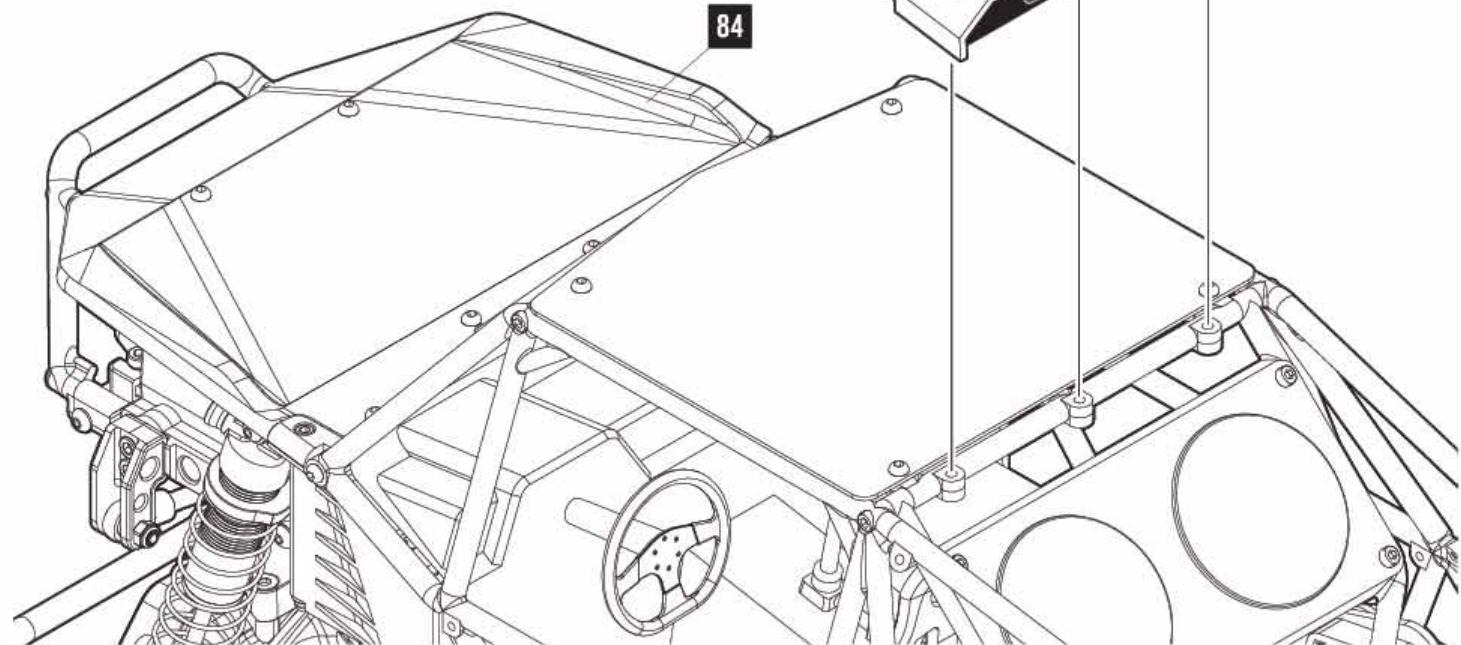**SIDE BODY****86****⚠ SAME LEFT & RIGHT****GMA0012**


2.5X8mm




Round head wrench bolt

x24**85****76****76****GMA0012**

2.5X8mm


Round head wrench bolt

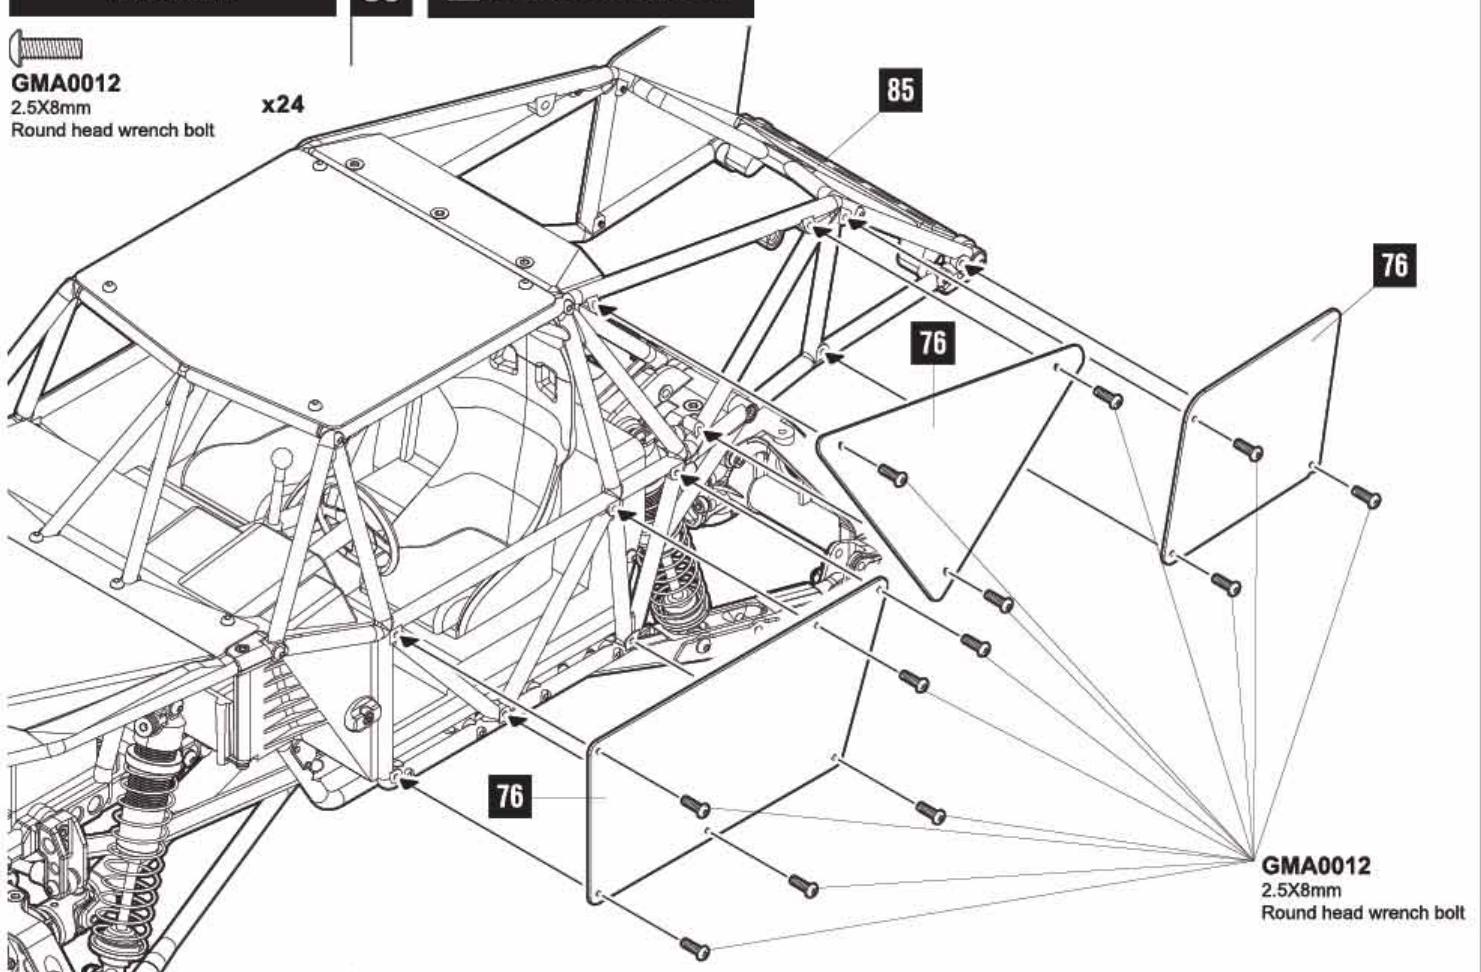

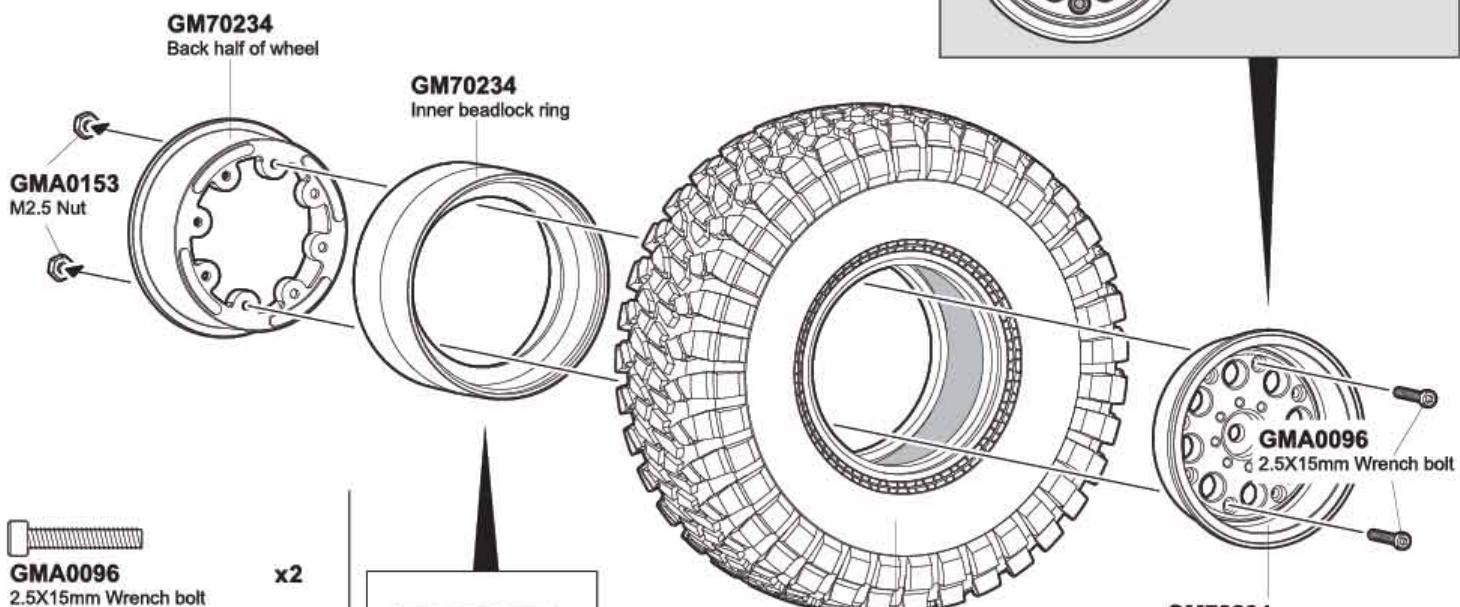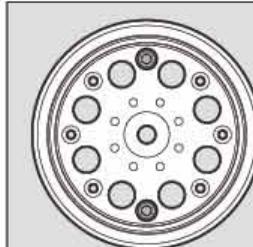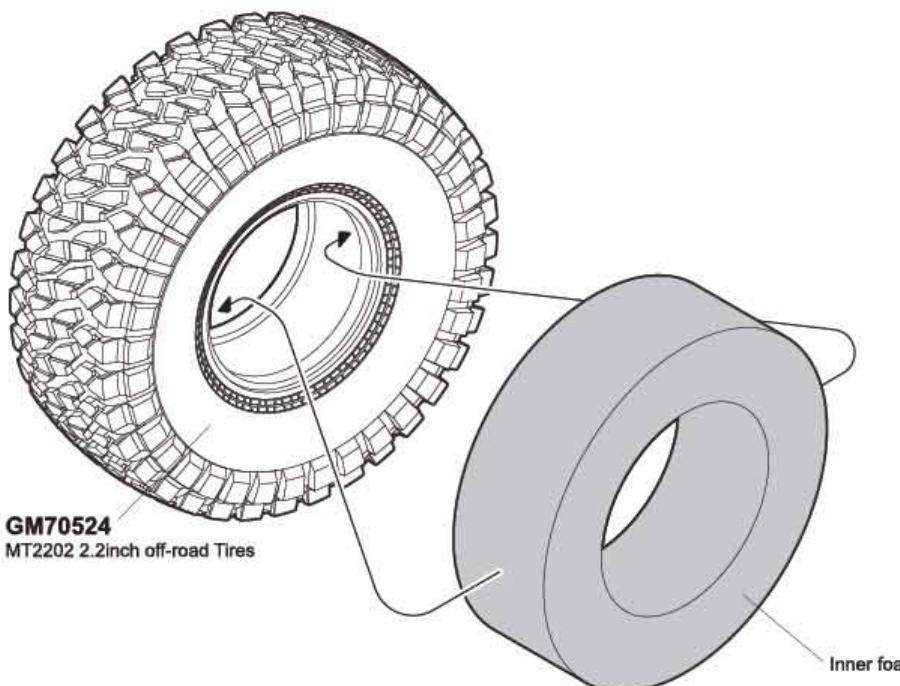

x2

x8

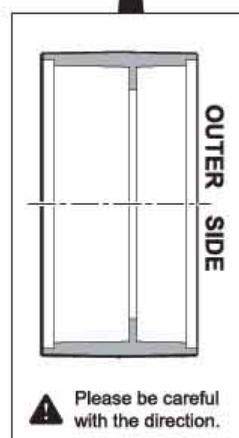

WHEELS AND TIRES

89



⚠ MAKE X 4



GMA0093
2.5X8mm Wrench bolt
x24



GMA0153
M2.5 Nut
x24

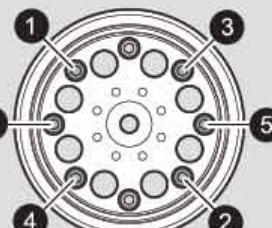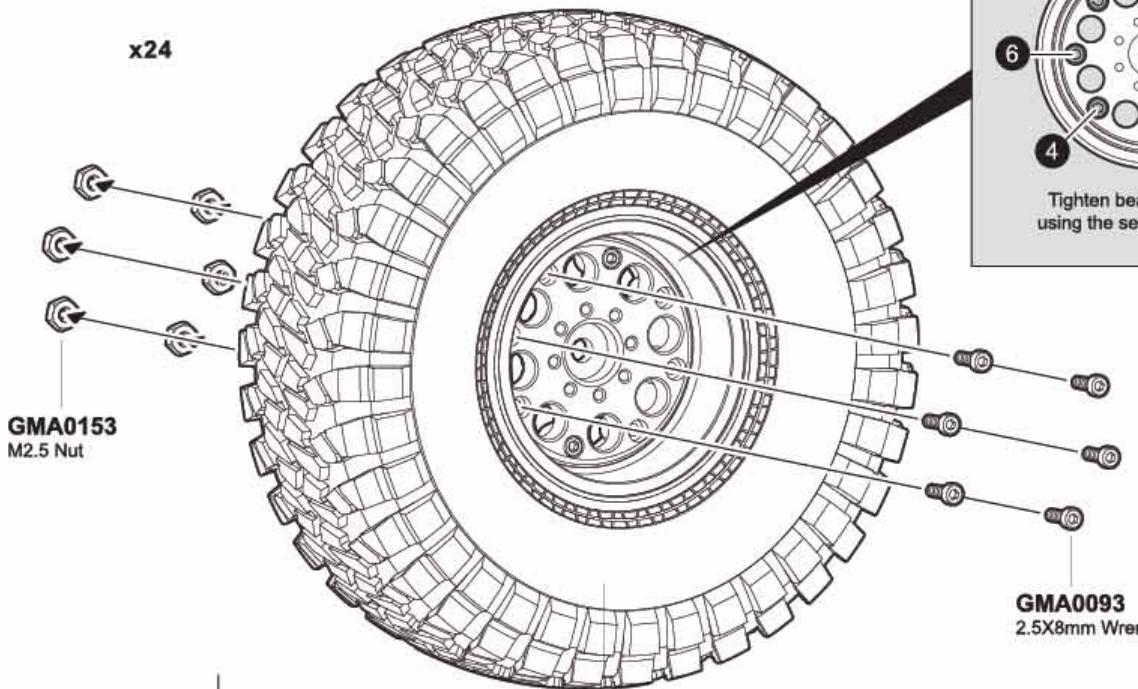



Tighten beadlock wheels
using the sequence shown.

90

⚠ MAKE X 4




GMA0093
2.5X8mm Wrench bolt
x8

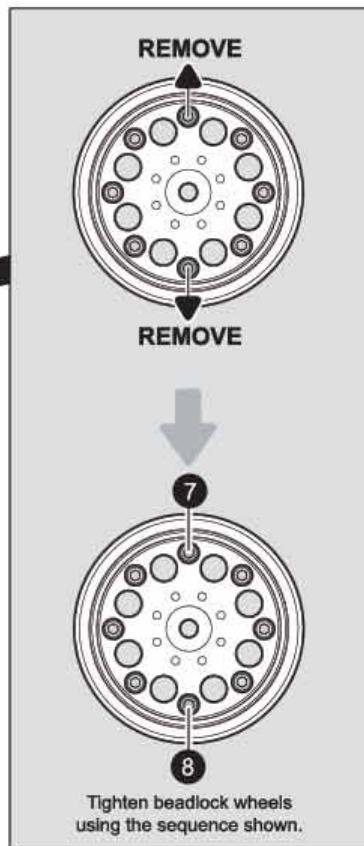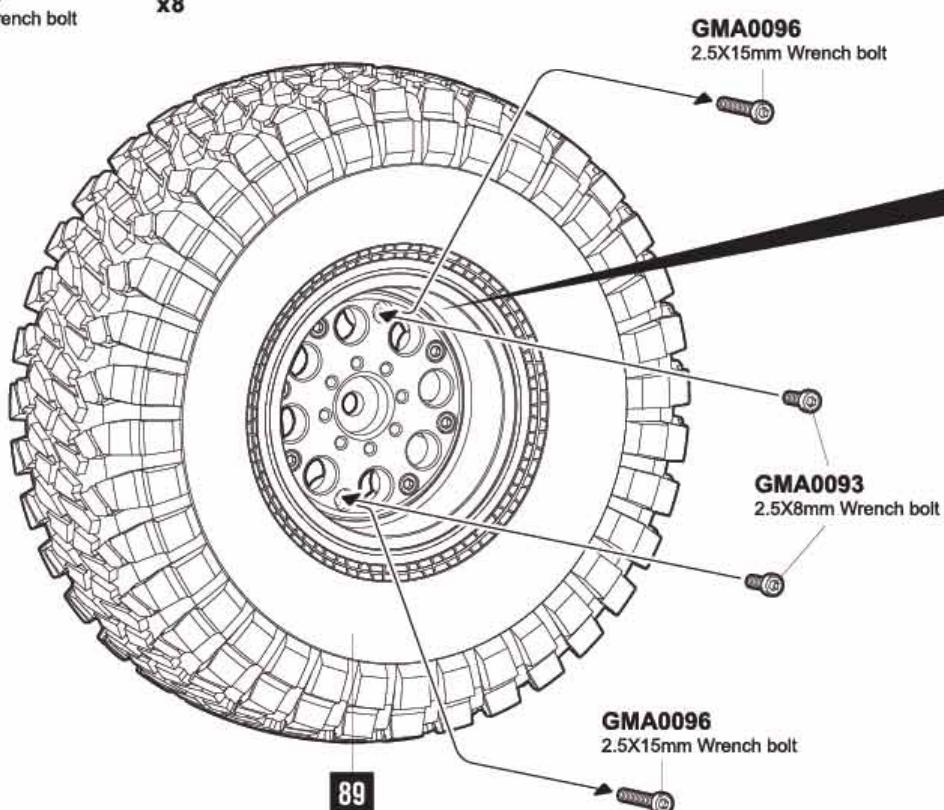

WHEELS & TIRES


90

⚠ SAME LEFT & RIGHT

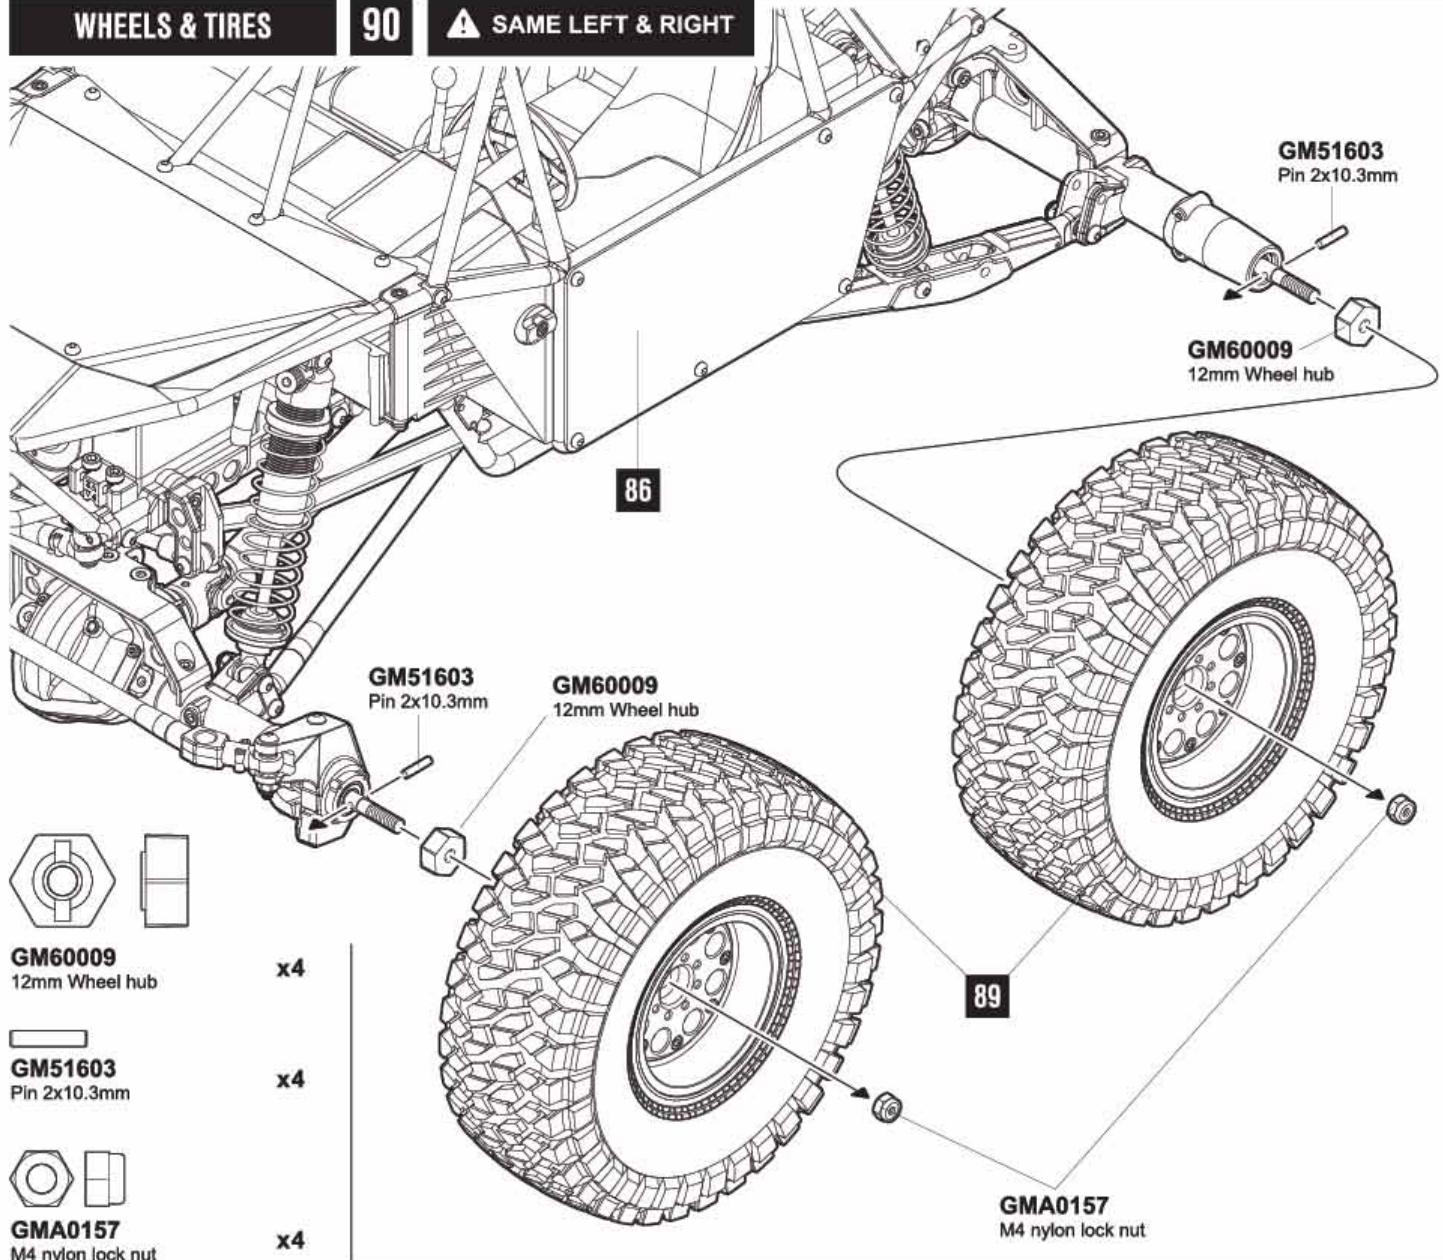

91

⚠ MAKE X 4

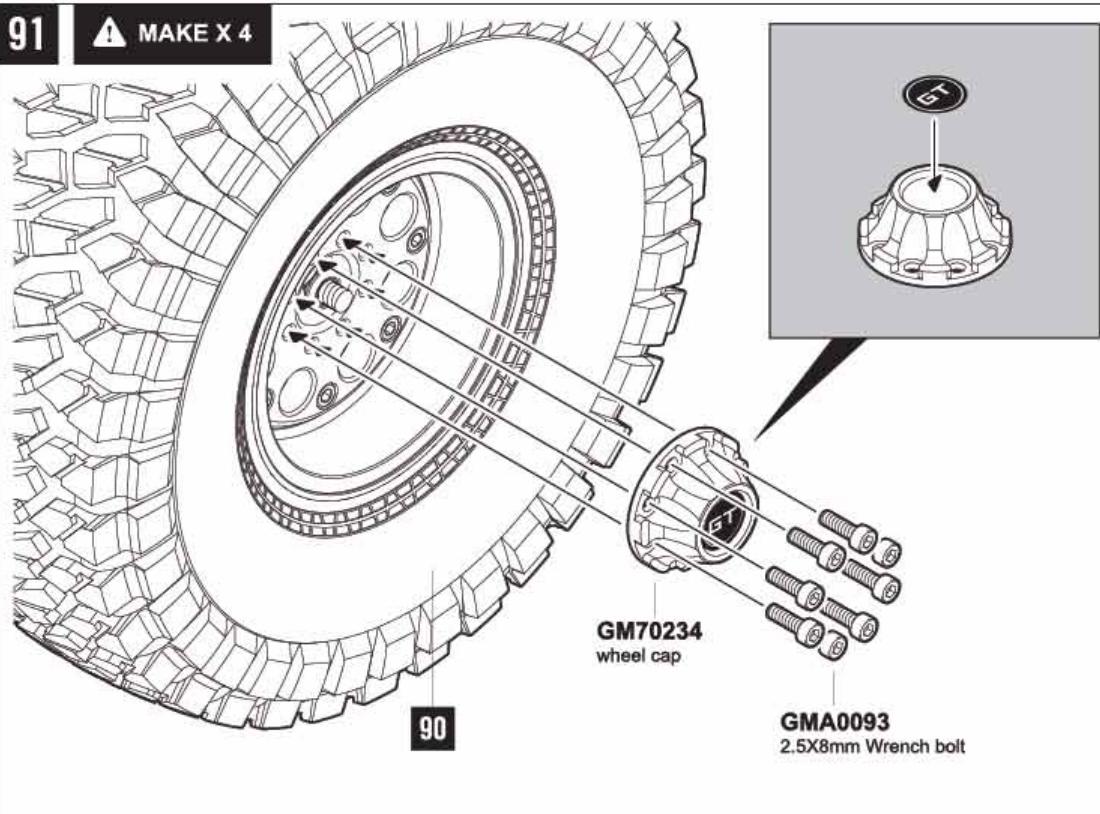

PARTS REFERENCE

PART#	PRODUCT NAME	PART#	PRODUCT NAME
GMA0012	2.5*8mm round head wrench bolt	GM0020026	Shock spring 19x68mm Mideum
GMA0014	2.5*12mm round head wrench bolt	GM0020096	Rubber bumper stop
GMA0017	3*6mm round head wrench bolt	GM49006	R5 snap pin
GMA0018	3*8mm round head wrench bolt	GM51306	3*15mm Screw pin
GMA0019	3*10mm round head wrench bolt	GM51603	Pin 2x10.3mm
GMA0020	3*12mm round head wrench bolt	GM60001	16.5mm servo saver parts tree
GMA0021	3*15mm round head wrench bolt	GM60008	GR01 motor plate & gear set
GMA0022	3*20mm round head wrench bolt	GM60009	GA60 axle gear & hardware set
GMA0023	3*25mm round head wrench bolt	GM60010	GA60 axle housing parts tree
GMA0057	3*8mm flat head wrench bolt	GM60011	GR01 transmission & transfer case housing parts tree
GMA0058	3*10mm flat head wrench bolt	GM60012	GR01 transmission & transfer case gear set
GMA0059	3*12mm flat head wrench bolt	GM60013	GR01 cage lower rails
GMA0060	3*15mm flat head wrench bolt	GM60014	Cage side parts tree
GMA0061	3*20mm flat head wrench bolt	GM60015	Cage top & rear parts tree
GMA0083	2*8mm wrench bolt	GM60016	GR01 skid plate parts tree
GMA0092	2.5*6mm wrench bolt	GM60017	Front cage parts tree
GMA0093	2.5*8mm wrench bolt	GM60018	Battery tray & transmission parts tree
GMA0094	2.5*10mm wrench bolt	GM60019	GA60 axle parts tree
GMA0095	2.5*12mm wrench bolt	GM60022	M4 5.8mm rod end set
GMA0096	2.5*15mm wrench bolt	GM60023	5.8mm ball parts tree
GMA0102	3*8mm wrench bolt	GM60024	Universal shaft parts tree
GMA0103	3*10mm wrench bolt	GM60025	Rear 4 link set
GMA0104	3*12mm wrench bolt	GM60026	Cockpit accessory parts tree
GMA0105	3*15mm wrench bolt	GM60027	Bent upper link M4x6.8x99mm
GMA0106	3*18mm wrench bolt	GM60028	Differential gasket 17x24x1mm
GMA0107	3*20mm wrench bolt	GM60029	Drive shaft 128mm
GMA0109	3*30mm wrench bolt	GM60029	Drive shaft 88mm
GMA0117	4*15mm wrench bolt	GM60030	Input shaft 26mm
GMA0127	3*4mm socket set screw	GM60031	Lower link M4x6.8x105mm
GMA0131	3*10mm socket set screw	GM60032	Panhard rod 133mm
GMA0133	3*15mm socket set screw	GM60033	Pin 1.5x7.2mm
GMA0134	3*20mm socket set screw	GM60034	Servo saver spring 9.8x9.5mm
GMA0144	4*15mm socket set screw	GM60035	Shift spring 4.2x13mm
GMA0145	4*20mm socket set screw	GM60036	Slipper disk 33x1mm
GMA0153	M2.5 nut	GM60037	Slipper pad
GMA0154	M3 nut	GM60038	Slipper shaft 74mm
GMA0156	M3 nylon lock nut	GM60039	Slipper spring 8.5x12mm
GMA0157	M4 nylon lock nut	GM60040	Steering rod M4x6.8x155mm
GMA0158	3mm washer	GM60040	Steering rod M4x6.8x117mm
GMA0159	4mm Washer	GM60041	Straight drive shaft 155mm
GMA0160	2mm E-Ring	GM60041	Straight drive shaft 115mm
GMA0161	2.5mm E-Ring	GM60042	Transfer fork shaft 58mm
GMA0162	4mm E-Ring	GM60043	Transfer output rear shaft 40mm
GMA0163	Ball bearing 5x8x2.5mm	GM60043	Transfer output front shaft 27mm
GMA0165	Ball bearing 5x11x4mm	GM60044	Transmission fork shaft 78mm
GMA0166	Ball bearing 6x12x4mm	GM60046	Universal joint
GMA0167	Ball bearing 10x15x4mm	GM60046	Universal drive coupler
GMA0168	3*1 O-Ring	GM60046	Universal cross pin
GMA0169	P3 O-Ring	GM60047	Wheel axle shaft 35mm
GMA0170	P5 O-ring	GM60048	GOM body panel (Clear)
GMA0171	S9 O-Ring	GM60049	GOM bonnet (Clear)
GMA0172	3*18mm round head wrench bolt	GM60050	Transmission output shaft 128mm
GMA0173	3*45mm wrench bolt	GM60051	GOM decal sheet
GM0020007	XD 103mm shock shaft	GM60053	GOM interior cockpit (Clear)
GM0020008	Shock cartridge part tree	GM60054	Gmade sponsor decal sheet
GM0020014	XD 103mm Shock body	GM60055	S85 O-ring
GM0020016	Molded aeration shock cap		
GM0020017	Aeration screw		
GM0020020	Shock delrin piston		

